


Curved Counter Connector Set-up Instructions

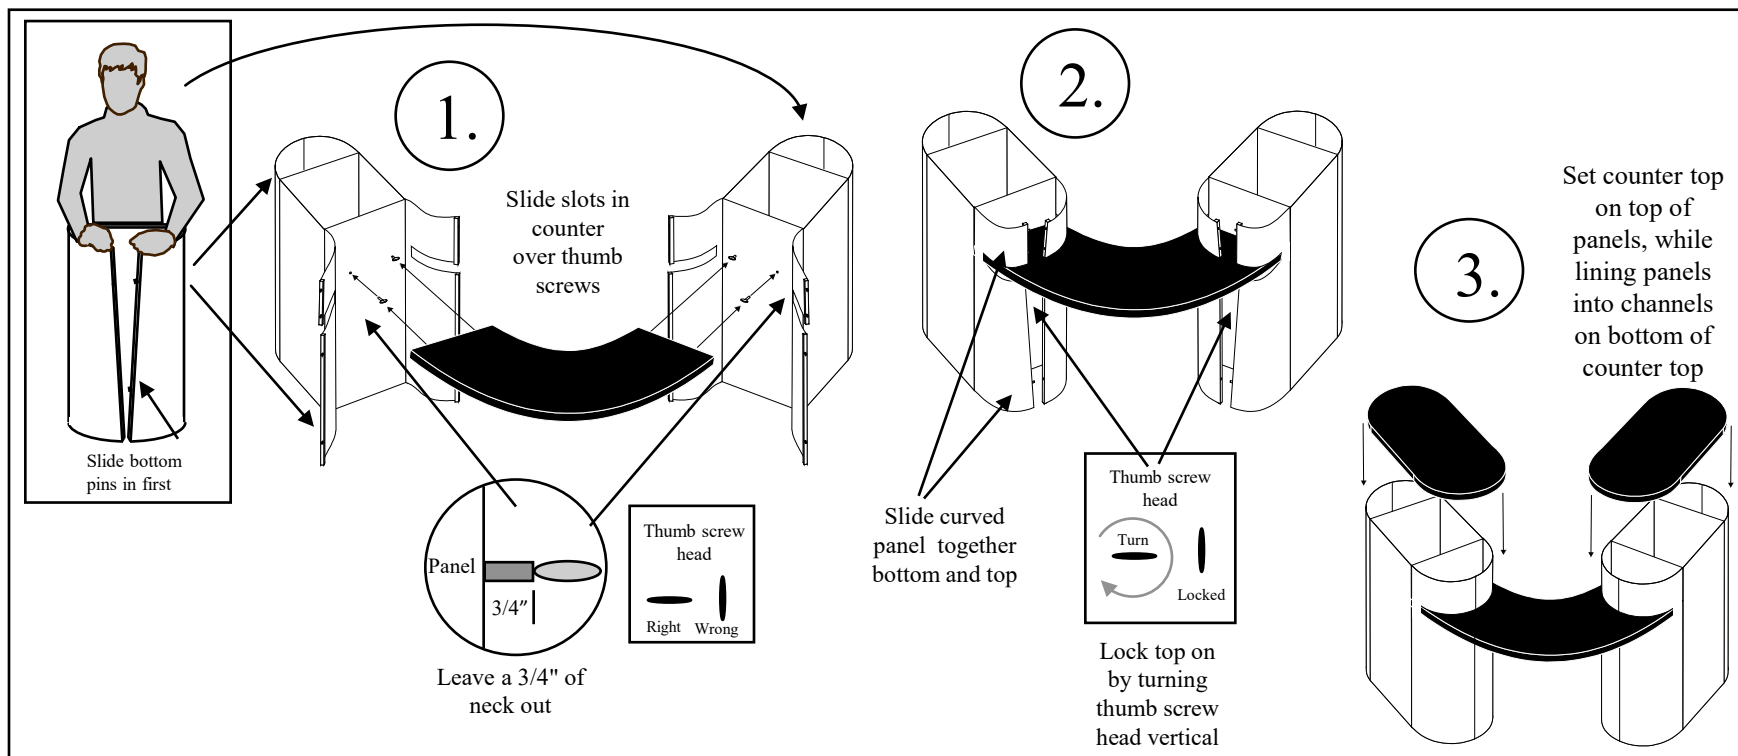

1.

Stand and align both 4-panel section with flex panels in a square. From behind connect the flexible panels by guiding the pins into the receiving holes (align bottom hole then top). Insert thumb screws into panels with threaded holes. Thumb screw heads should be horizontal and 3/4" of the neck showing. Then slide slots in curved counter over thumb screws.

2.

Lock curved counter top on by turning thumb screws vertical. Then connect the flexible panels around curved counter top by guiding the pins into the receiving holes.

3.

Set counter tops on top of panel sections, while lining panels into channels on bottom of counter tops.