



✱ Counter Top Lock

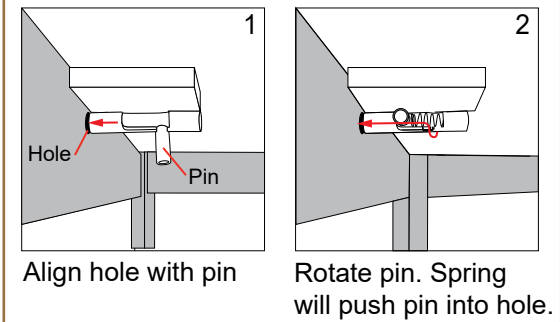

Wire Management

- 1) Run cords through PR63 plastic conduit.
- 2) Attach conduit by pinching the opening & inserting into the groove of extrusion.






Keep conduit attached to [8] when packing.

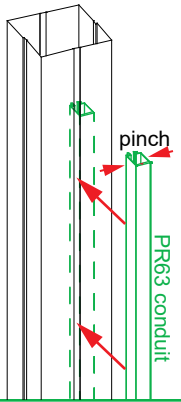

Item	Qty.	Description
1	1	38" GS210 Vertical Extrusion
2	1	38" S30 Vertical Extrusion
3	1	38" S30 Vertical Extrusion
4	2	18.8496" Z45 Curved Extrusion
5	1	21.7196" Z45 Curved Extrusion
6	2	18.8496" Z45 Curved Extrusion
7	1	21.7196" Z45 Curved Extrusion
8	1	36" S44 Vertical Extrusion


Steps:

- 1) Attach horizontals [4,4,5] between verticals [1,2,3]
- 2) Slide floor between verticals [1,2,3] to rest on [4] and [5].
- 3) Insert pins into [1,2,3] where shown.
- 4) Slide shelf between [1,2,3] to rest on pins.
- 5) Slide infill between [2] and [3].
- 6) Attach horizontals [6,6,7] between [1,2,3] to secure infill.
- 7) Lock counter top to [6]. See Counter Top Lock detail.
- 8) Attach vertical [8] to counter top, using bolt.
- 9) Attach monitor mount to [8]. See Monitor Mount detail.
- 10) Attach monitor to mount, then route monitor cord through conduit. See Wire Management detail.

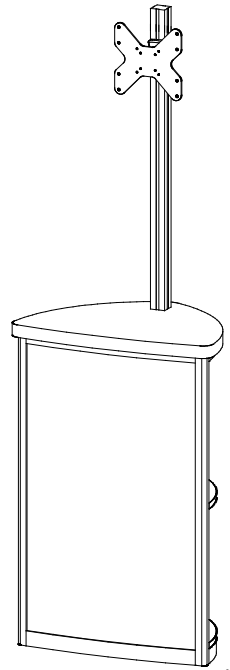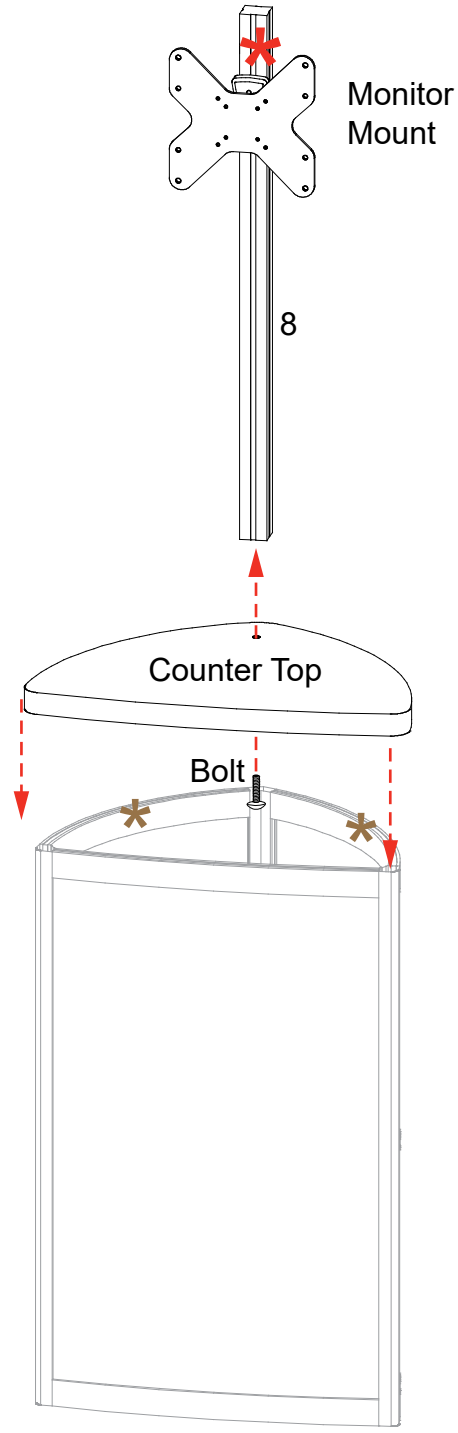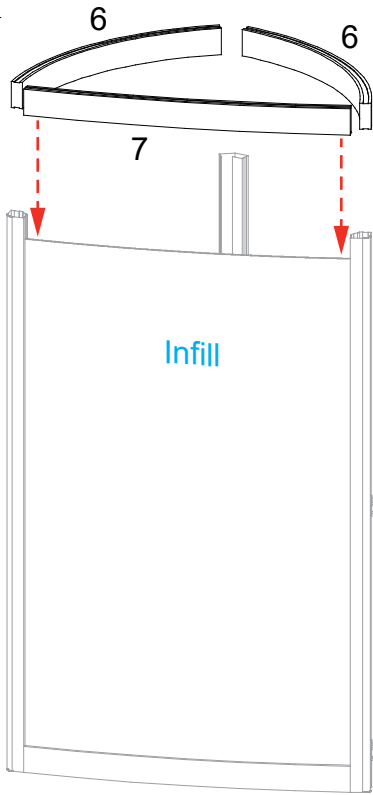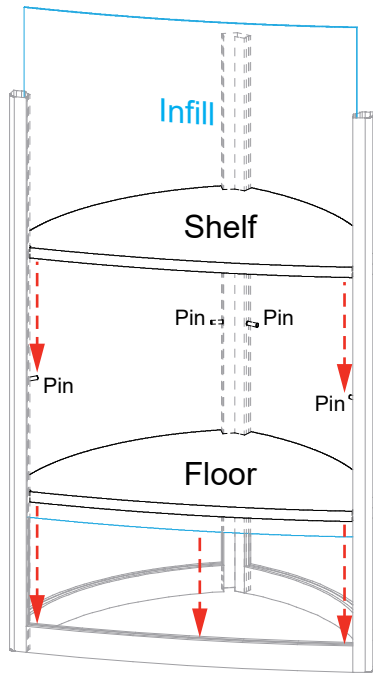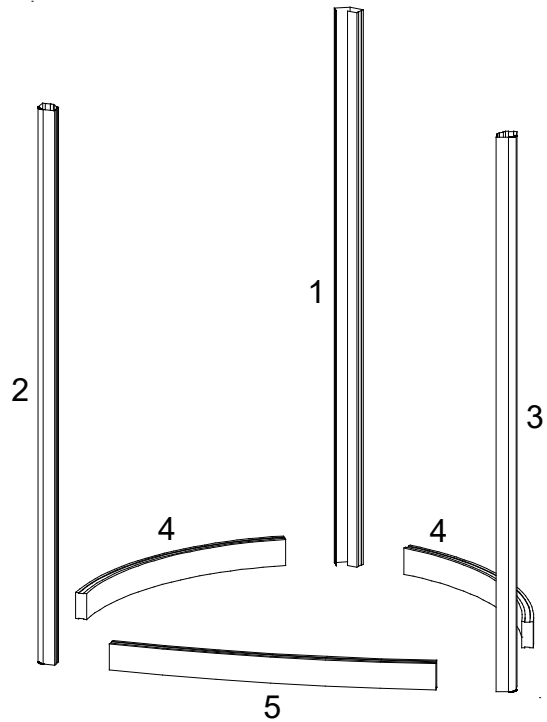

Completed Assembly

✱ Monitor Mount Attachment

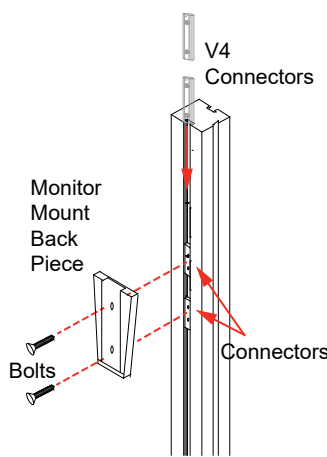

Slide V4 Connectors into groove of Extrusion. Tighten Set Screws to secure connectors in place.

Attach Monitor Mount back piece to Extrusion, using bolts.

Then slide monitor mount into back piece.



SETUP INSTRUCTIONS

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

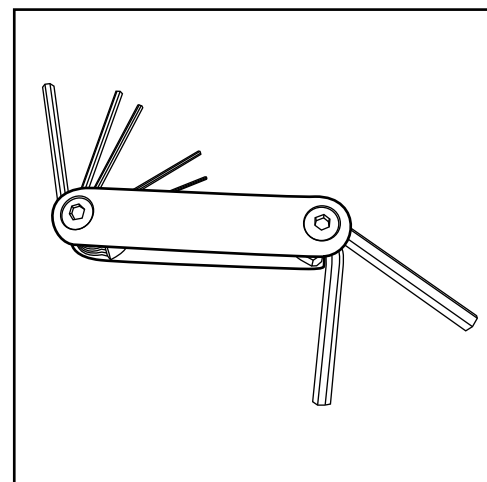


Hex Tool - Essential for Assembly

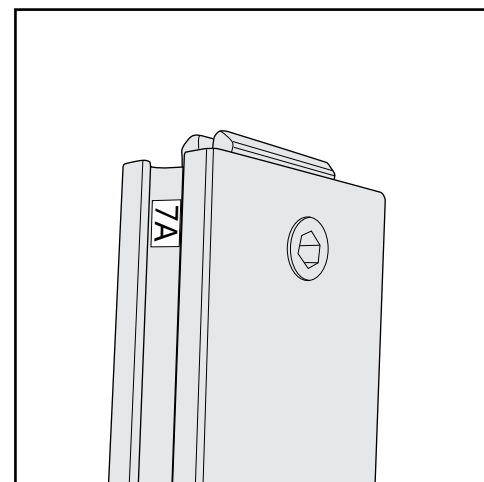


Part Identification - Numbering

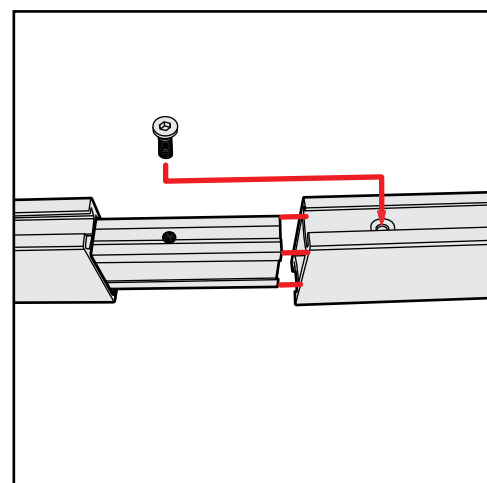


Spline Connection

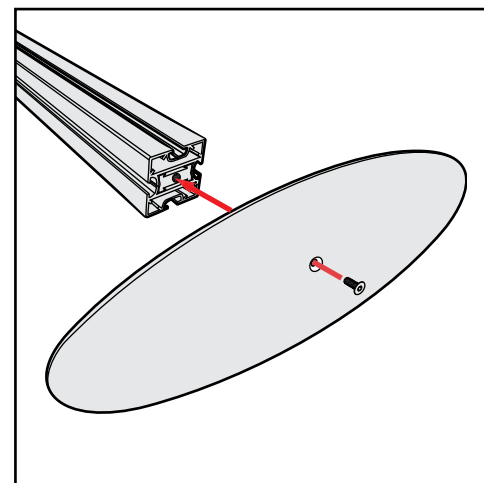

Base Plate & Extrusion Connection

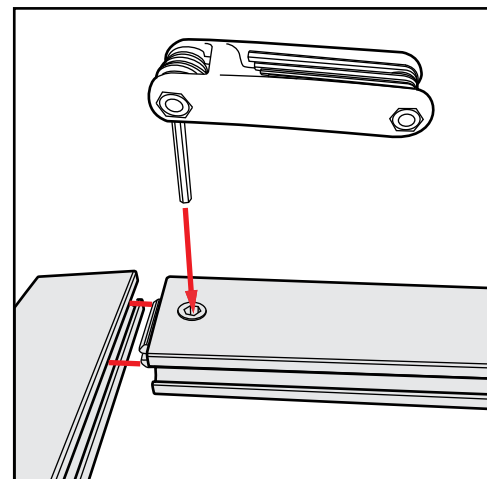

Extrusion & Lock Connection

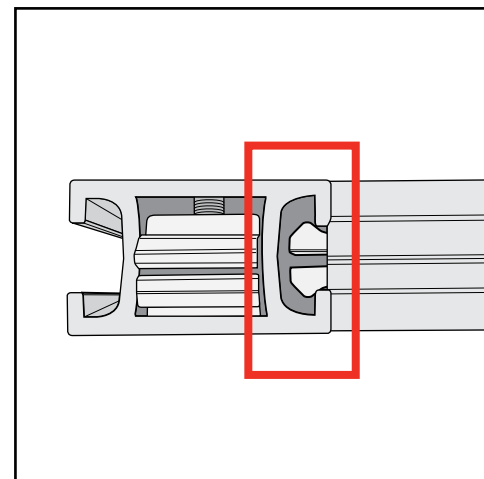


Engaged Lock



WARNING



DO NOT USE POWER TOOLS

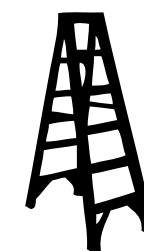

LADDERS OR LIFTS
MAY BE REQUIRED



ALL CONNECTIONS MUST
BE TIGHTLY SECURED