




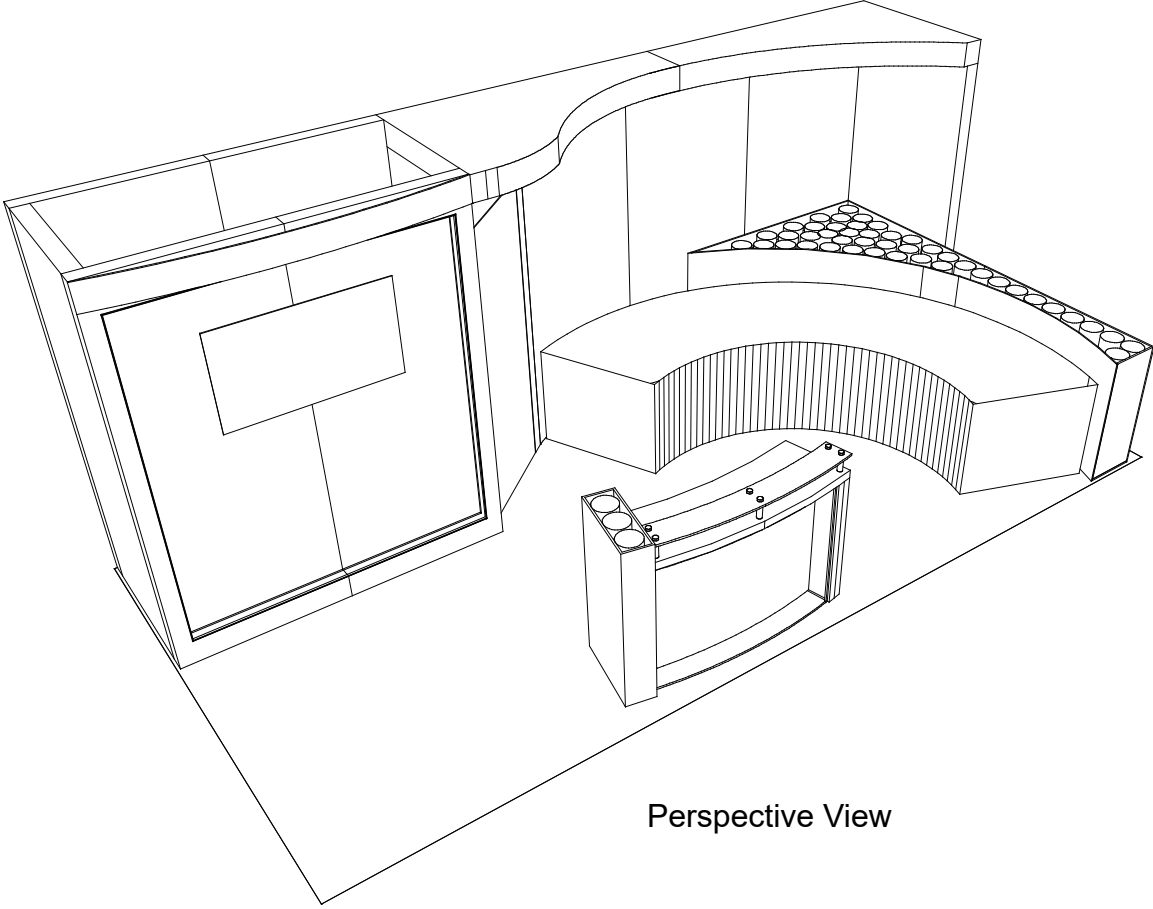

Perspective View

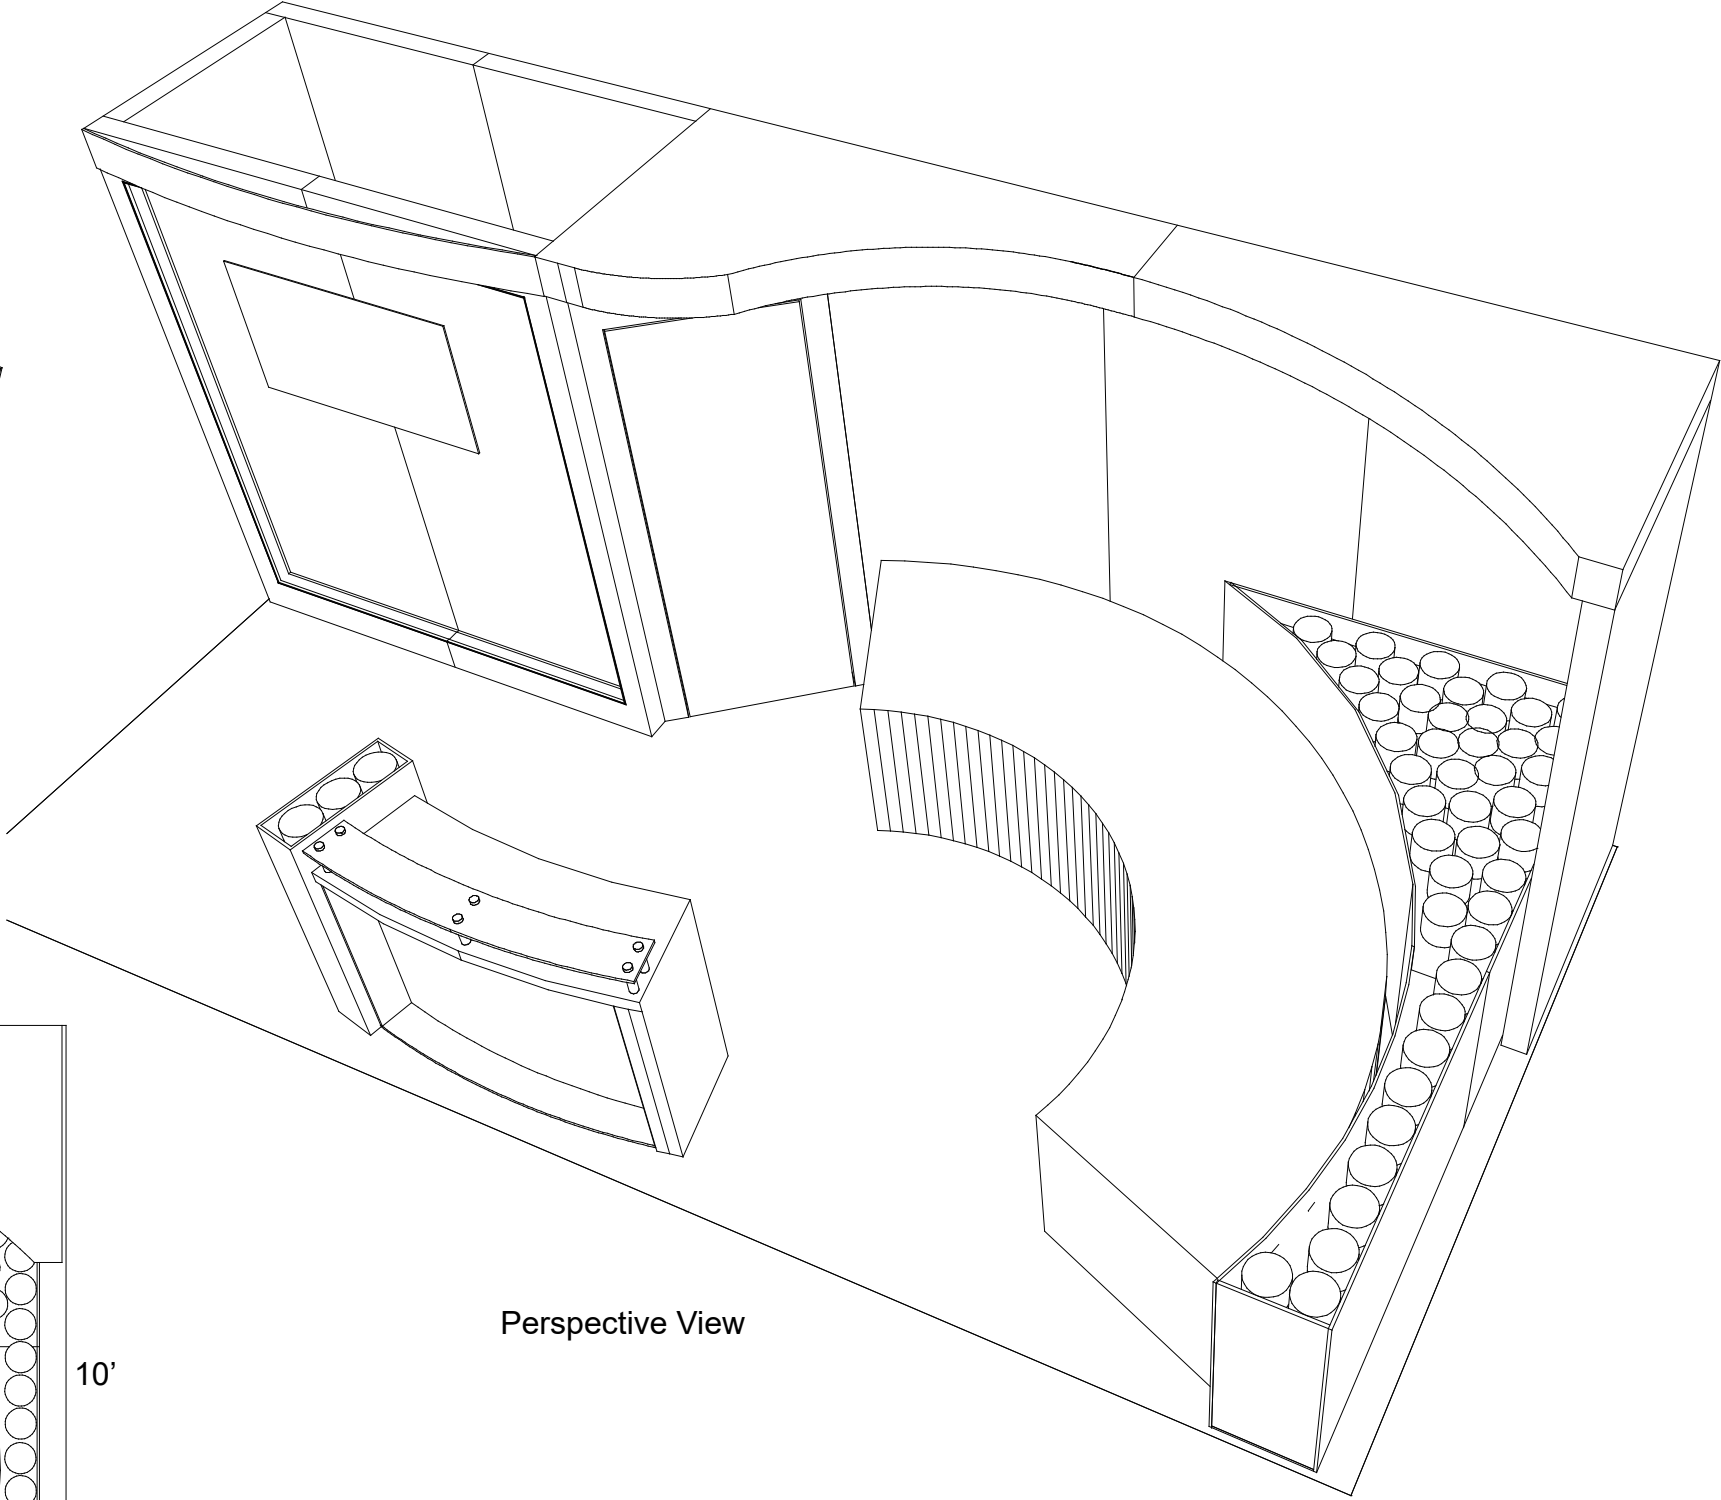

Perspective View

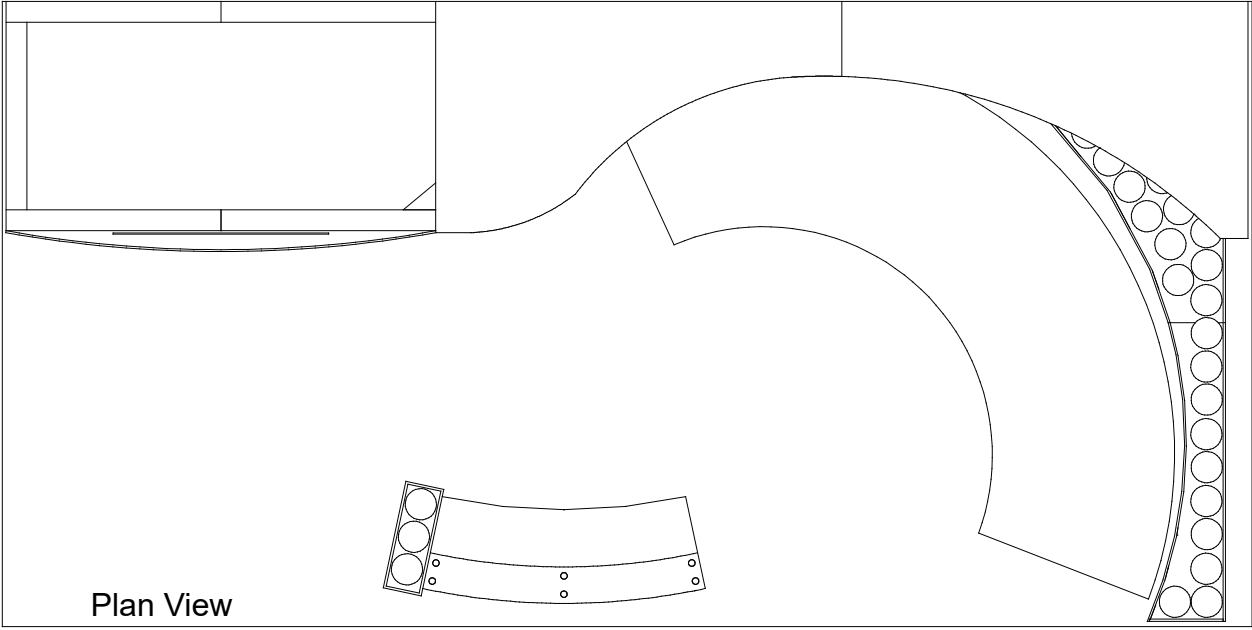


Plan View

20'

10'

SETUP INSTRUCTIONS

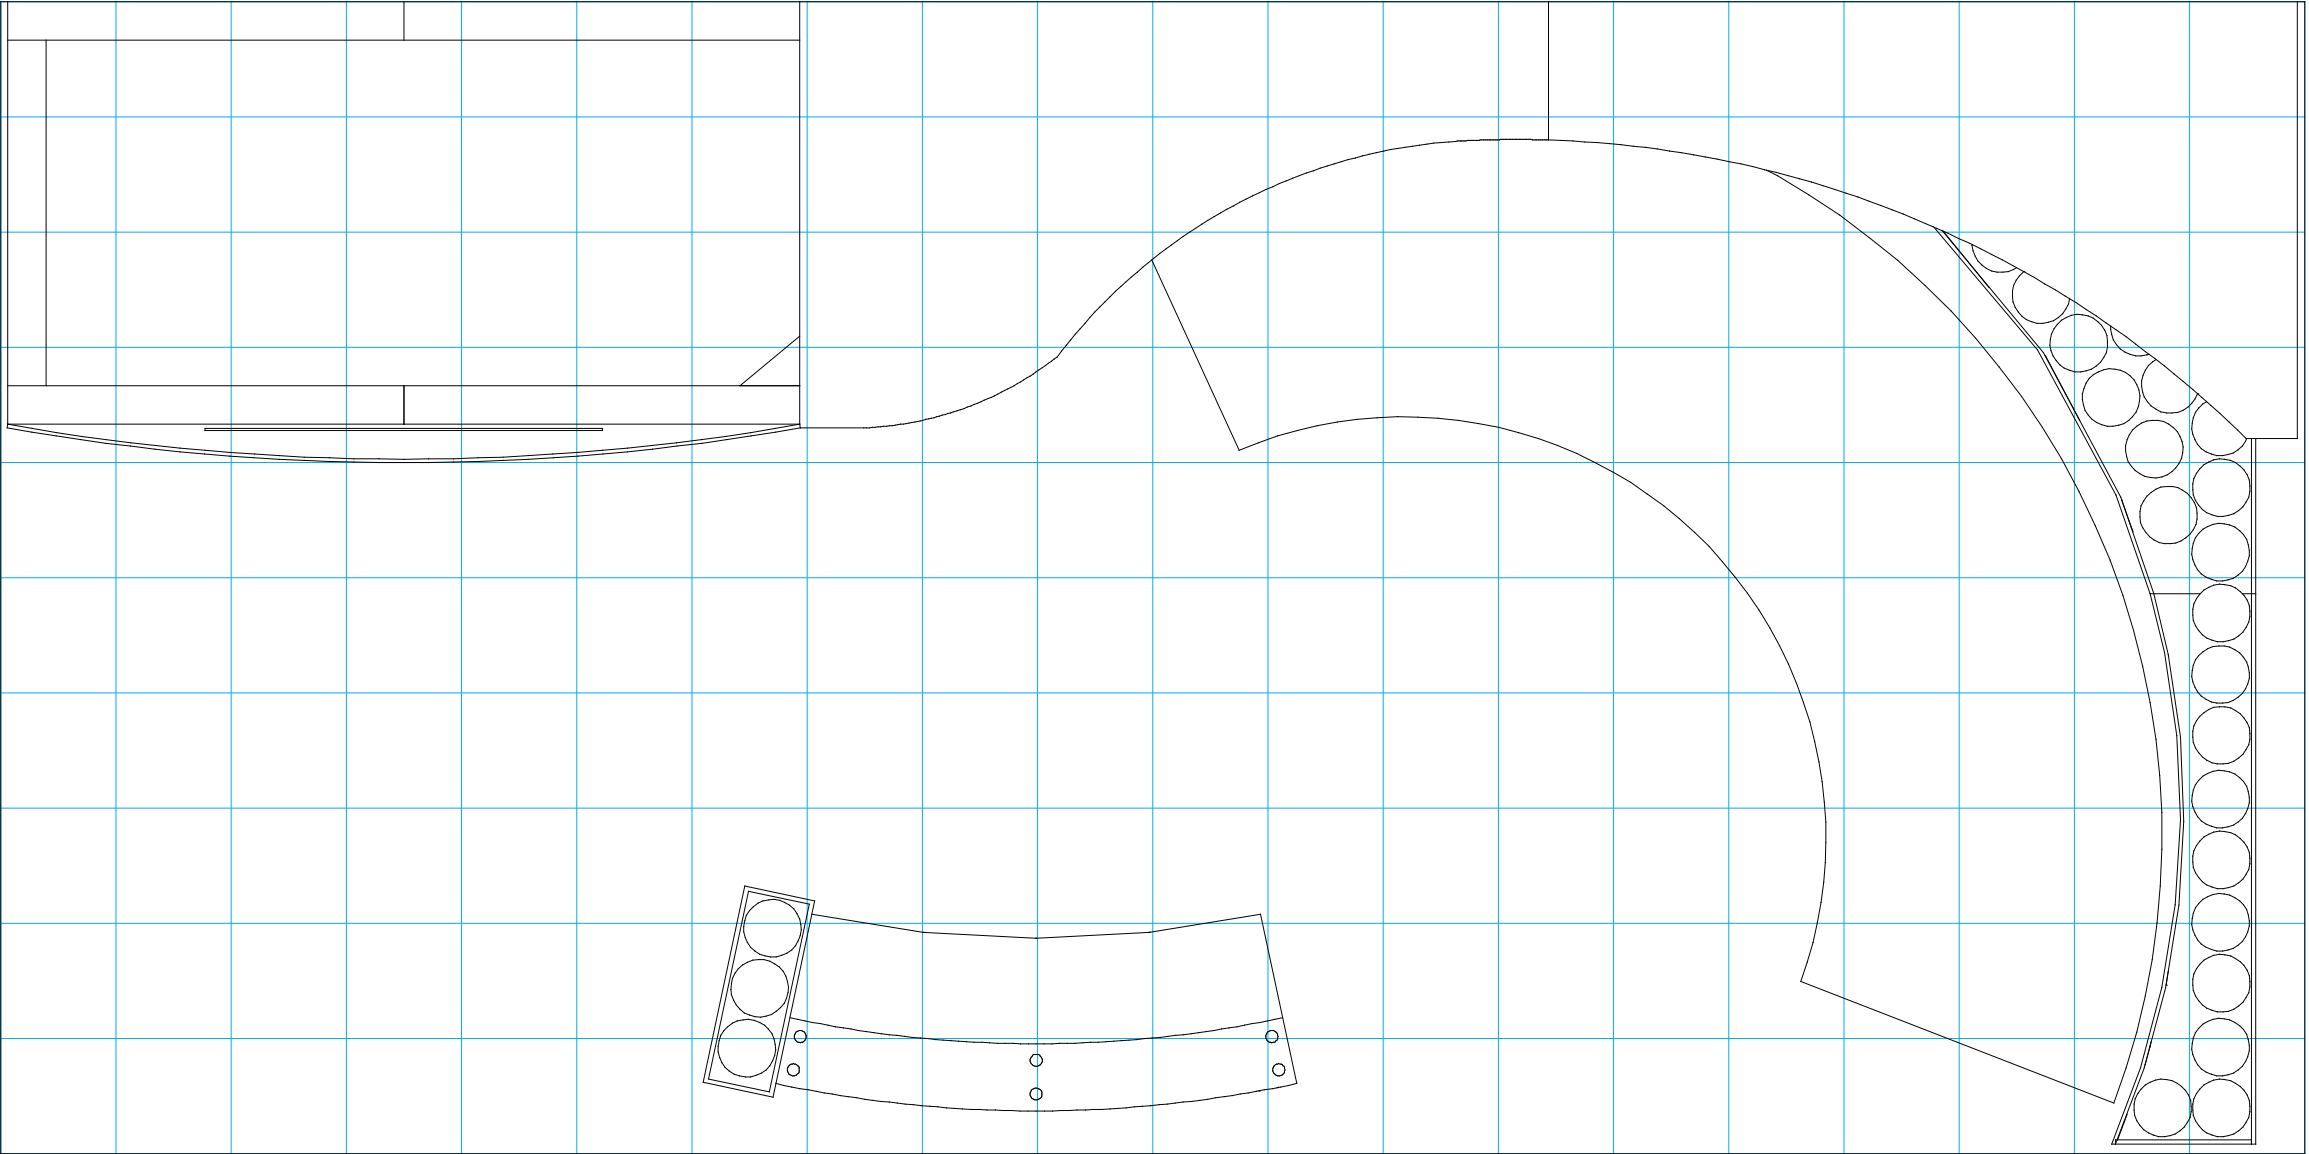

= 1 sq foot

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

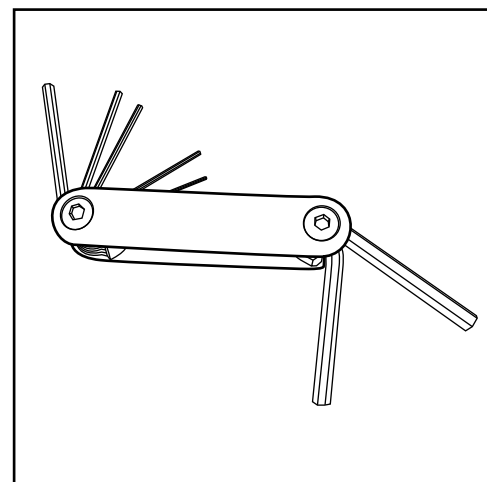


Hex Tool - Essential for Assembly

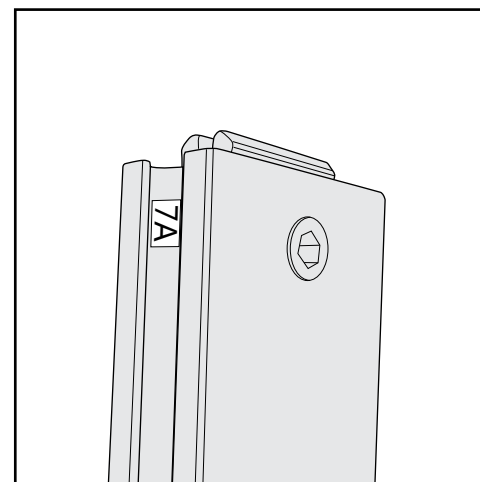


Part Identification - Numbering

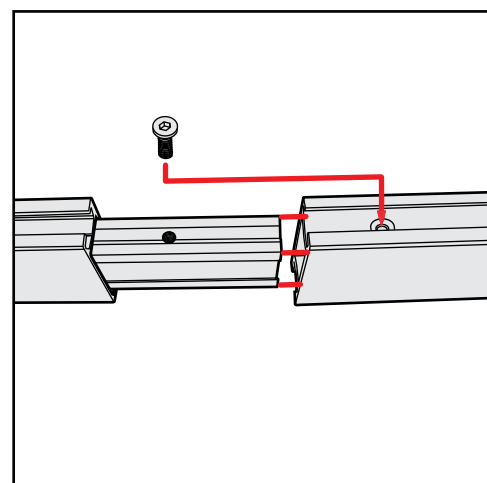


Spline Connection

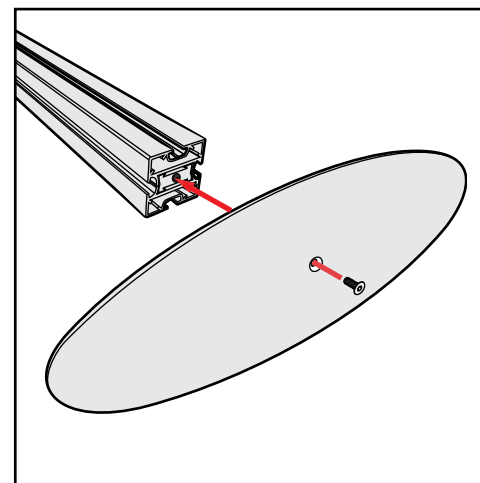

Base Plate & Extrusion Connection

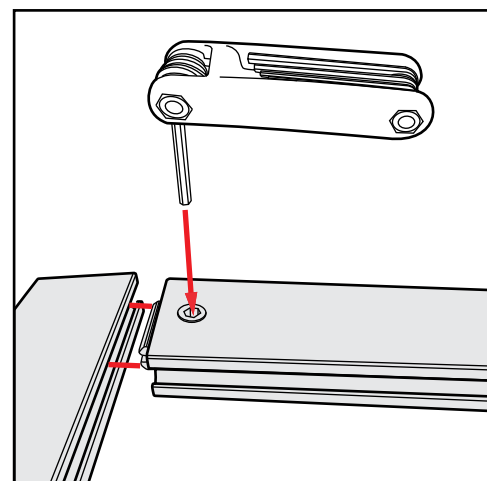


Extrusion & Lock Connection

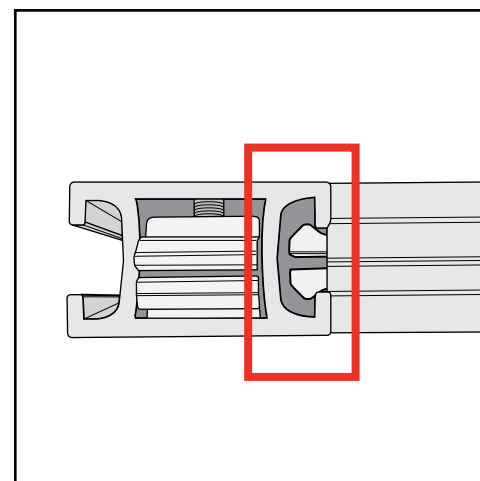

Engaged Lock



WARNING

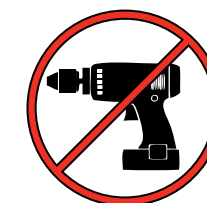

DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED




ALL CONNECTIONS MUST
BE TIGHTLY SECURED


SEG Graphic Installation *in 3 Steps*

The Perfect Fit


STEP 1: Attach Corners

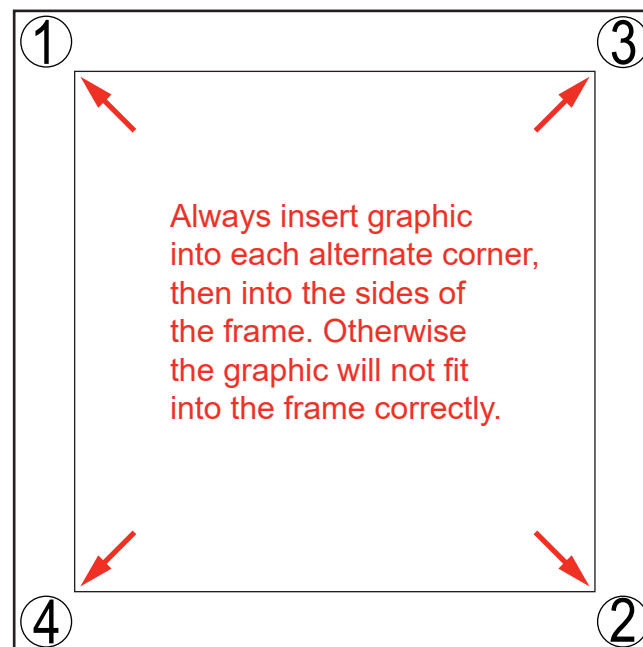

STEP 2: Attach Middle

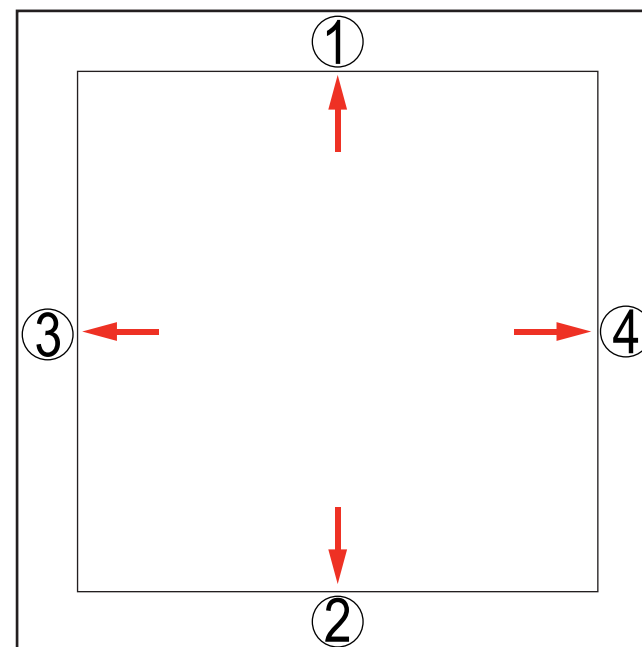

STEP 3: Attach Sides

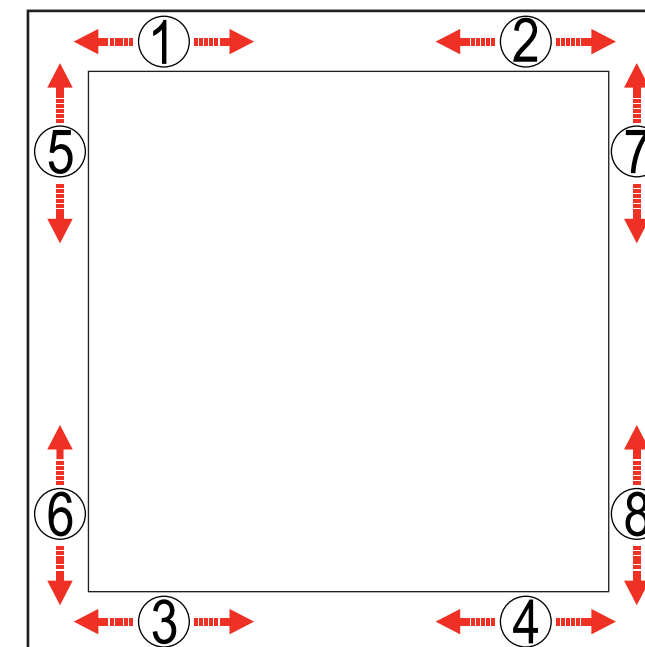

Insert narrow side of silicone welt into the channel at corner 1, with fabric to the outside.

Repeat for opposite corner 2, then corner 3, then corner 4.

Once corners are attached, press the middle of edge 1 into the channel. Then press middle of edge 2 into the channel on opposite side.

Repeat with edge 3 & 4.

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location 1. Repeat the process between center and corner at location 2.

Do the same for welt on opposite side, at locations 3 & 4. Then repeat for locations 5 & 6 and 7 & 8.

Once the welt is fully inserted on all sides, smooth out edges as needed for a perfect fit.



To remove the graphic from the frame, locate the fabric **pull tab**. Gently pull on the tab to remove the graphic.

Install video:



CRATE PACKING



© 2026

Order #XXXXX Crate Packing

CRATE PACKING




© 2026



Order #XXXXX Crate Packing

CRATE PACKING



- Steps:
- 1) Connect panels together using custom cam locks as shown. Refer to detail.
 - 2) Join panel [A & B] together with vertical narrow wood panel using bolts and wing nuts.

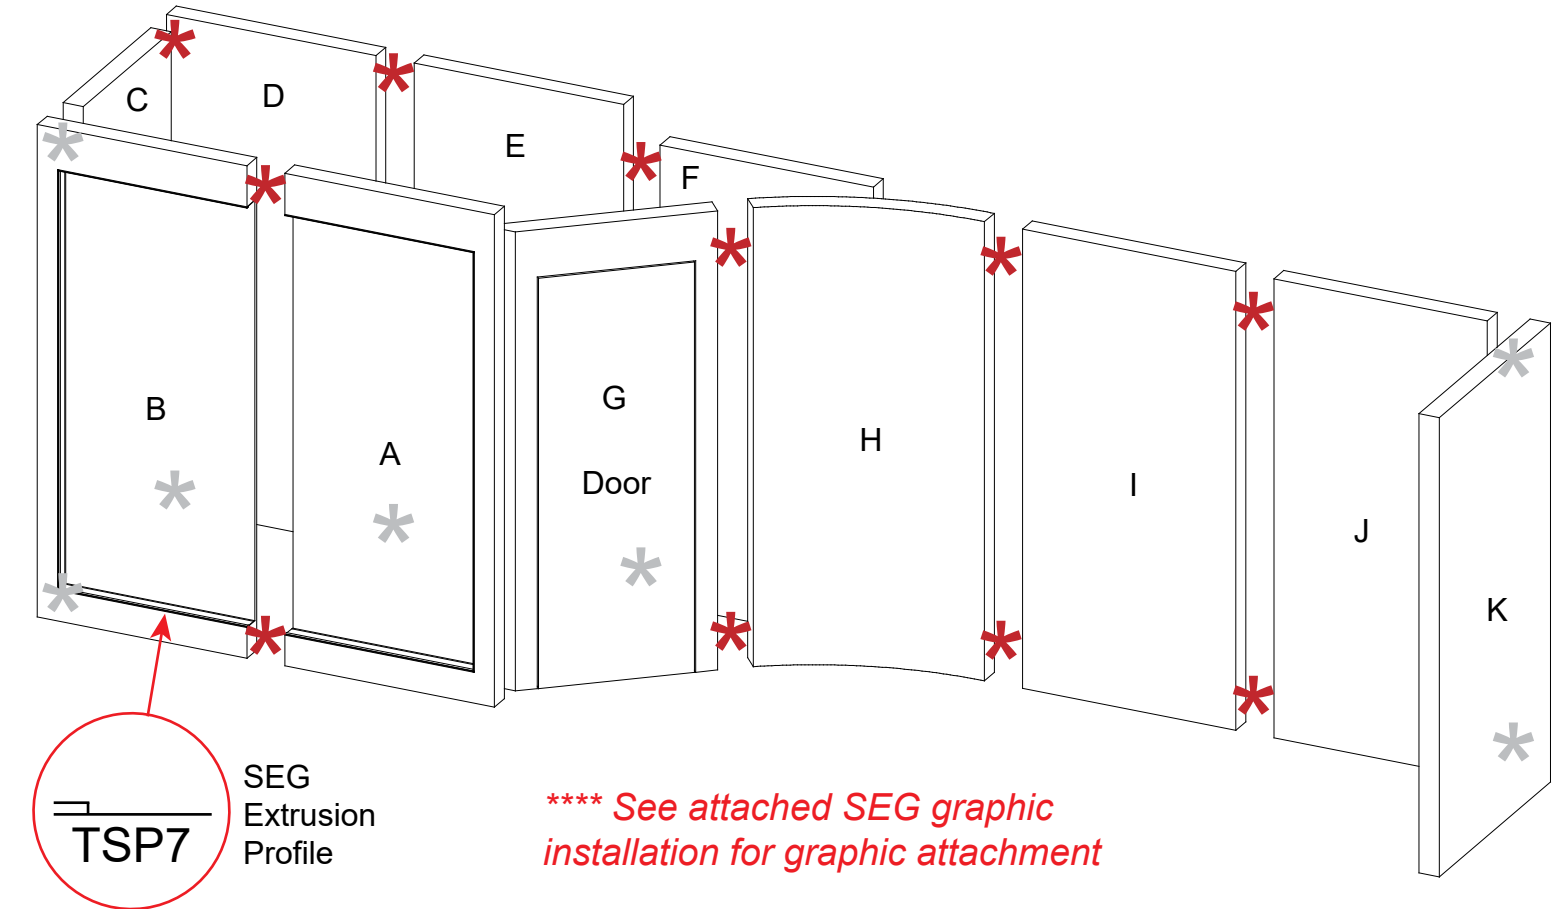


**** See attached SEG graphic installation for graphic attachment

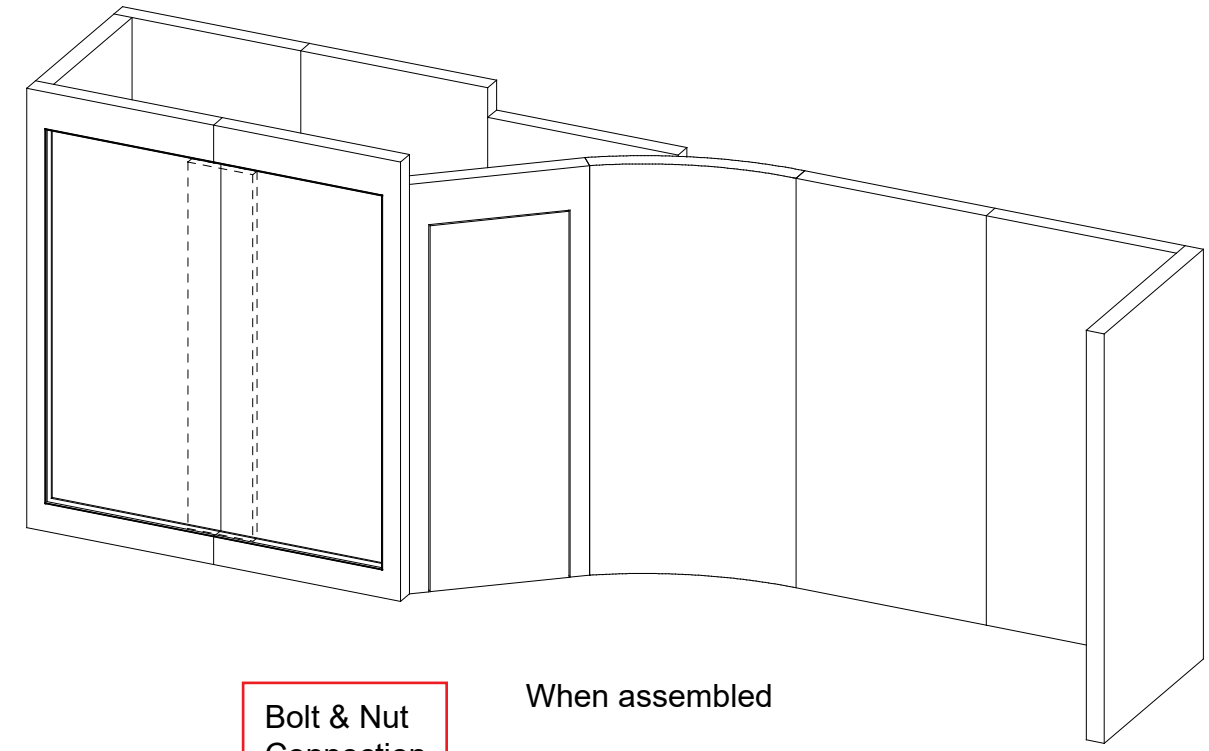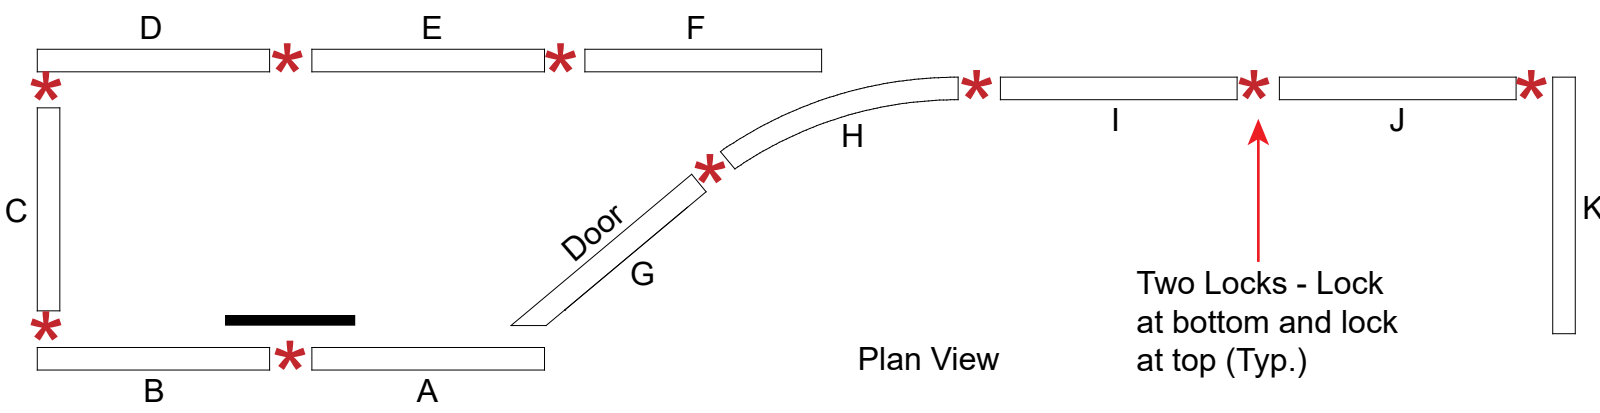

When assembled

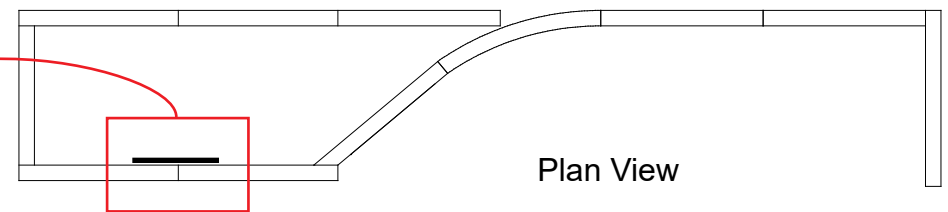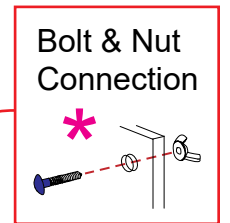

Plan View

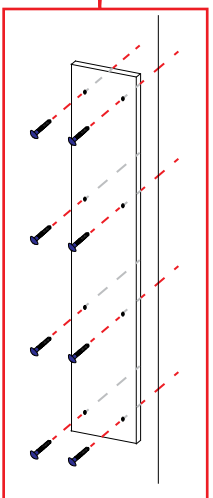

*** Custom Cam Lock Attachment**

Step#1

Hex Key Tool

Hole



Lock

Step#2


Hex Key Tool






Lock

Place hex tool in hole on side of panel and rotate to activate lock and attach panels together.

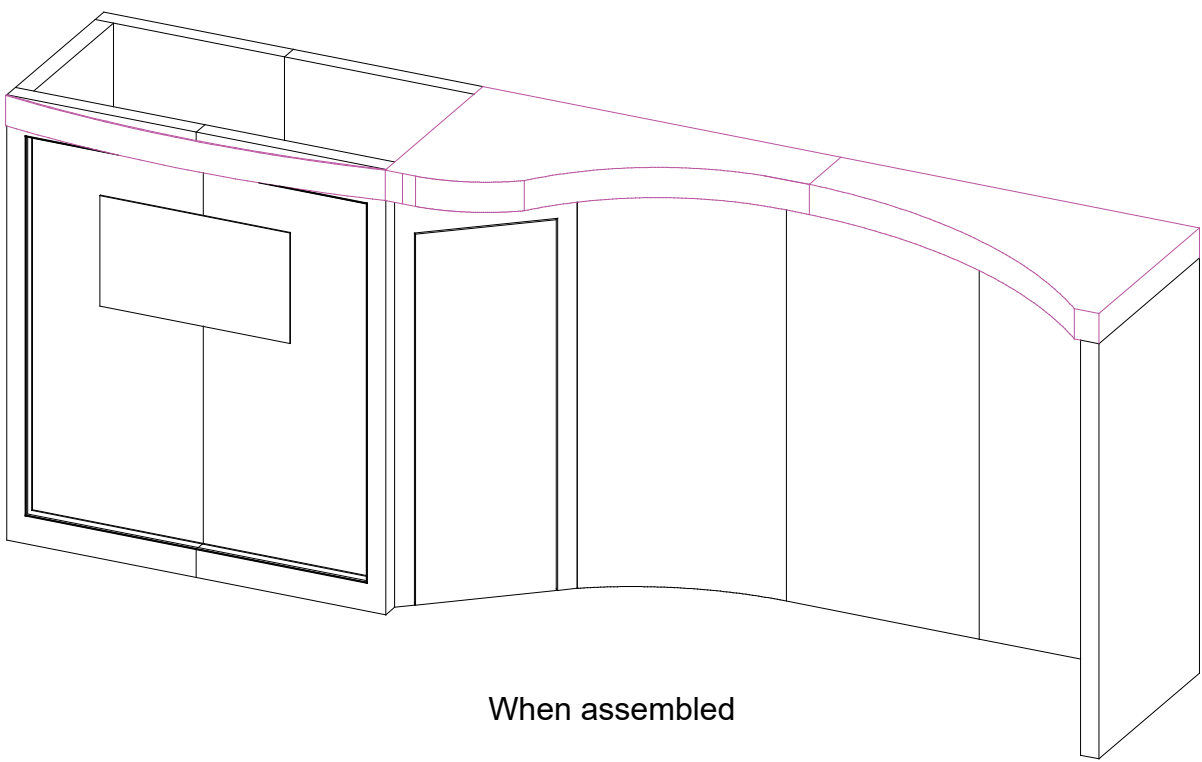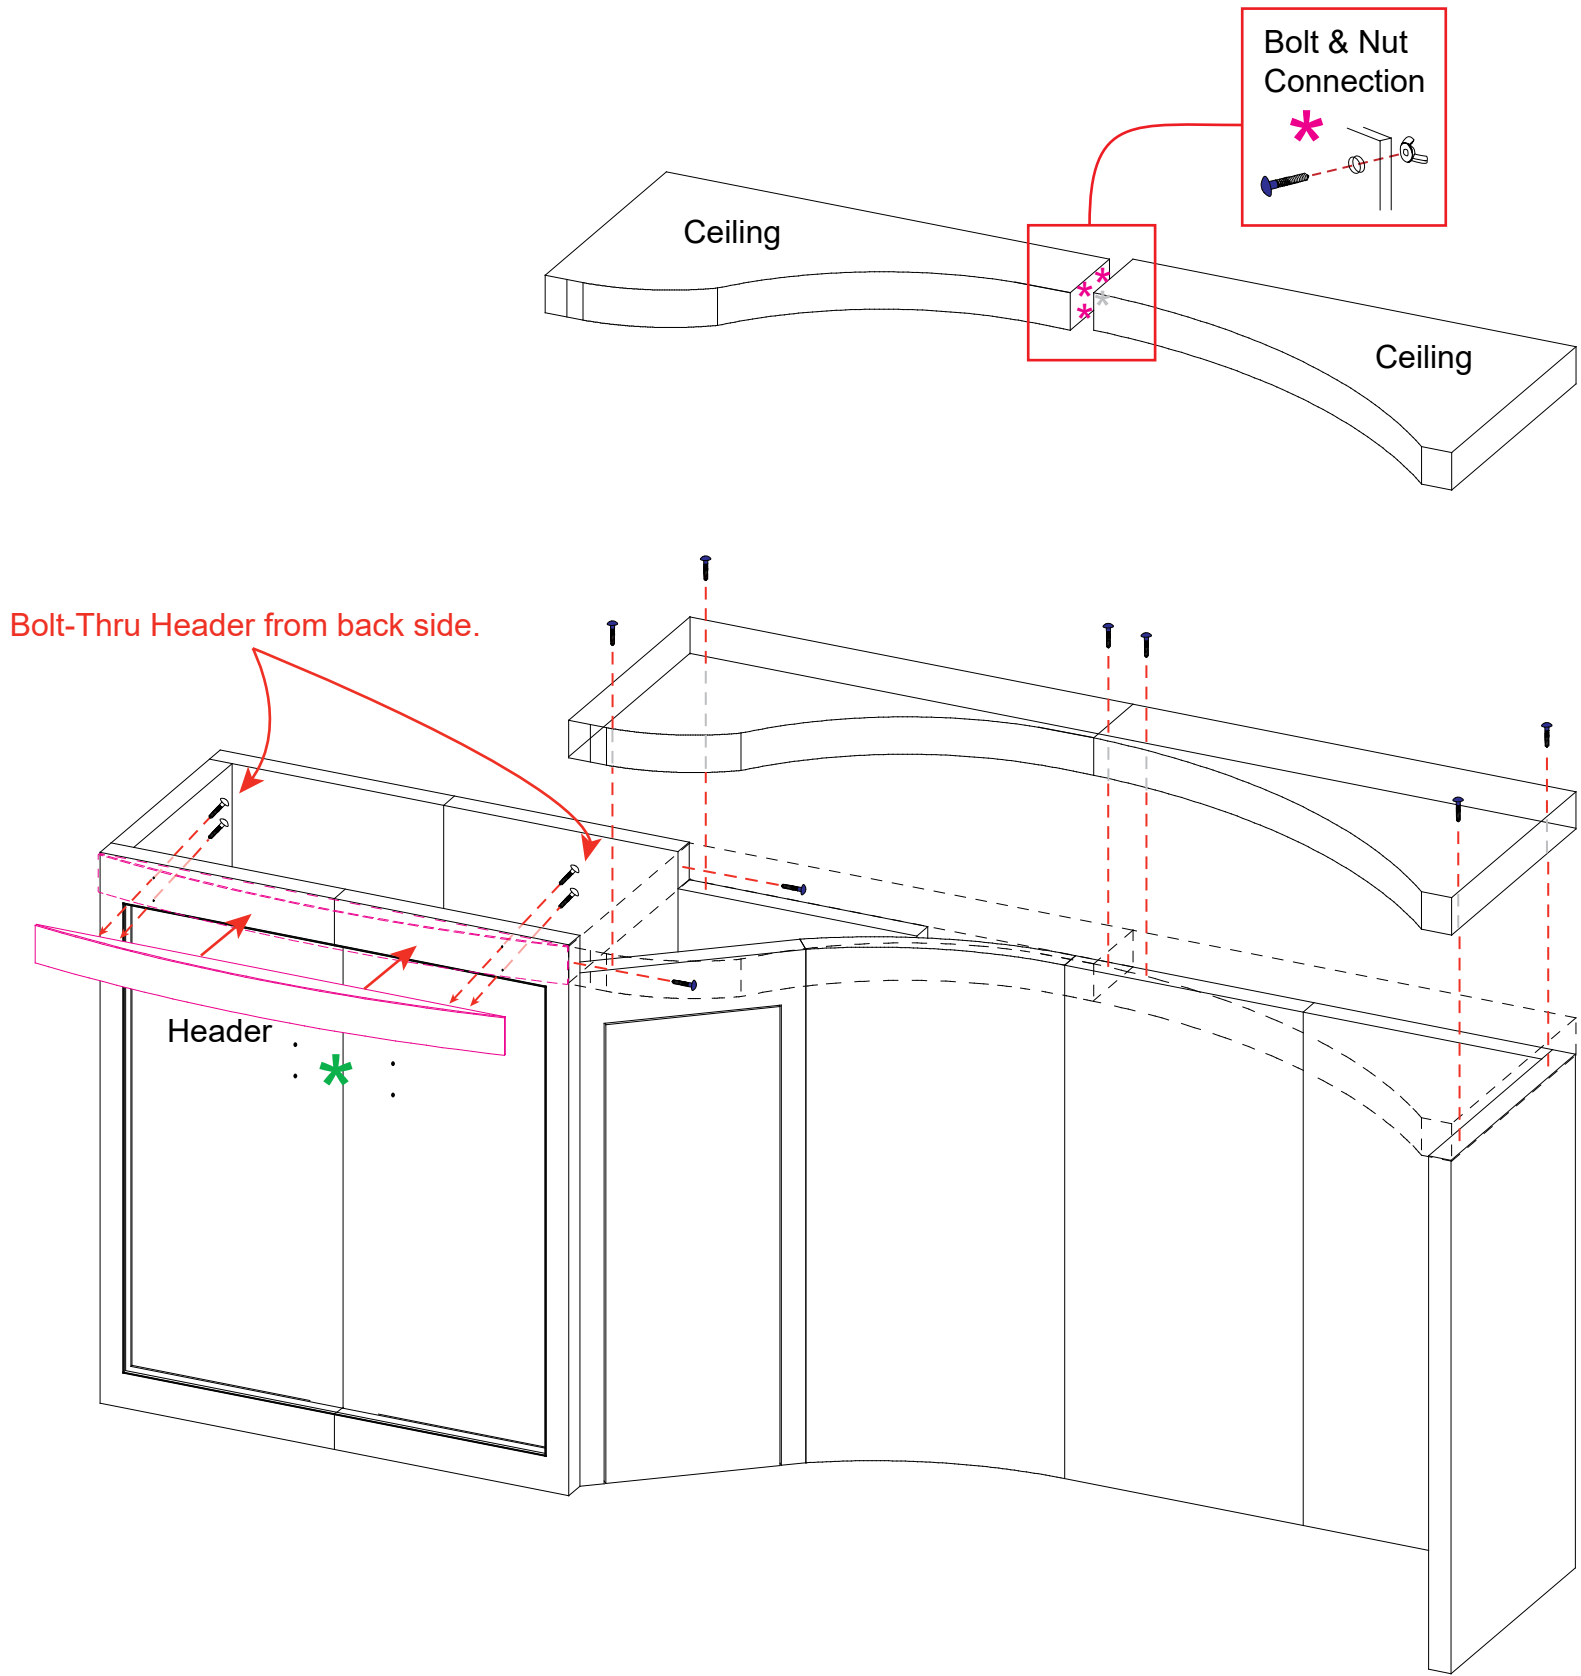







- Steps:
- 1) Connect ceiling pieces together using bolts and wing nuts. Refer to detail.
 - 2) Attach assembled ceiling atop assembled wall panels using bolts as shown.
 - 3) Attach header to assembled wall panels with metal plates using bolts.
 - 4) Attach monitor mount to backwall as shown. Refer to detail.

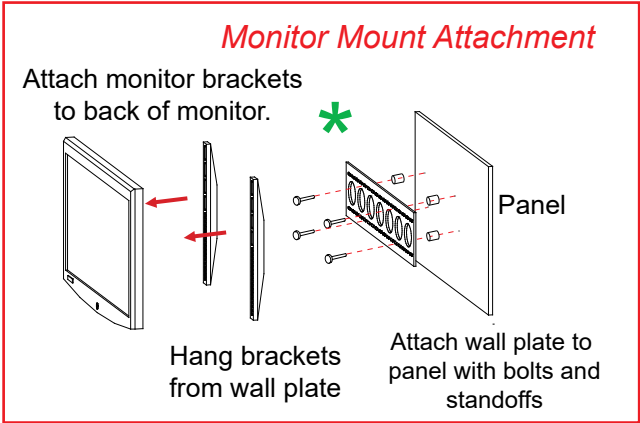

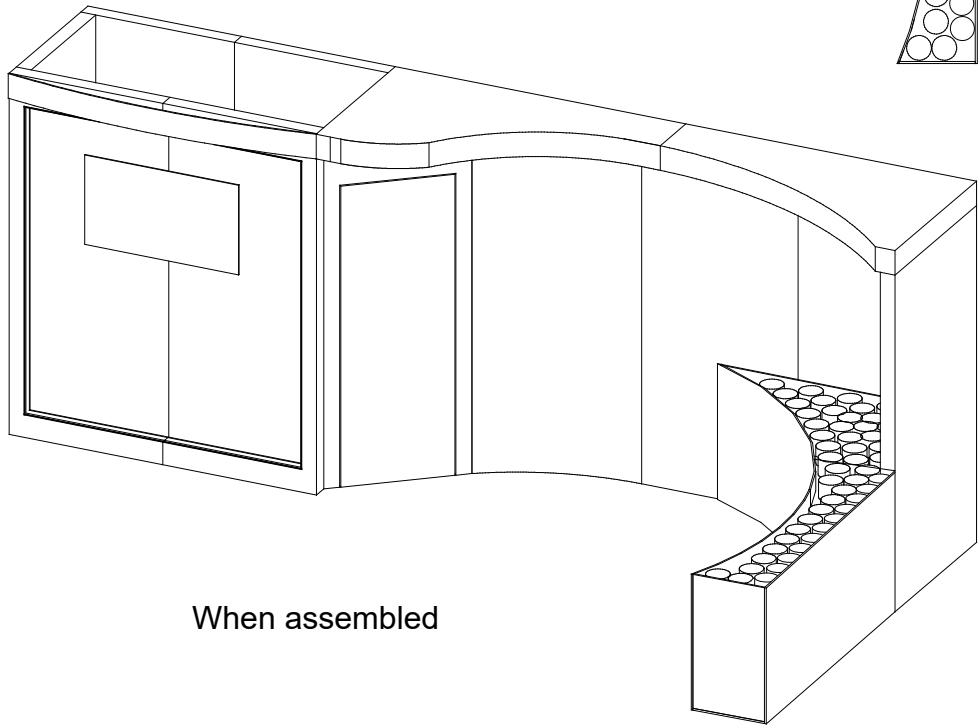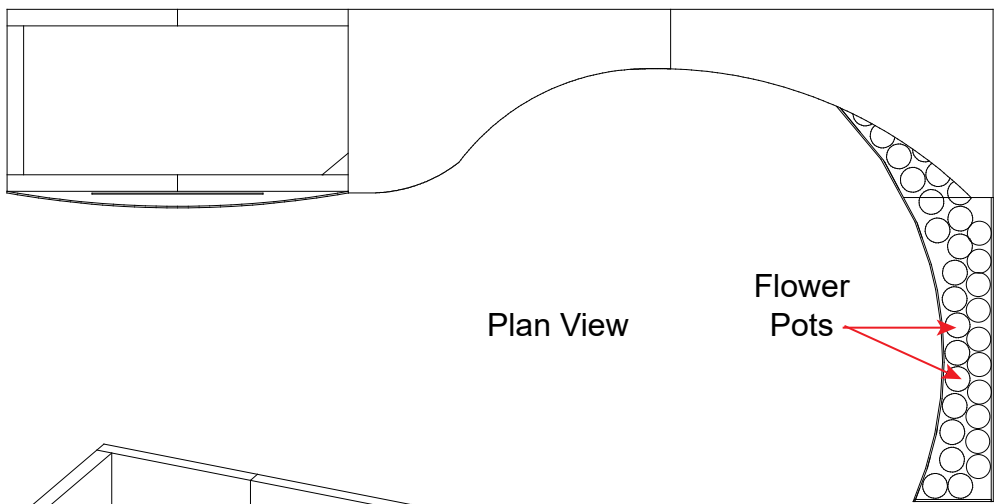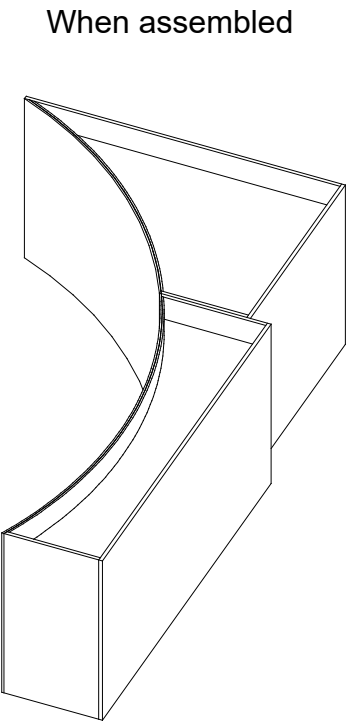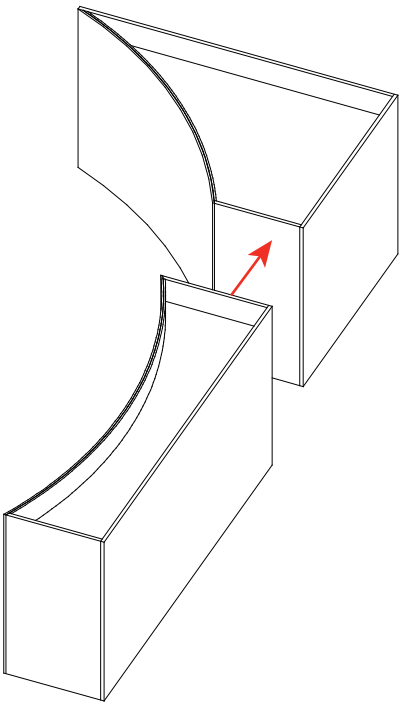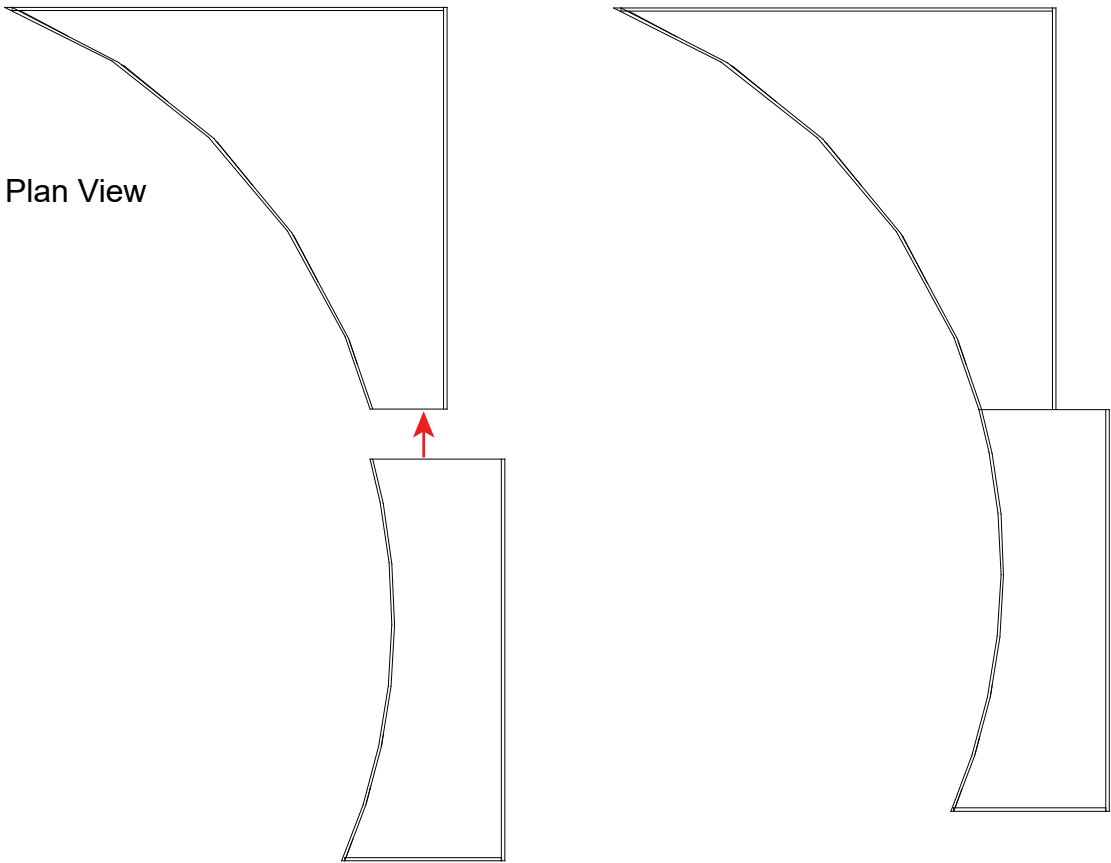

- Steps:
- 1) Rest assembled planter box against assembled backwall.
 - 2) Place flower pots inside assembled planter box as shown above.

NOTE: USE CAPS TO COVER LOCKS WHEN NOT IN USE

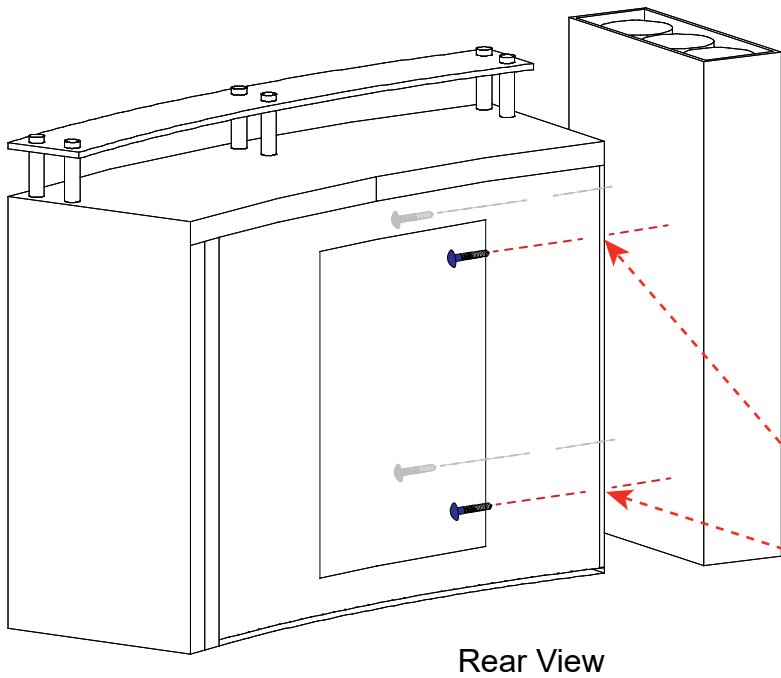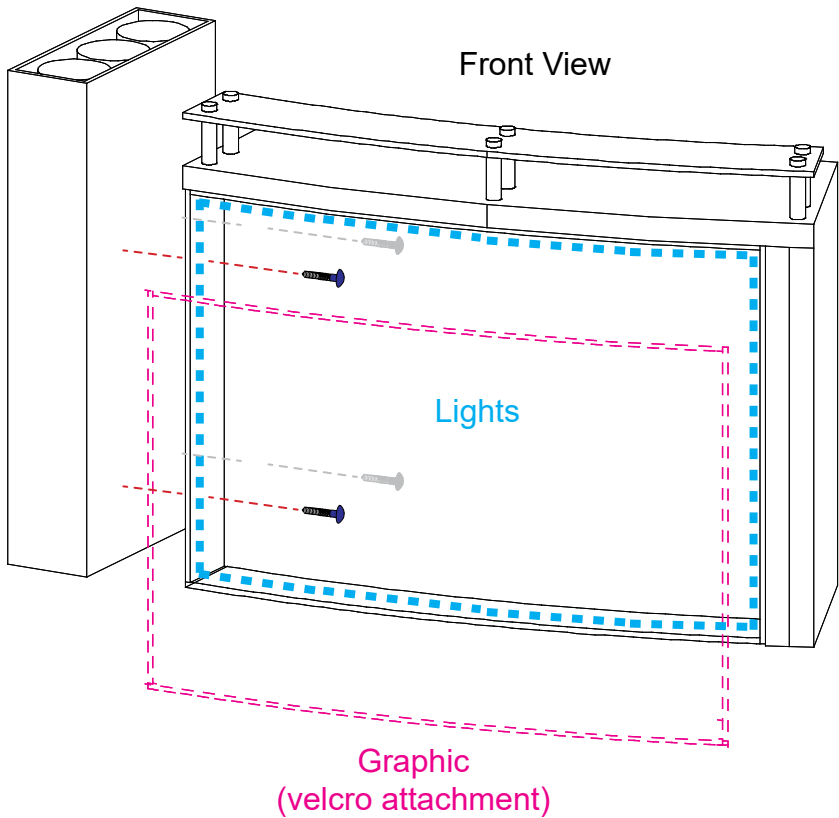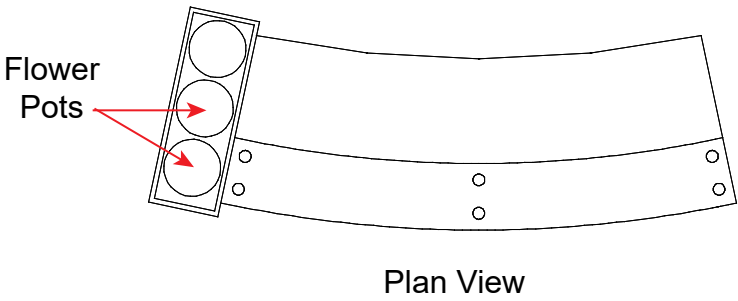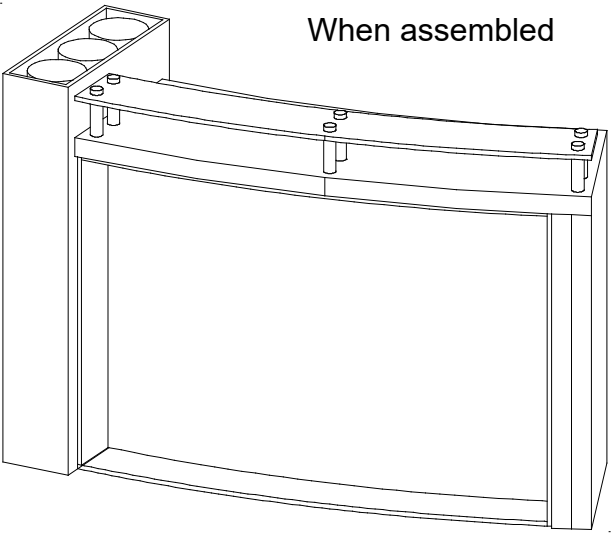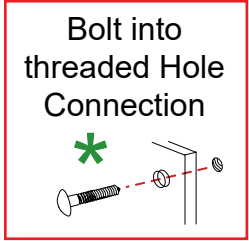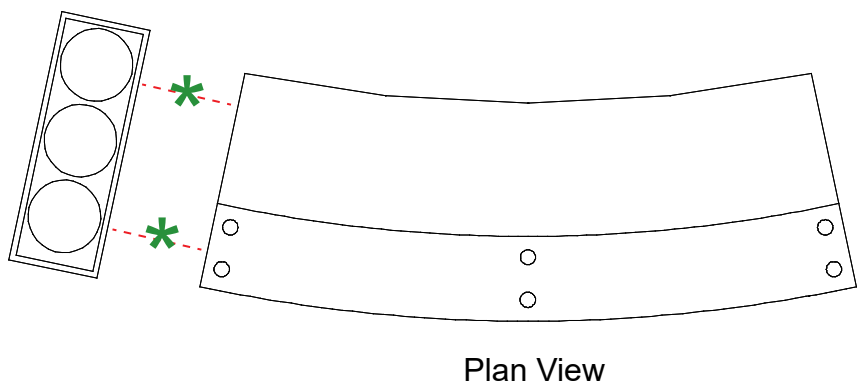

- Steps:
- 1) Connect two piece reception counter together using bolts. Refer to detail.
 - 2) Place flower pots atop assembled reception counter.
 - 3) Velcro attach graphic to front of reception counter.