

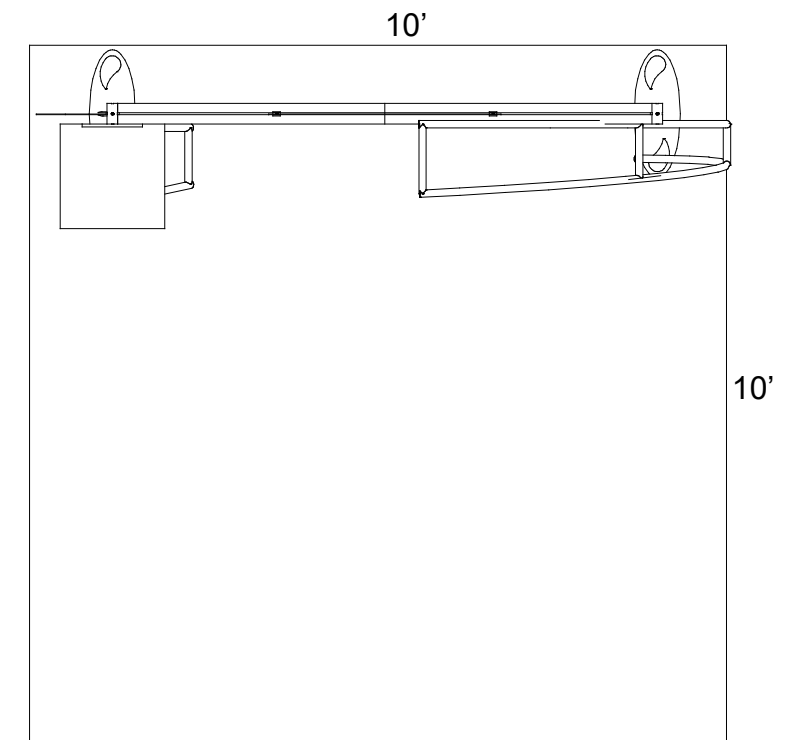


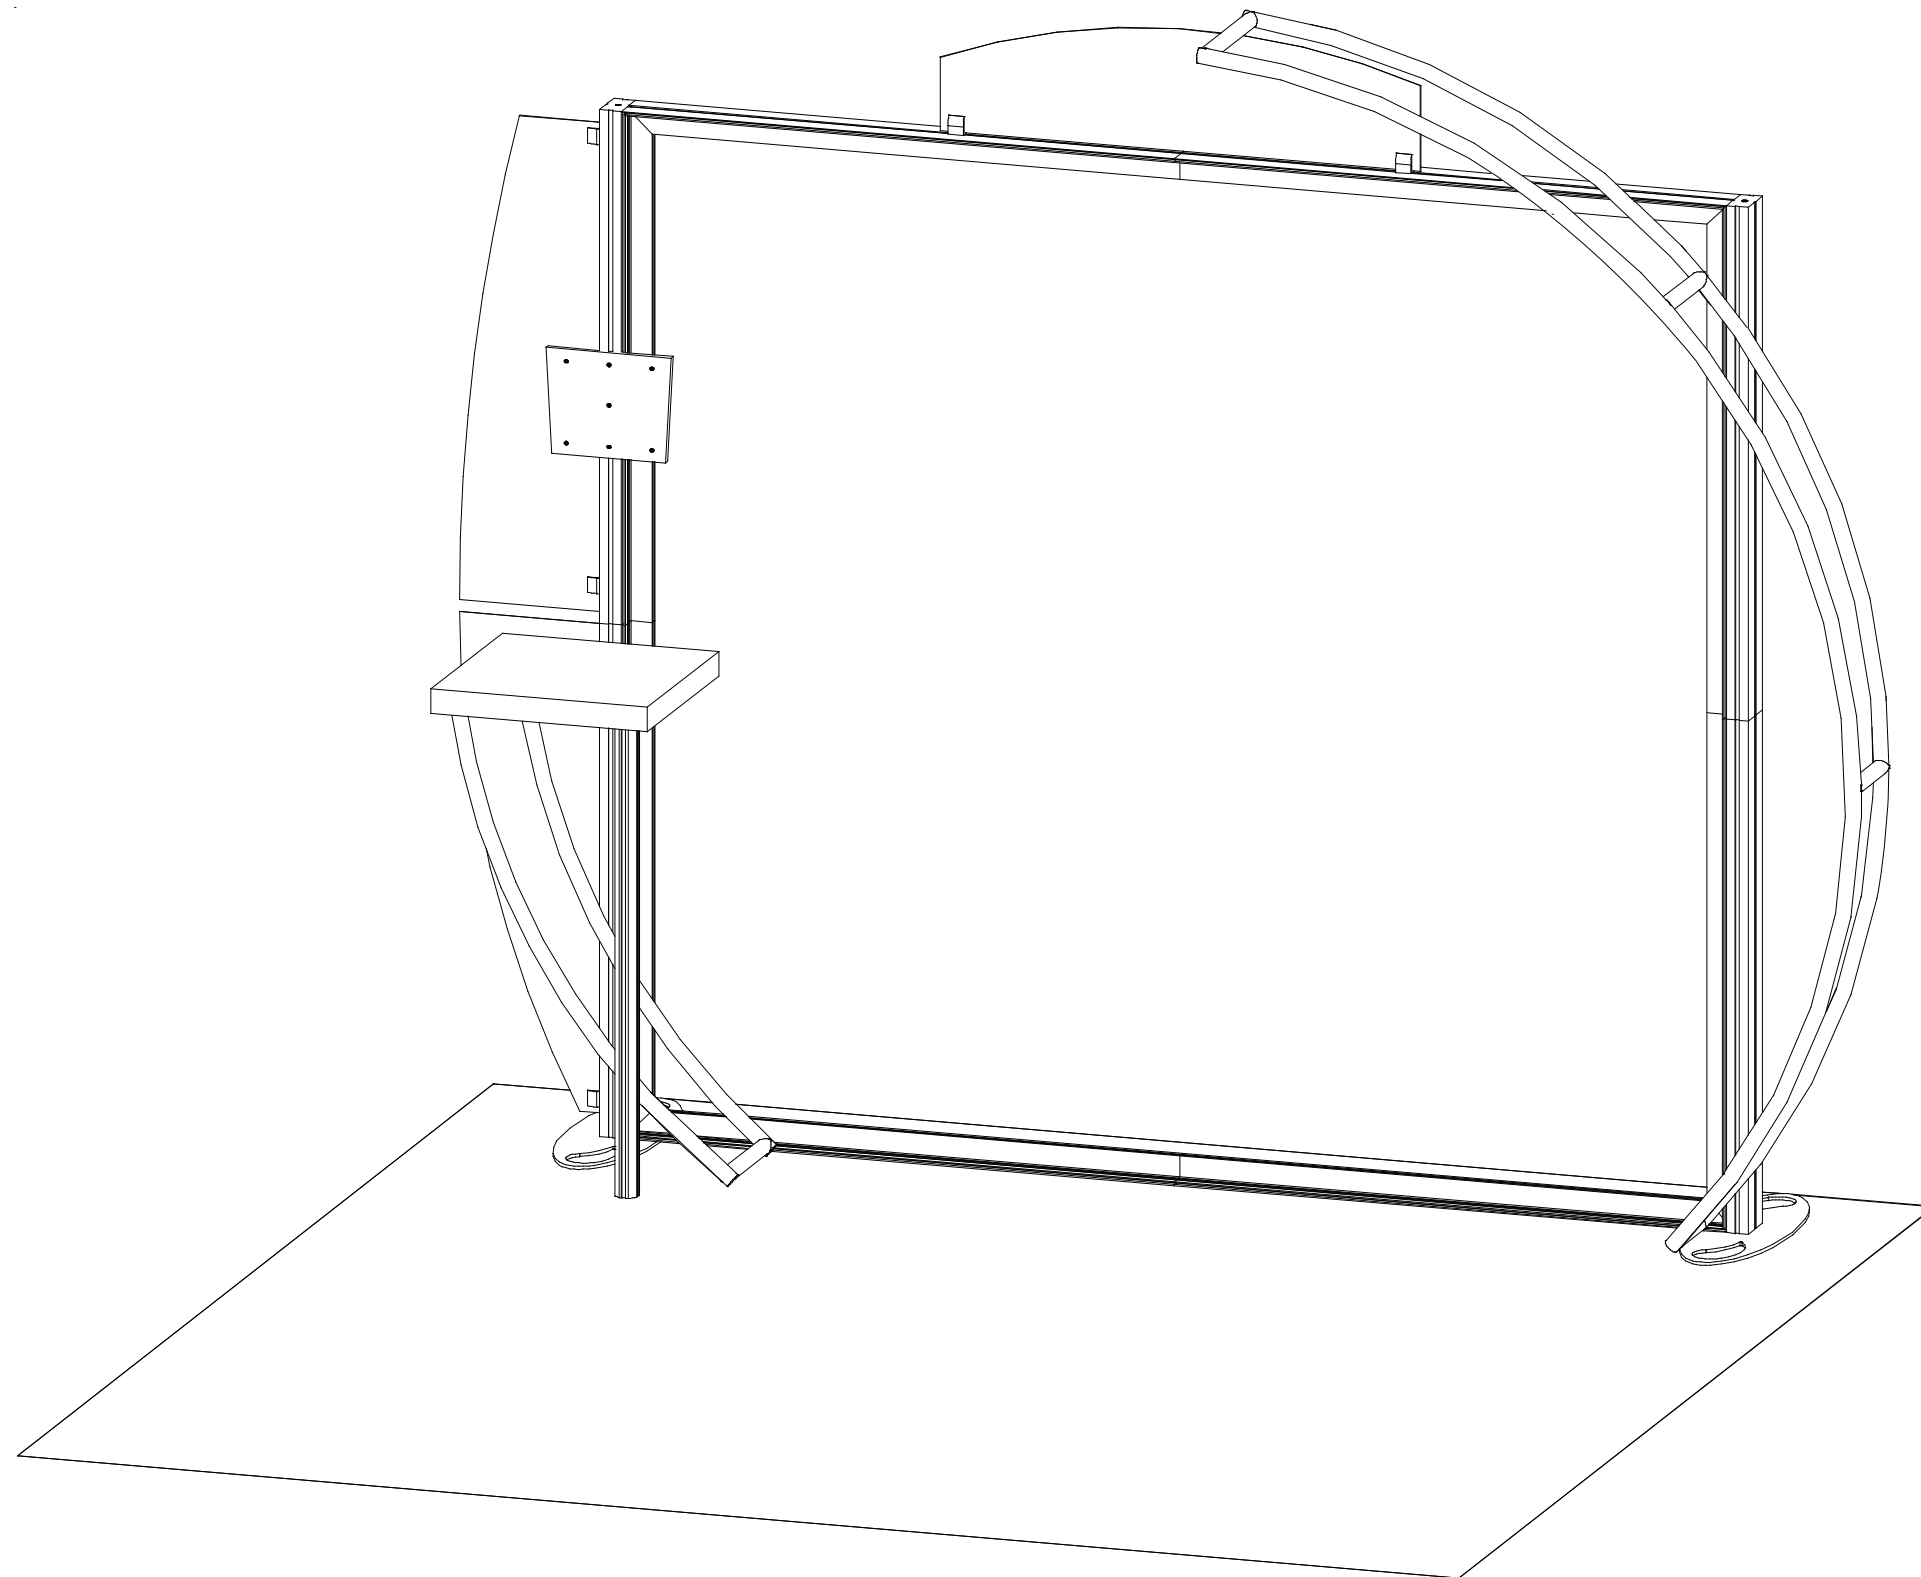

Plan View

SETUP INSTRUCTIONS

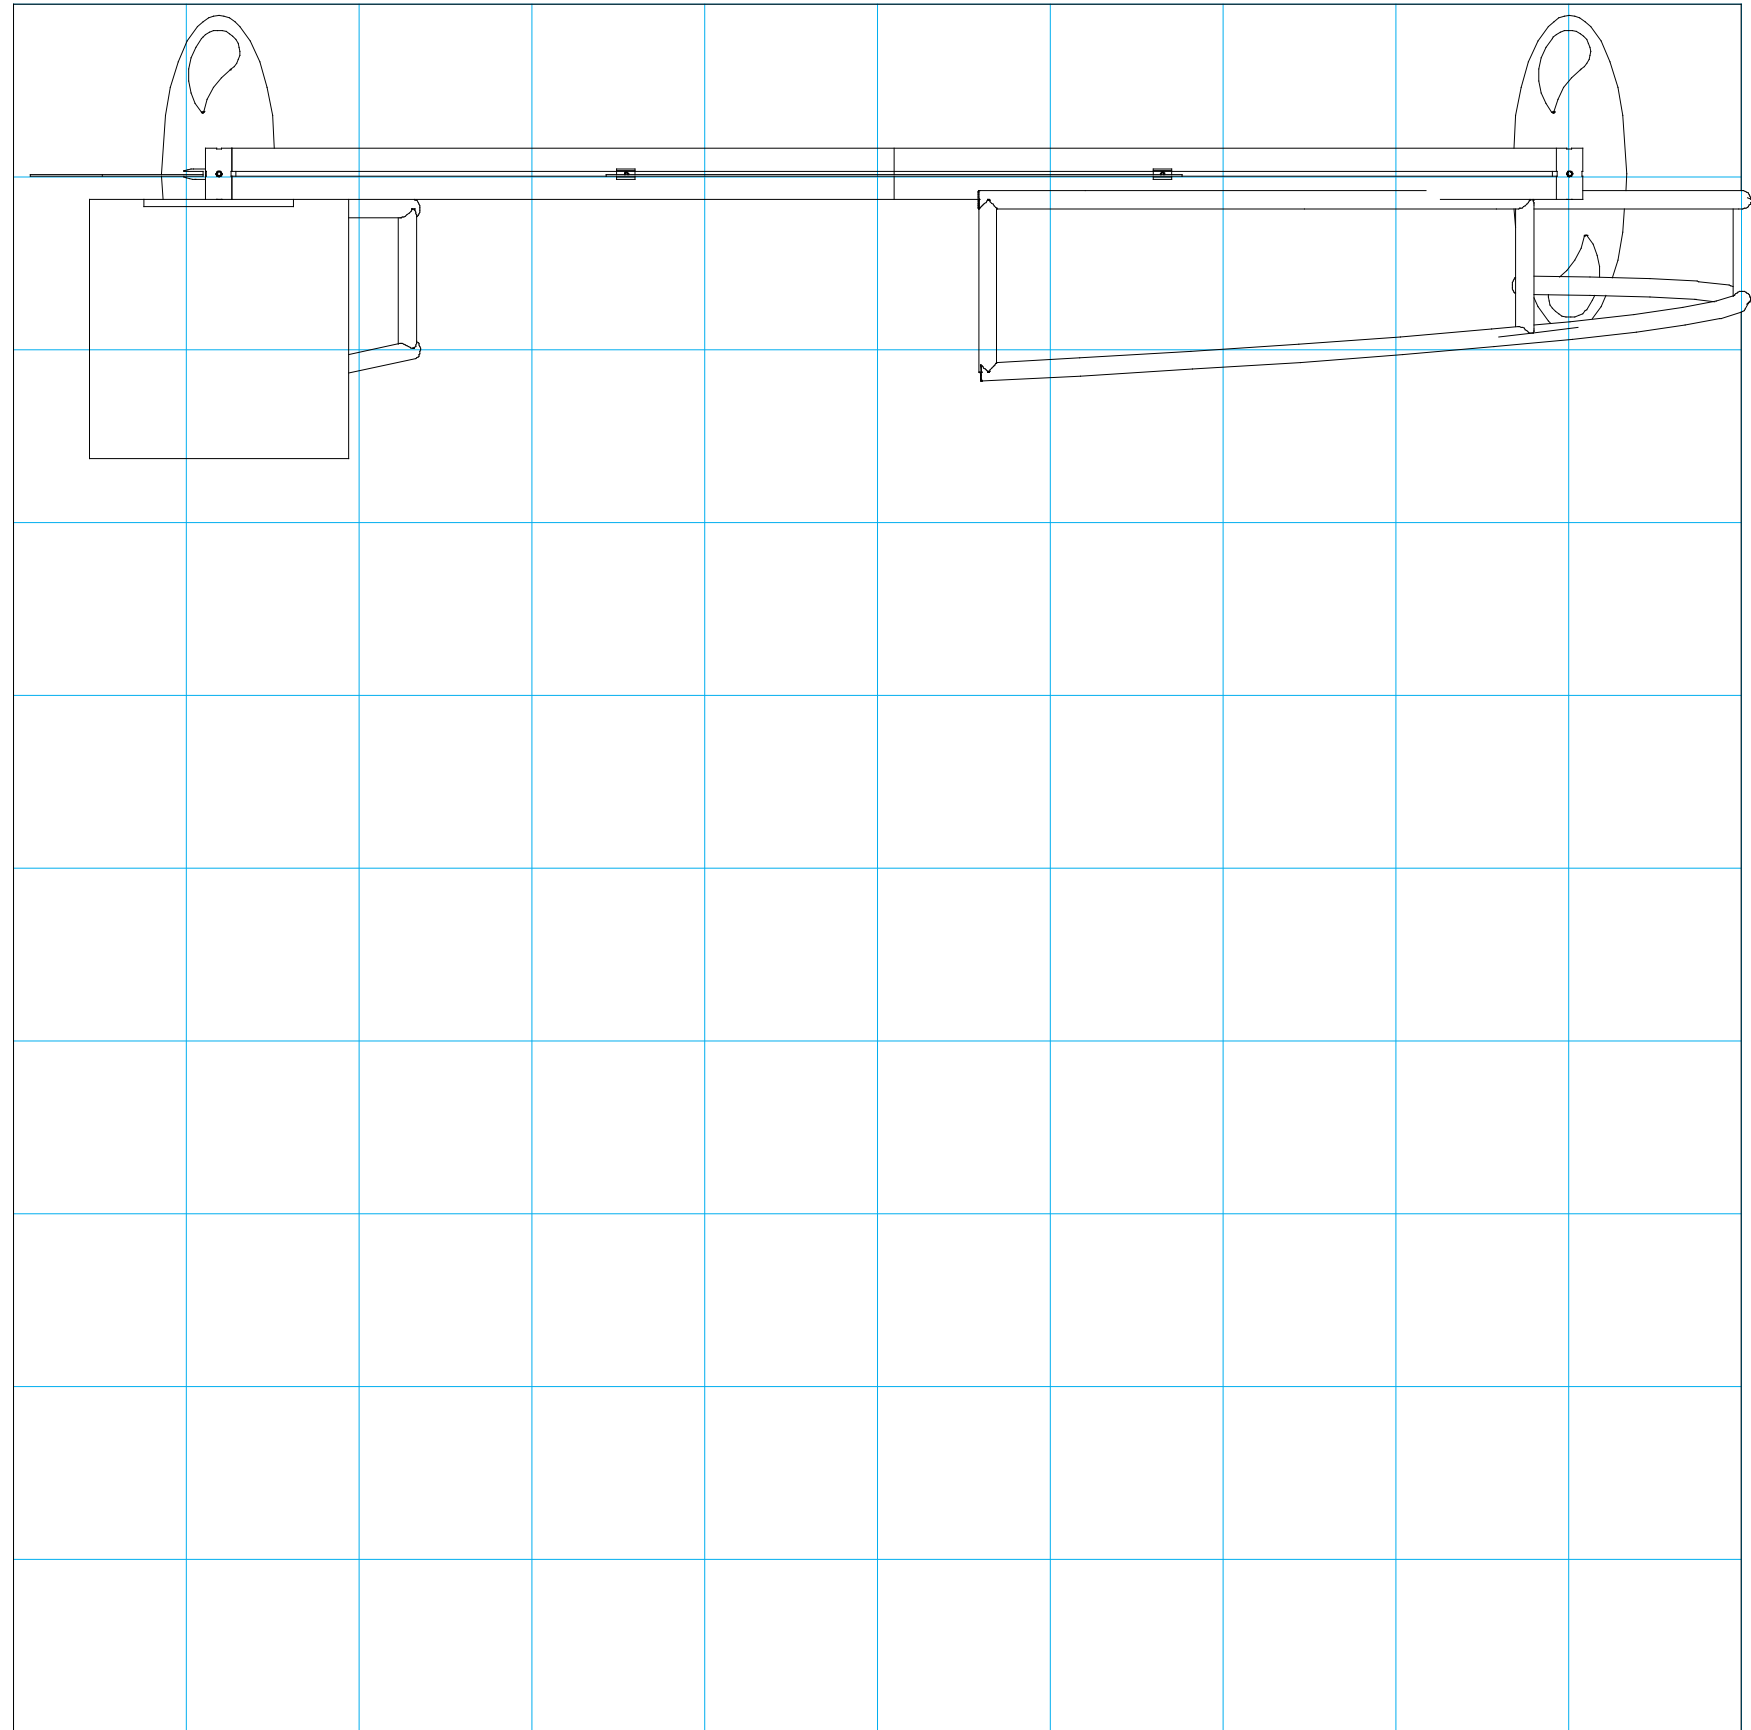

= 1 sq foot

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

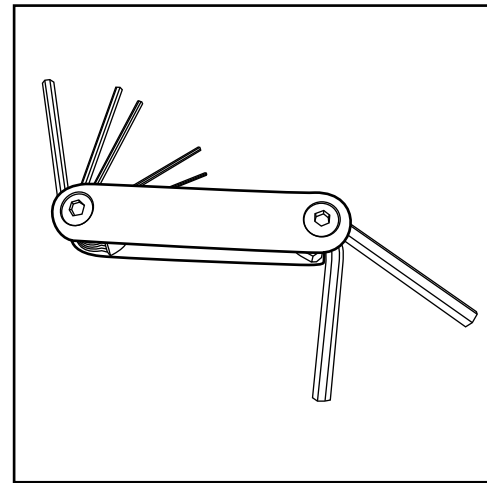


Hex Tool - Essential for Assembly

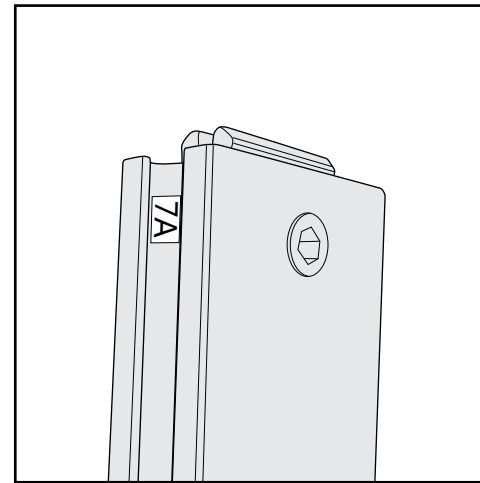


Part Identification - Numbering

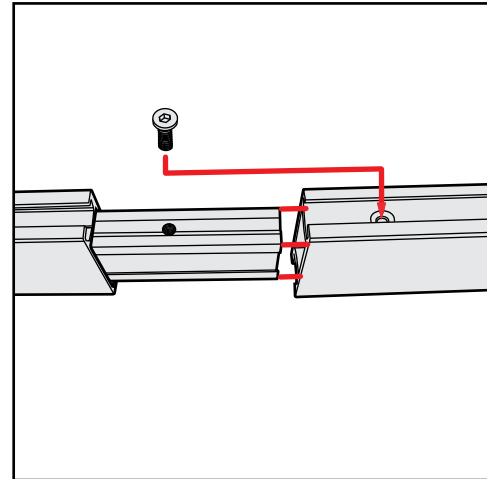


Spline Connection

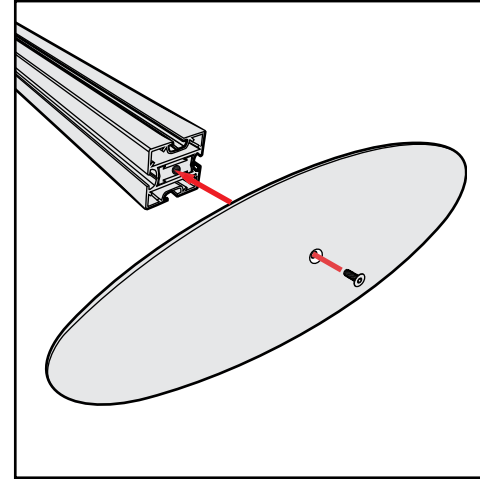

Base Plate & Extrusion Connection

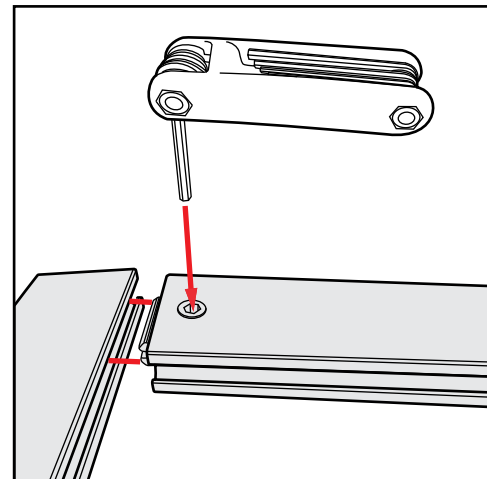

Extrusion & Lock Connection

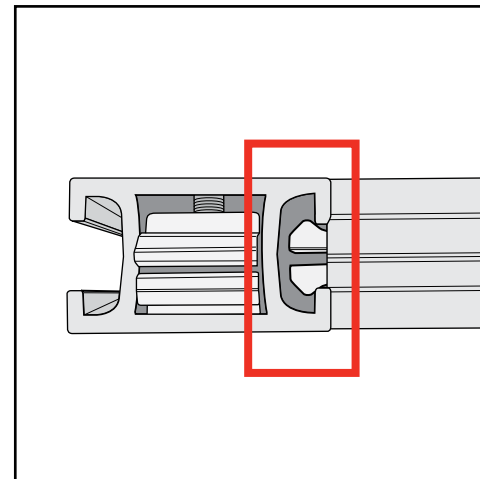


Engaged Lock



WARNING



DO NOT USE POWER TOOLS

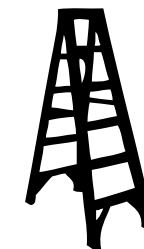


LADDERS OR LIFTS
MAY BE REQUIRED




ALL CONNECTIONS MUST
BE TIGHTLY SECURED

Top View of Each Level



Level 1
(Bottom level)




Level 2




Level 3




Level 4



Level 5

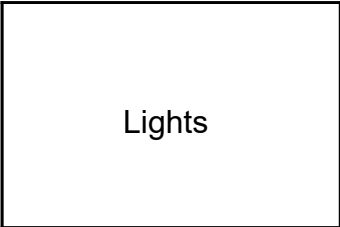

Lights

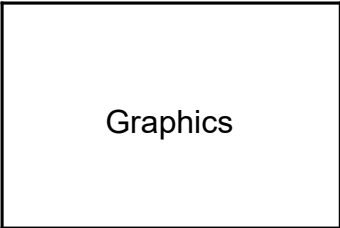

Graphics




Setup Hardware




Monitor
Mount

Top View of Each Level



Level 1
(Bottom level)




Level 2




Level 3




Level 4



Level 5

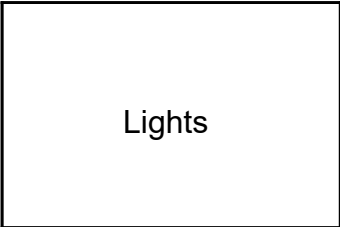

Lights

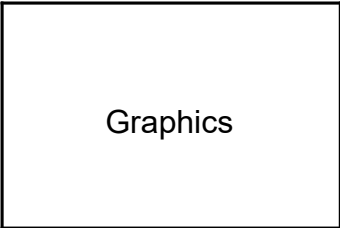

Graphics





Setup Hardware



Monitor
Mount

Item	Qty.	Description
1	2	Baseplates
2A/2B	1/1	42" S91 Vertical Extrusion
3A/3B	1/1	42" S91 Vertical Extrusion
4A/4B	1/1	46" TSP50 Horizontal Extrusion
5A/5B	1/1	46" TSP50 Horizontal Extrusion
6A/6B	1/1	42" TSP50 Vertical Extrusion
7A/7B	1/1	42" TSP50 Vertical Extrusion


- Steps:
- 1) Connect Base Plates [1] to Verticals [2A,3A].
 - 2) Connect Verticals [2A-2B], [3A-3B].
 - 3) Connect Horizontals [4A-5A] & [4B-5B].
 - 4) Connect Verticals [6A-7A] & [6B-7B].
 - 5) Connect Horizontal and Vertical assemblies [4A-5A], [4B-5B], [6A-7A], [6B-7B] together at corners. See [Corner Connection](#) detail.
 - 6) Connect Vertical assemblies [2A-2B] & [3A-3B] to Verticals of assembled frame [6A-7A], [6B-7B]. See [Custom Cam Lock](#) detail.

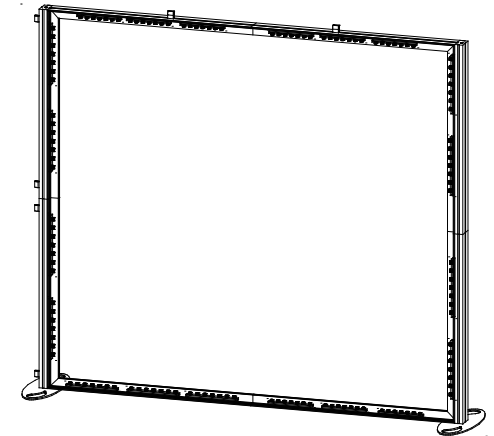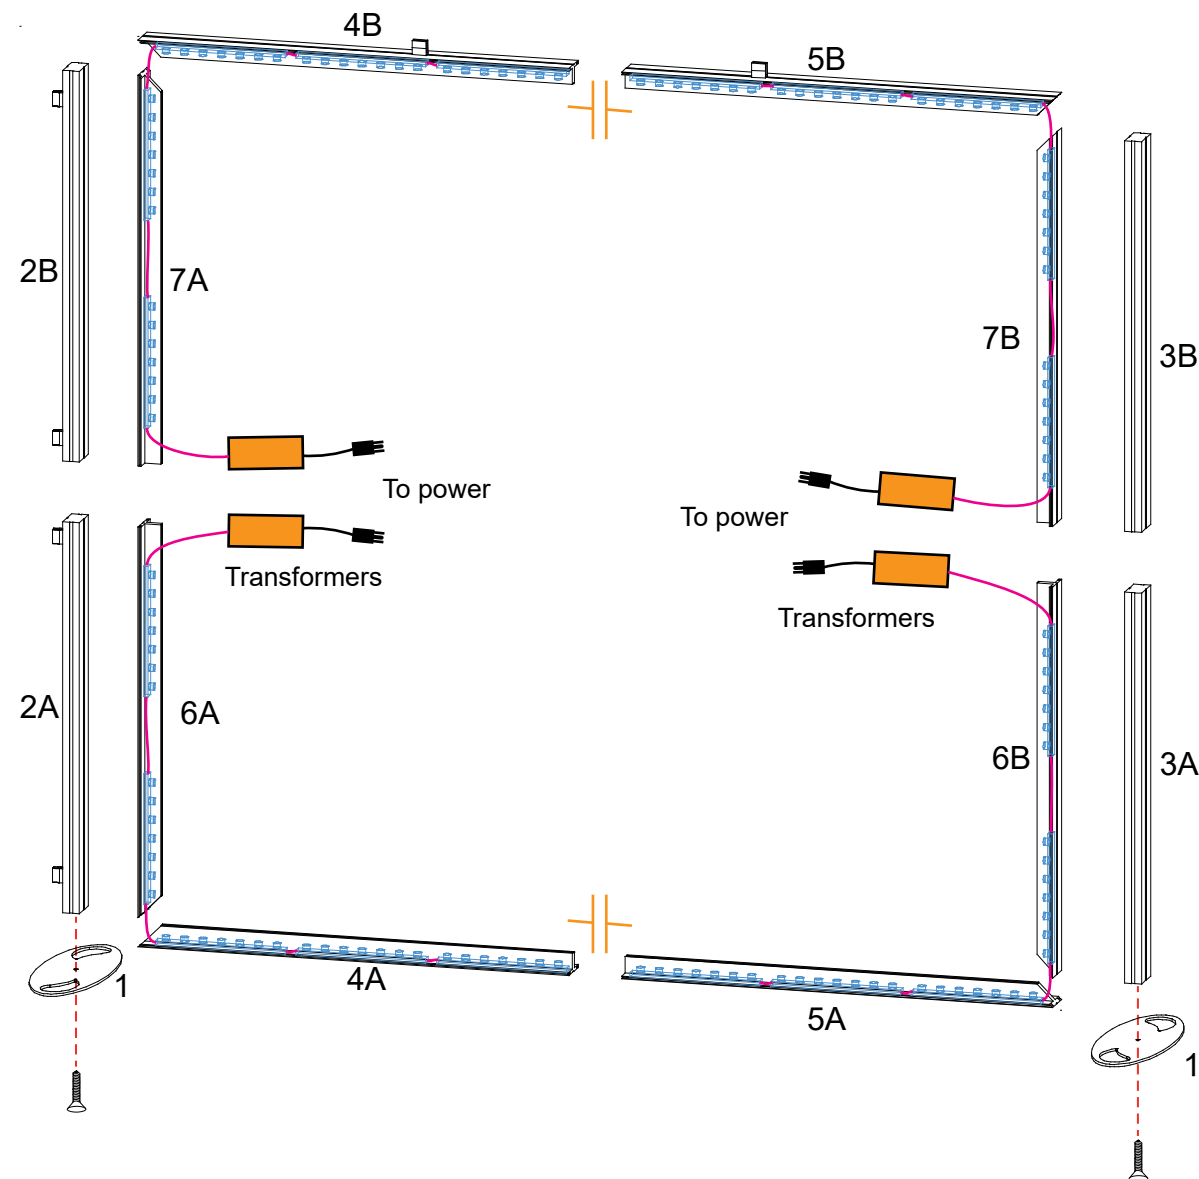

Light to Light Attachment




Light to Transformer Attachment

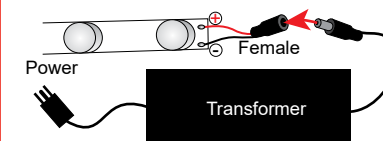


Maximum of 7 lights per chain,
9 lights per Transformer

Installation Warning


If utilizing your own hardware, purchase **nylon washers** to prevent metal screw heads from damaging the circuit board. Attach no more than **seven** lights per chain.

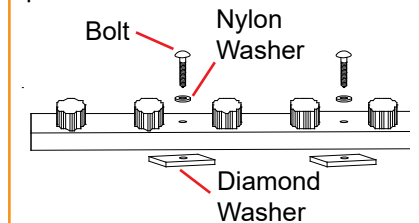

* Corner Connection


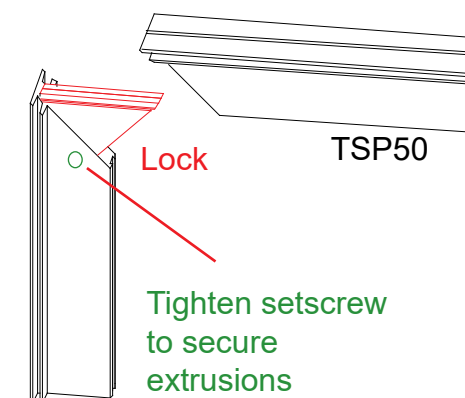


* Custom Cam Lock

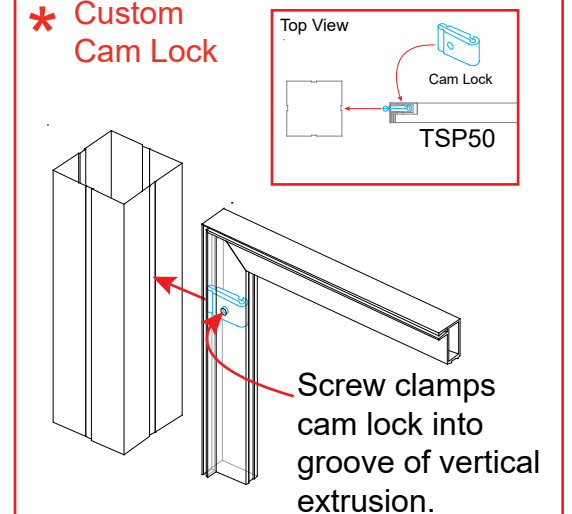


Steps:

1) Connect Wings, Header Graphic, and Monitor Mount to frame.

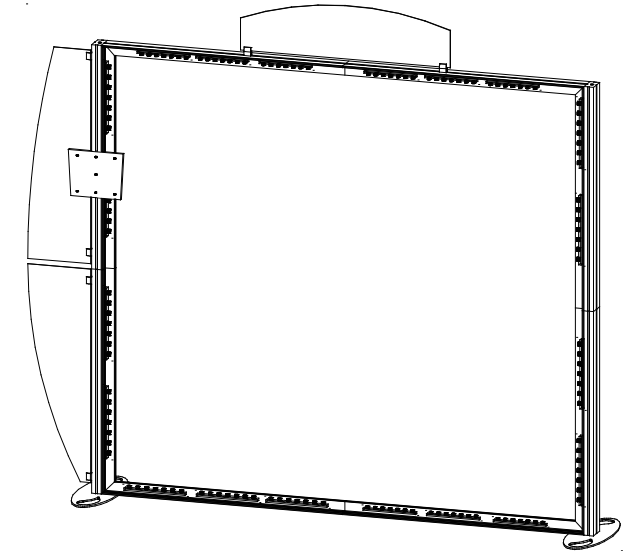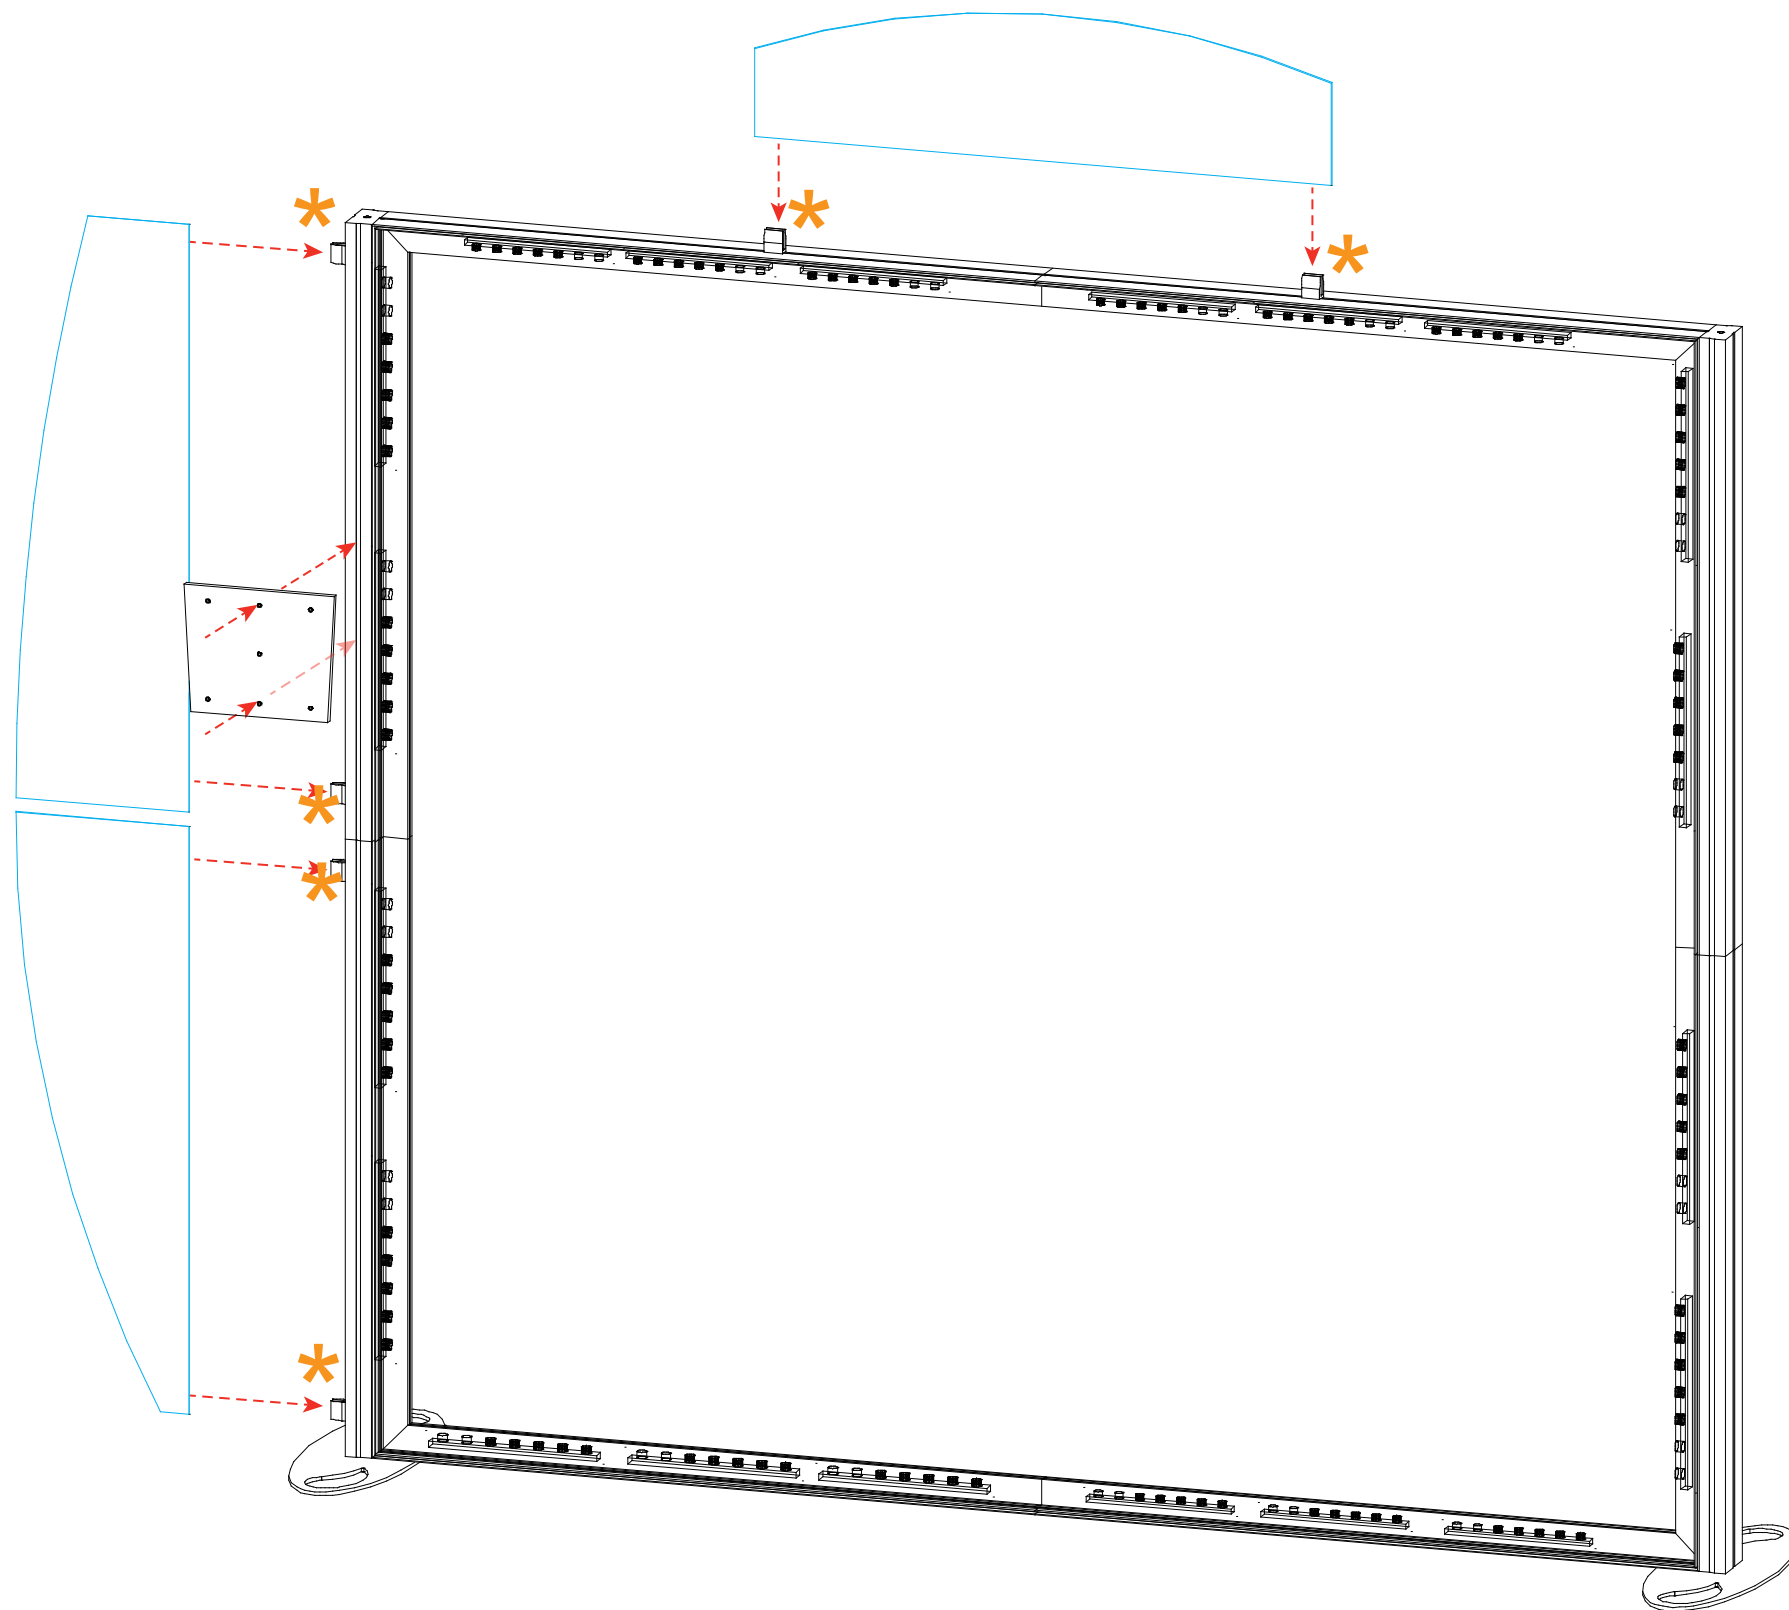


When assembled

* Monitor Mount Attachment

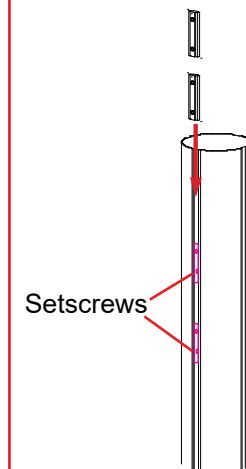


Slide connectors into groove of extrusion. Tighten setscrew to secure in place.

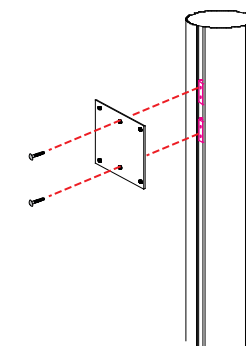

Attach back plate to connectors using screws. Attach top plate and tighten setscrews to secure.

* A10 Clamp Detail

- 1) Slide A10 connector into groove of extrusion.
- 2) Tighten set screw to secure A10 to extrusion.
- 3) Insert Infill into Clamp
- 4) Tighten knob to secure wing in place.

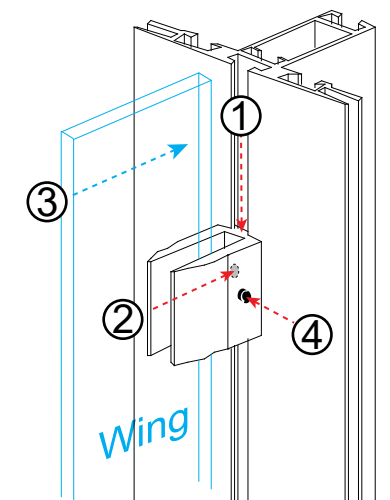

Steps:

1) Connect Aero Frame pieces in alphabetical order.

AERO


Using Your Setup Instructions

The Aero Setup Instructions are created specifically for your configuration. The instructions include an exploded view of the frame which is sequentially labeled. We encourage you to review the instructions before attempting to assemble your exhibit.





Connections are kept very simple; no tools required. Everything assembles with push-button connectors.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

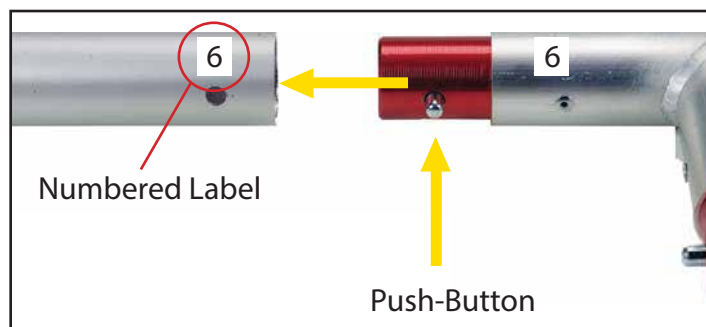



Connections are made by holding the button down and sliding the red tube into opposing tube until button locks into the hole of the opposing tube. To disassemble, push button and pull or twist extrusions apart.

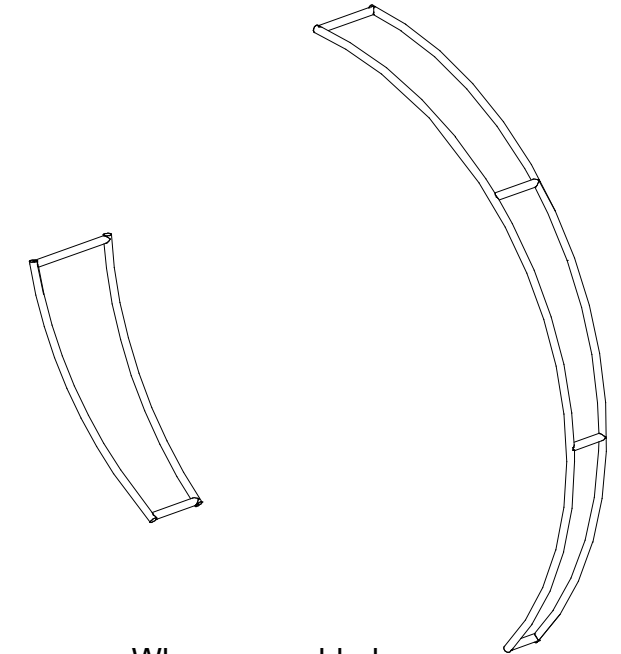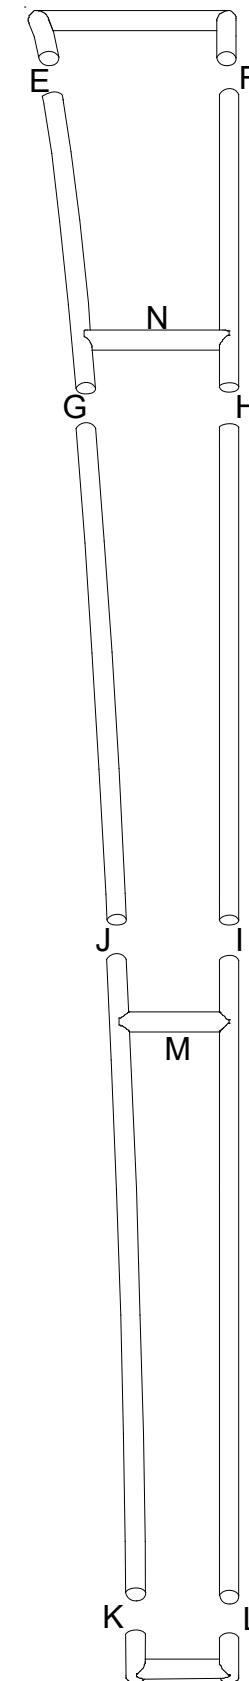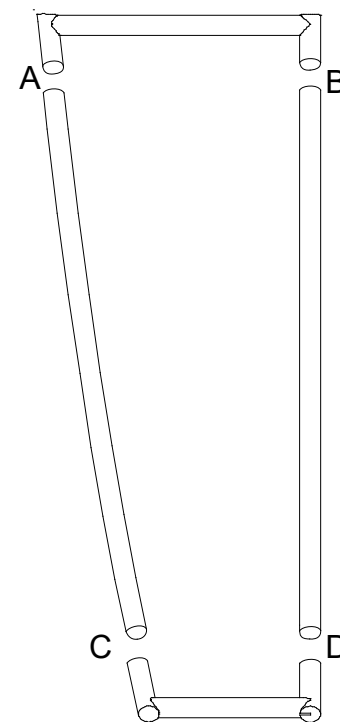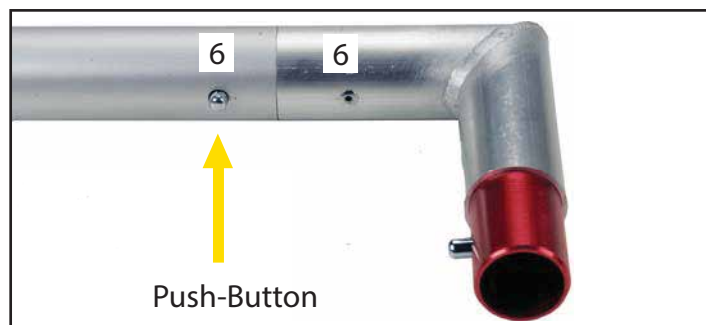

When assembled


Item	Qty.	Description
8	1	40" RSG540 Vertical Extrusion

Steps:
1) Connect Aero frames, counter support extrusion,
& Countertop.

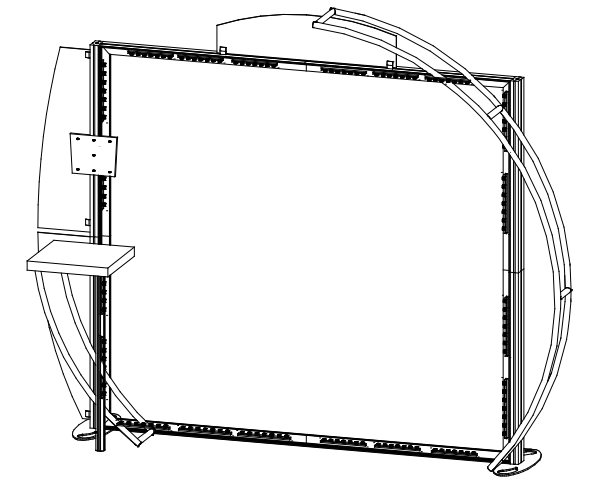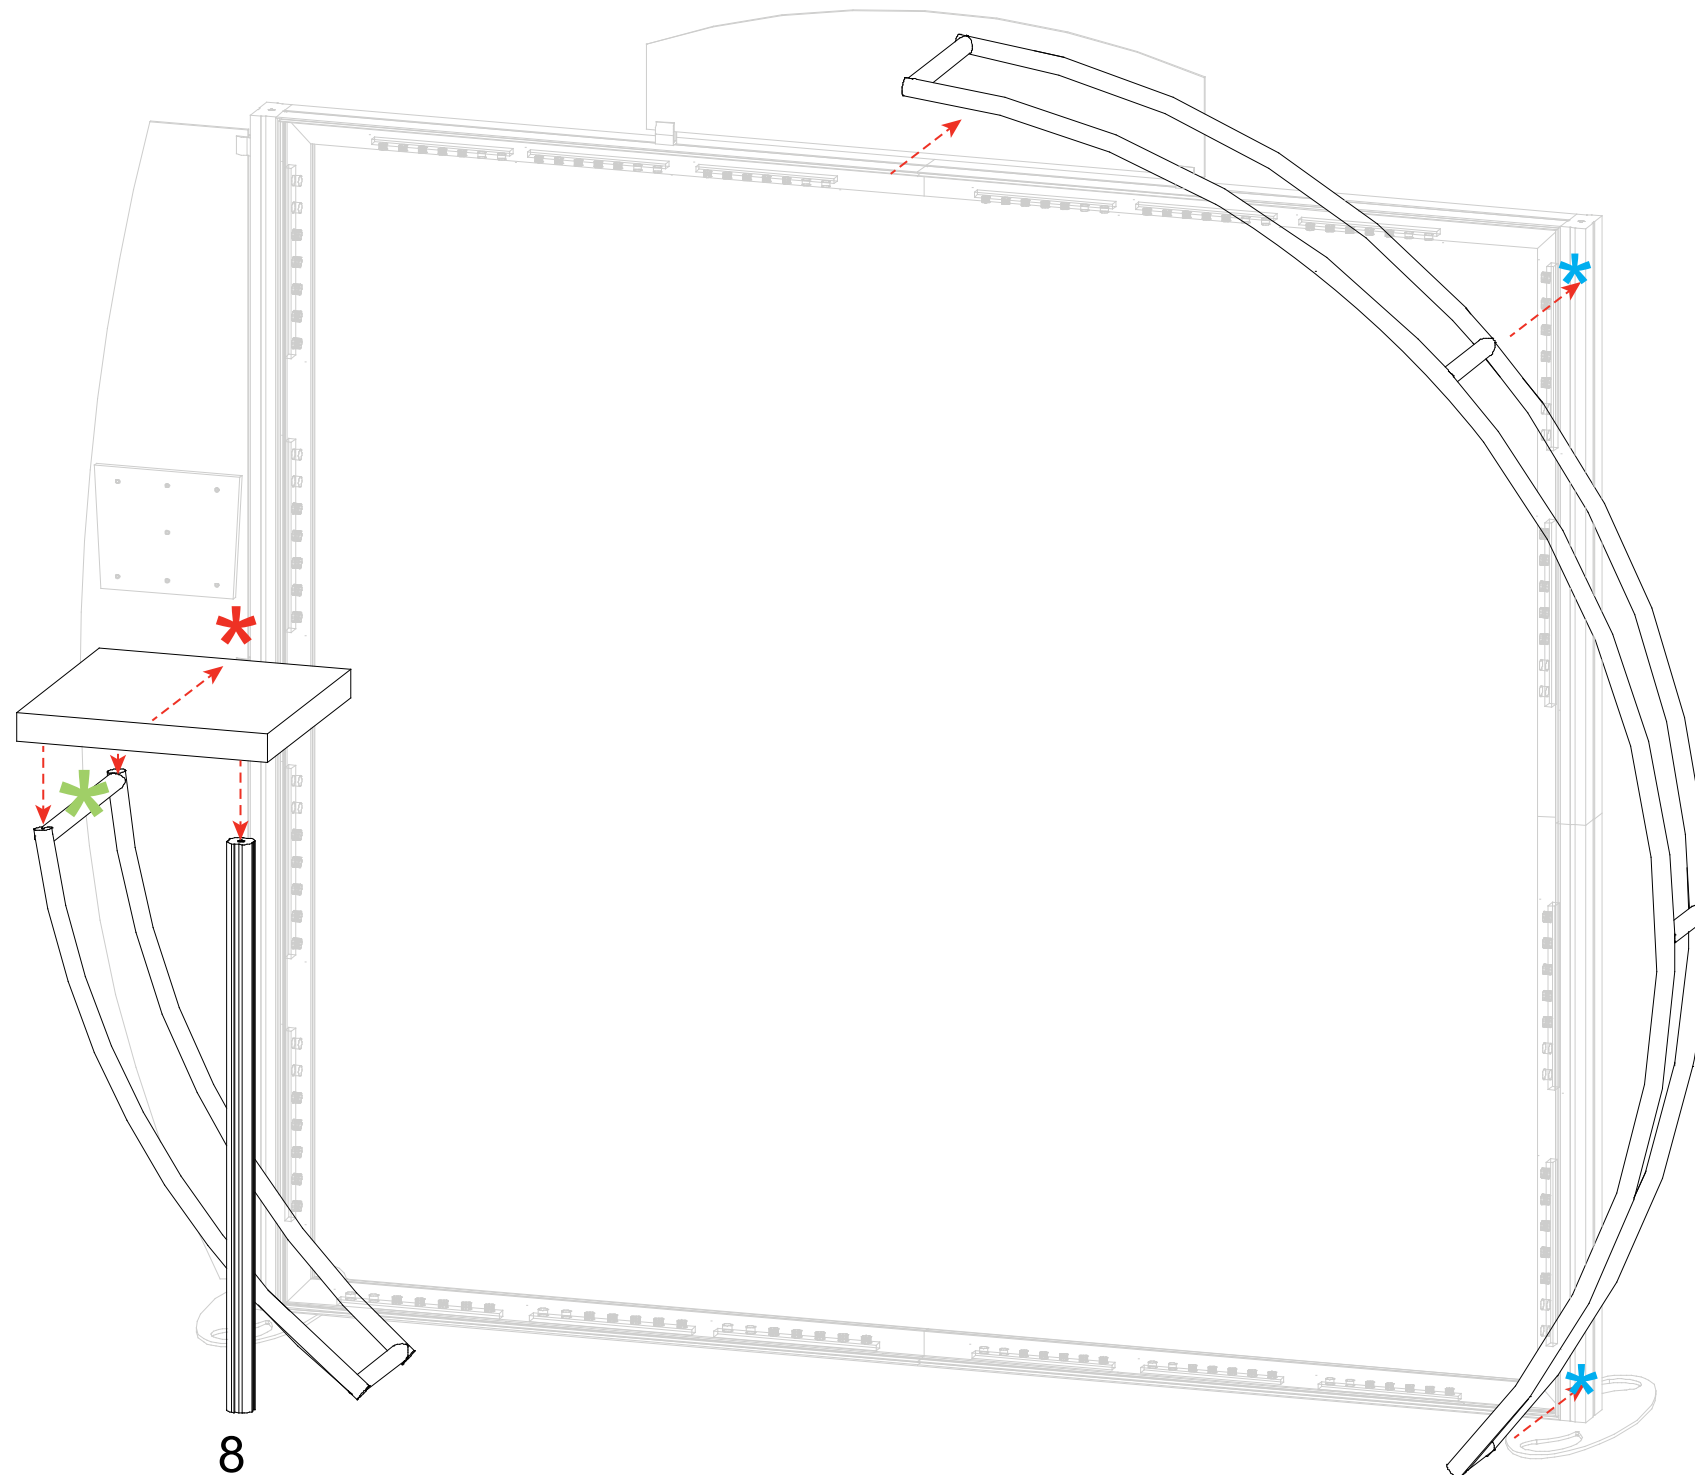


When assembled

*** Shelf Attachment**

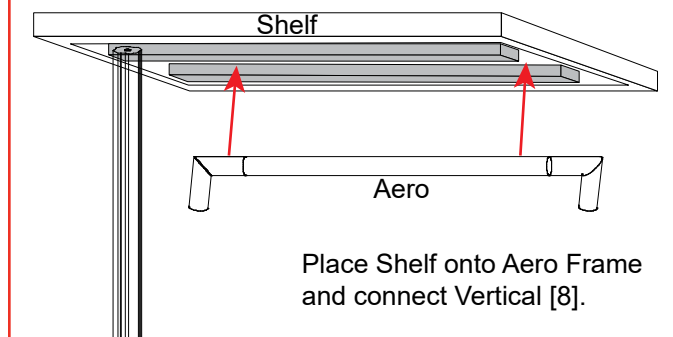

*** Shelf Attachment**

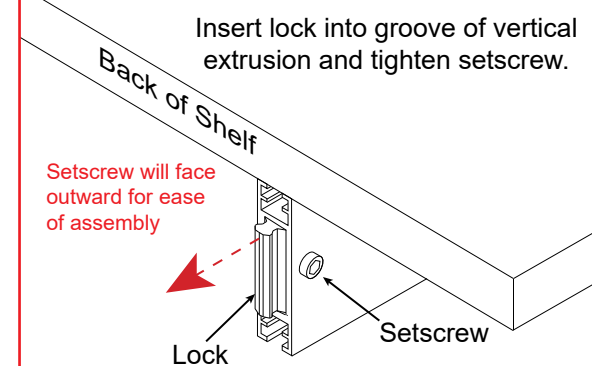

*** Keyhole Attachment**

