

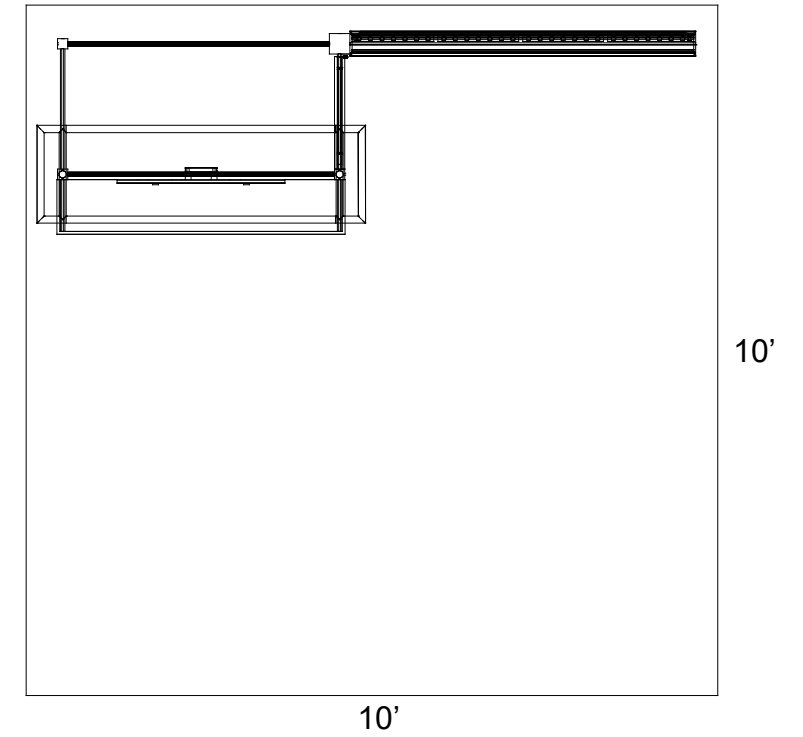


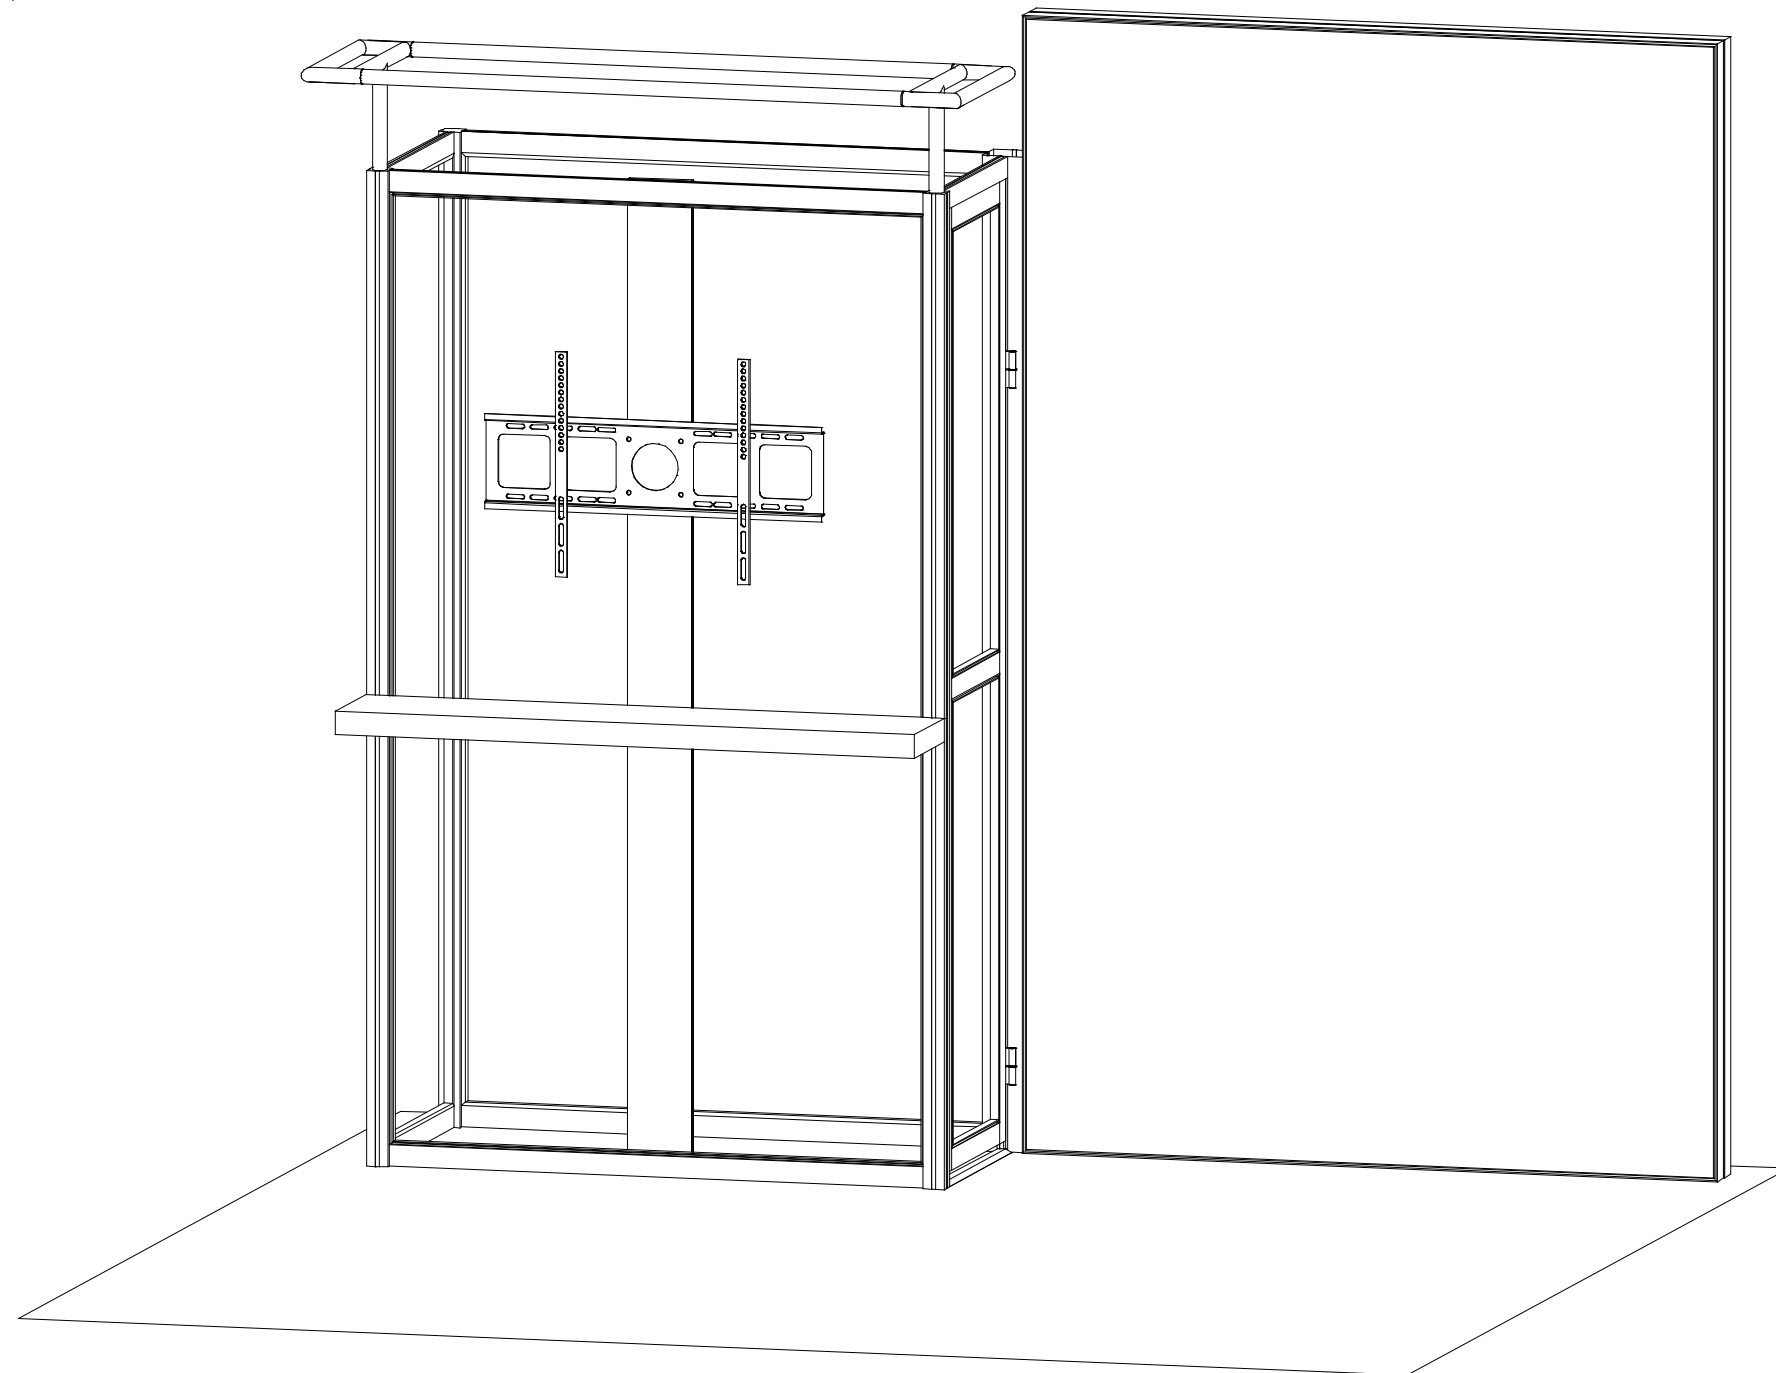

Plan View

SETUP INSTRUCTIONS

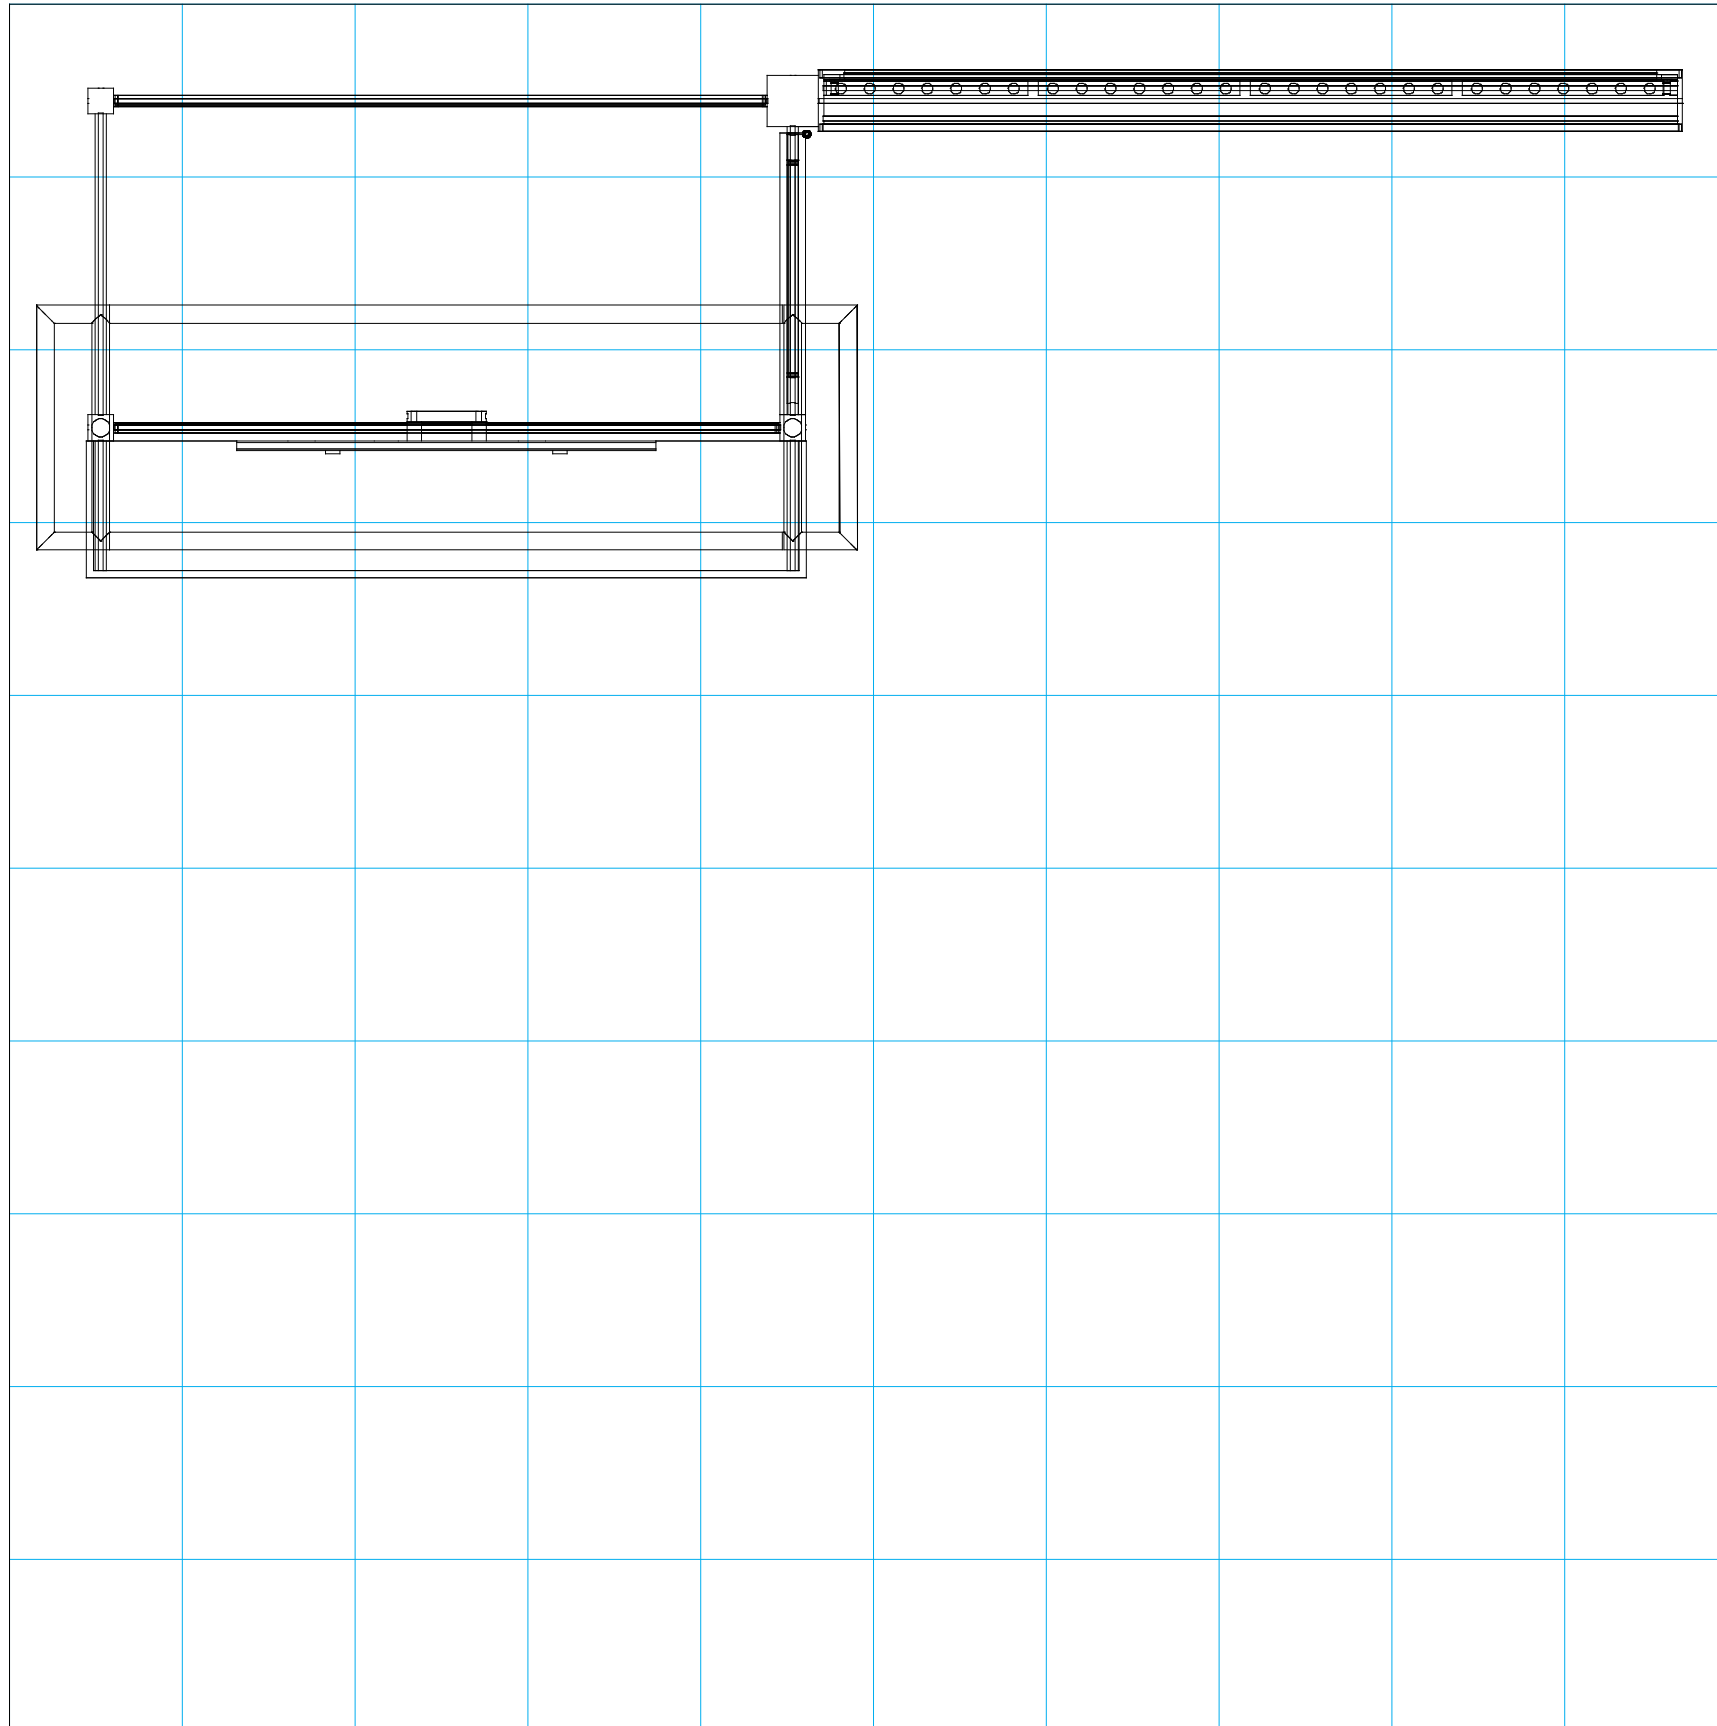

= 1 sq foot

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

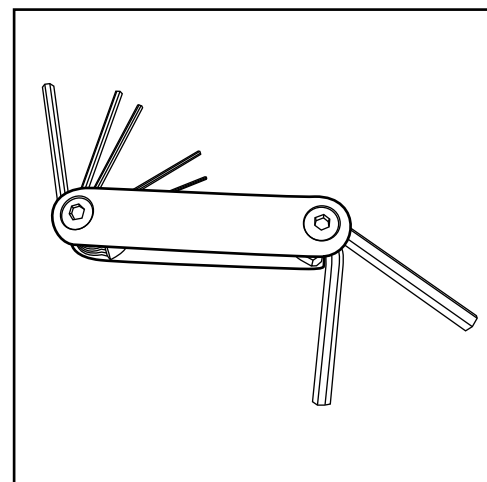


Hex Tool - Essential for Assembly

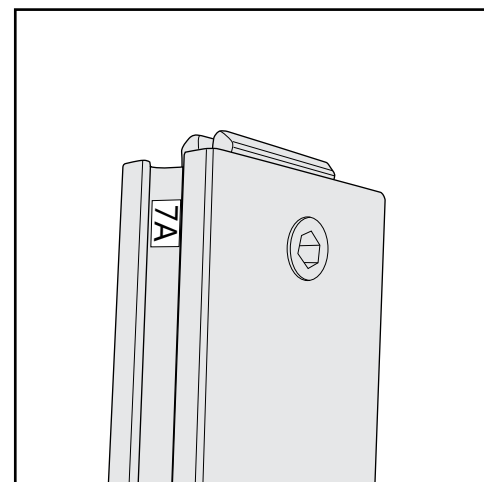


Part Identification - Numbering

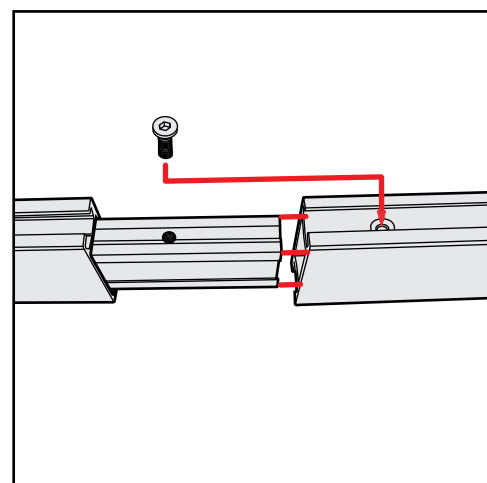


Spline Connection

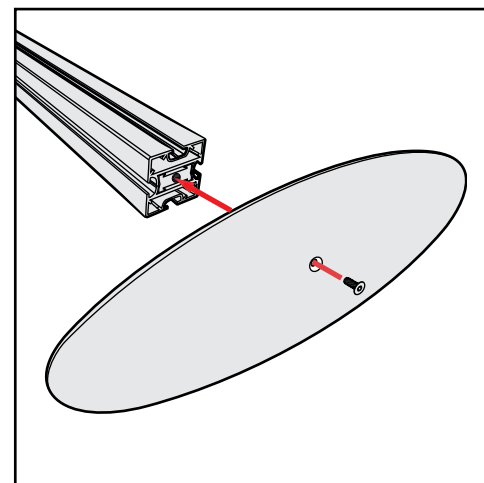

Base Plate & Extrusion Connection

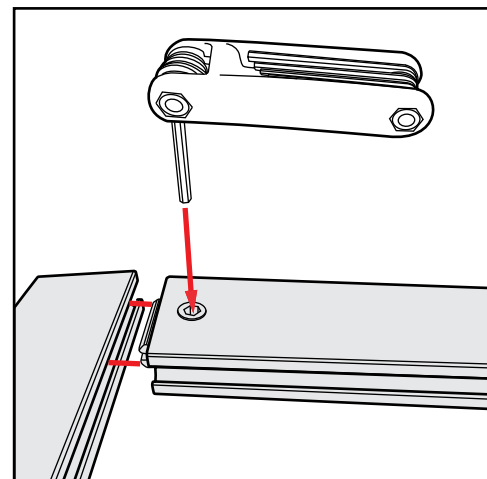

Extrusion & Lock Connection

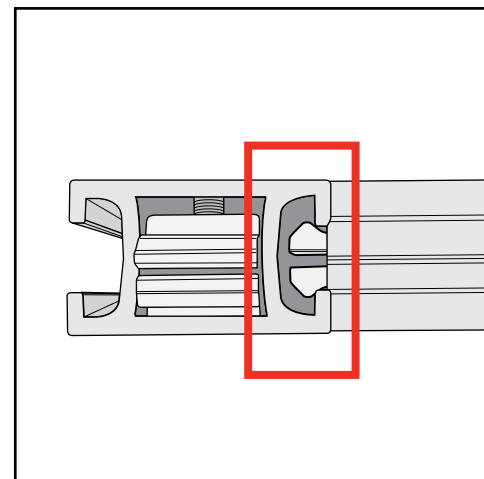

Engaged Lock



WARNING



DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED



ALL CONNECTIONS MUST
BE TIGHTLY SECURED

Item	Qty.	Description
1	1	84"h Q914 Vertical Extrusion w/ attached TSP3 & door hinge
2	1	84"h S44 Vertical Extrusion w/ attached TSP3
3	1	84"h S44 Vertical Extrusion w/ attached TSP3
4	1	84"h S44 Vertical Extrusion w/ attached TSP3 & door stop
5/5A	1/1	45.364"w Z45 Horizontal Extrusion w/ attached TSP3
6/6A	1/1	20.885"w Z45 Horizontal Extrusion w/ attached TSP3
7/7A	1/1	46.25"w Z45 Horizontal Extrusion w/ attached TSP3
8A	1	20"w Z45 Horizontal Extrusion
9	1	84"h Z140 Vertical Extrusion




Steps:

- 1) Connect horizontals [5,5A] between verticals [1,2].
- 2) Attach horizontals [6,6A] between verticals [2,3].
- 3) Assemble horizontals [7,7A] between verticals [3,4].
- 4) Connect door threshold & horizontal [8A] between verticals [1,4]. See **Door Threshold Attachment** detail.
- 5) Install vertical [9] to horizontals [7,7A] as shown.
- 6) Attach Door between verticals [1,4]. See **Door Attachment** detail.

Note: Groove of TSP3 must face toward outside of closet for proper graphic application.

* Z140 Attachment


Attach Z140 vertical to upper & lower horizontals using screw caps.

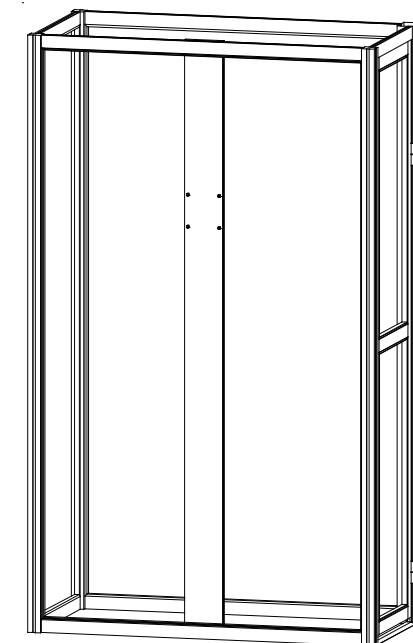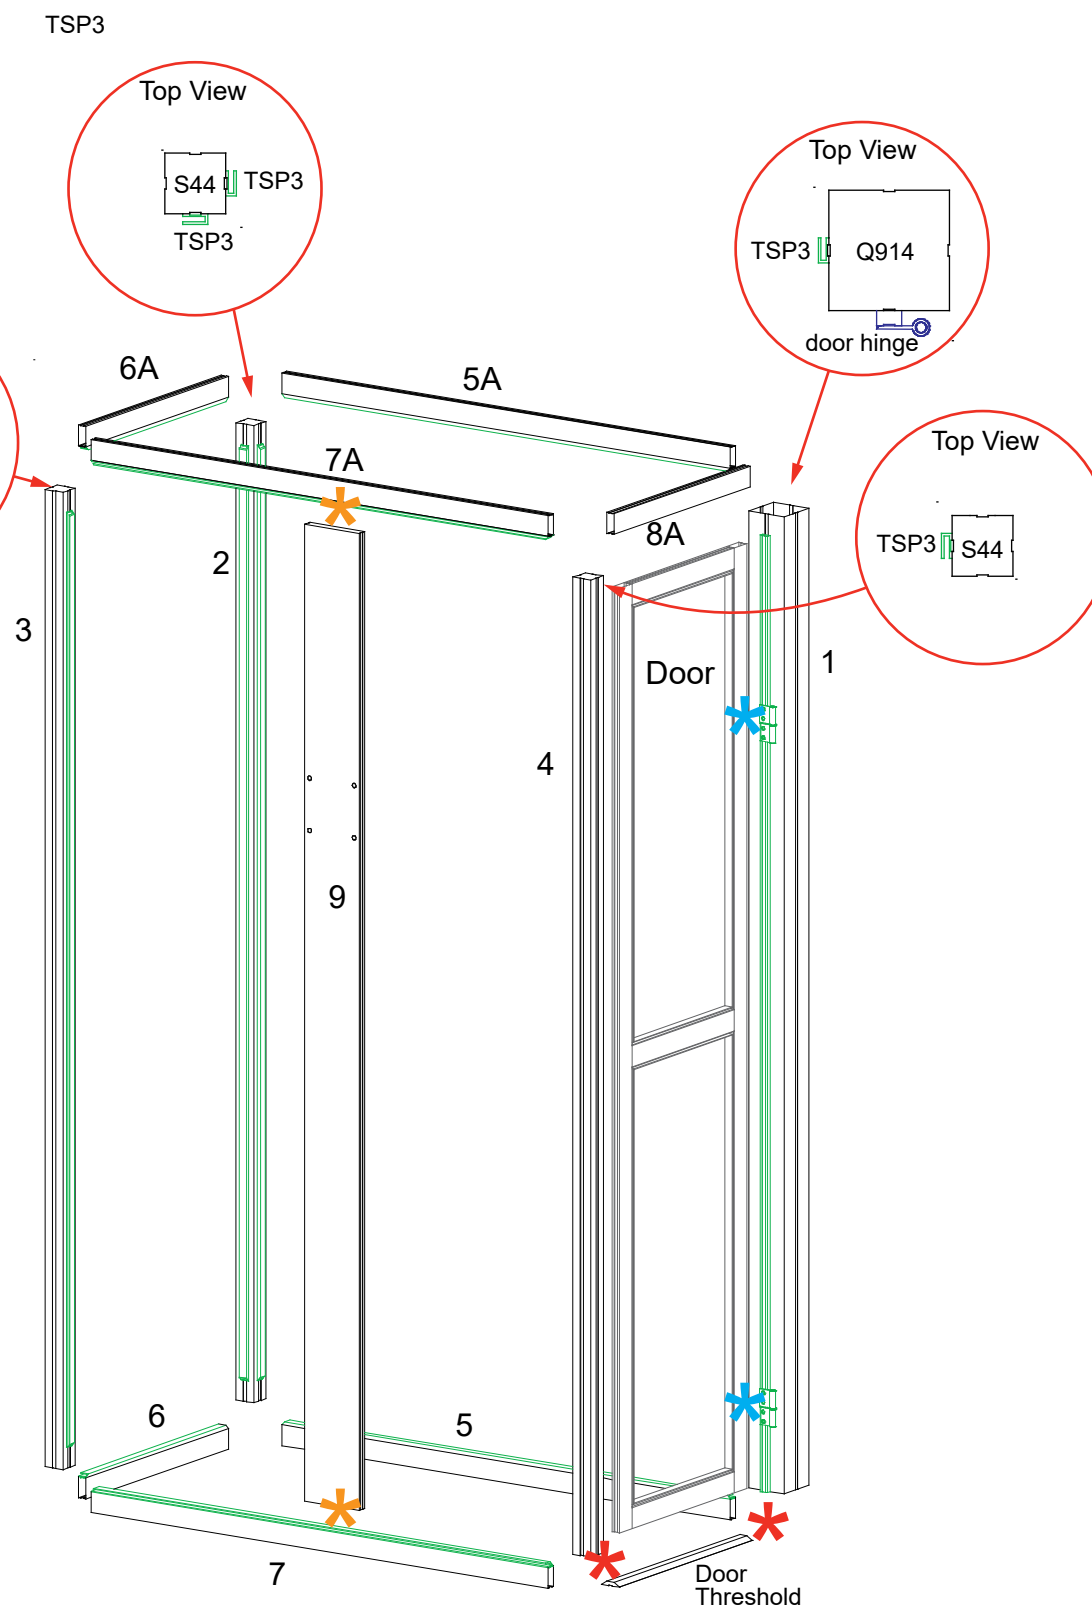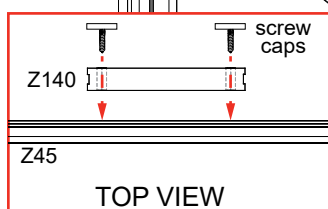

When partly assembled


* Door Attachment

Slide pin into hinge attached to vertical. Slide door hinge over pin.

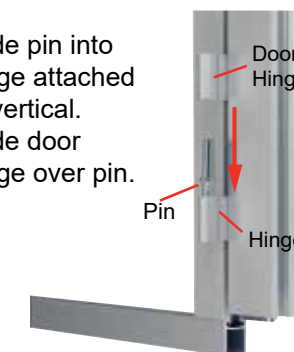

* Door Threshold Attachment



Slide Connector into Groove of Extrusion. Tighten setscrew to secure.

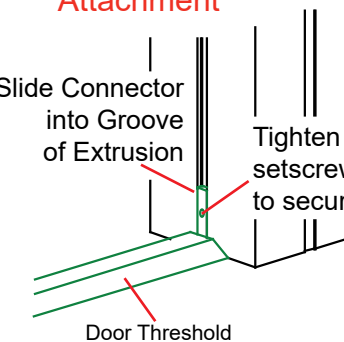

Item	Qty.	Description
10/10A	1/1	60"w CEI110 Horizontal Extrusion
11/11A	1/1	96"h CEI110 Vertical Extrusion

Steps:

- 1) Connect horizontals [10,10A] between verticals [11,11A].
See **CEI-110 Corner Connection** detail.
- 2) Attach frame assembly to vertical [1] of closet assembly.
See **V31 Connection** detail.
- 3) Connect power cords for Supernova lights, as shown.

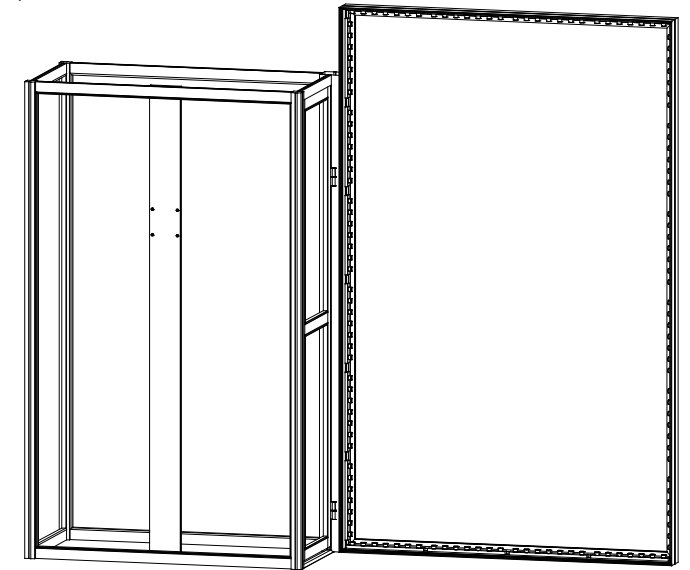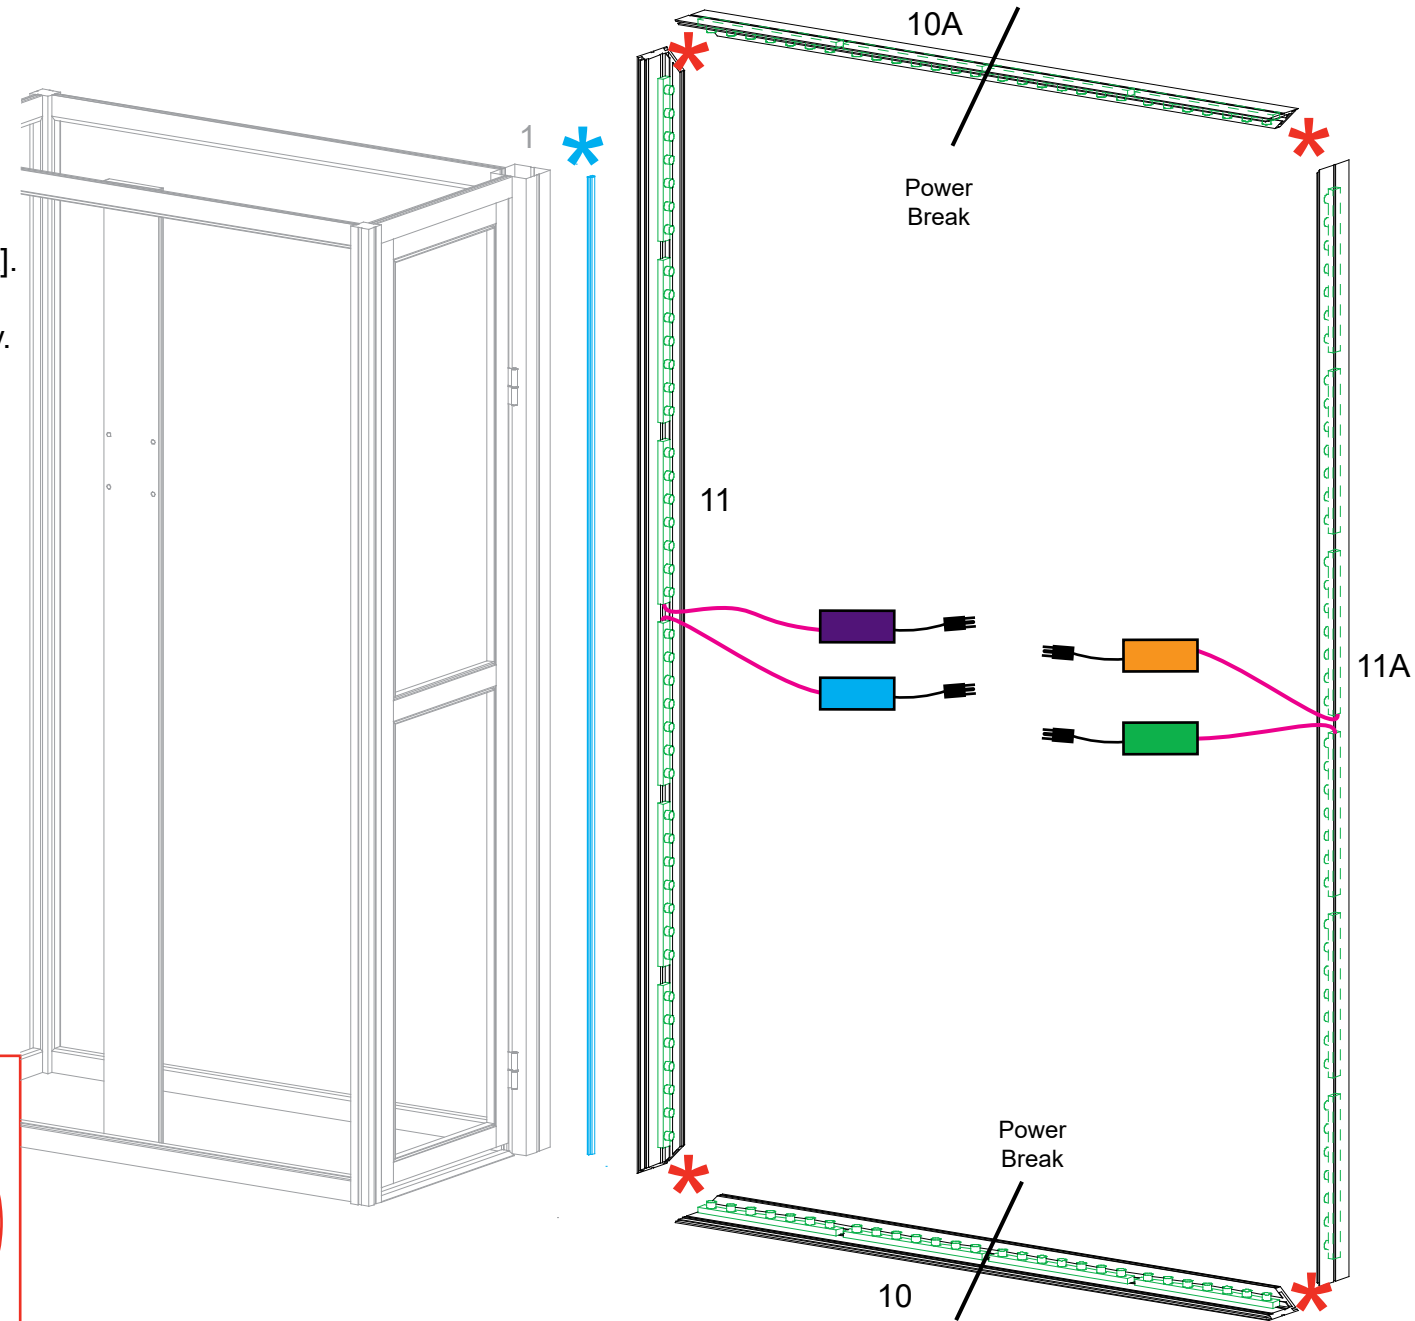


When assembled


*** V31 Connection**

Slide V31 connector into channels of vertical extrusions.


Tighten set screws to secure.

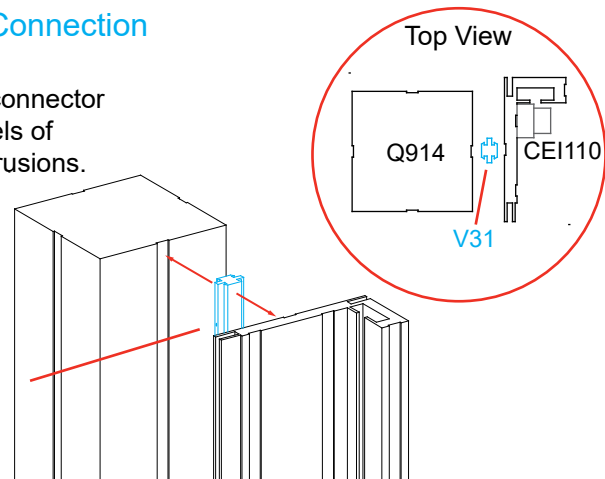

Light to Light Attachment




Light to Tranformer Attachment

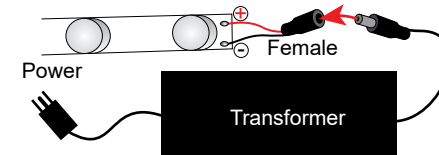

Maximum of 7 lights per chain / 9 lights per Transformer


*** CEI-110 Corner Connection**

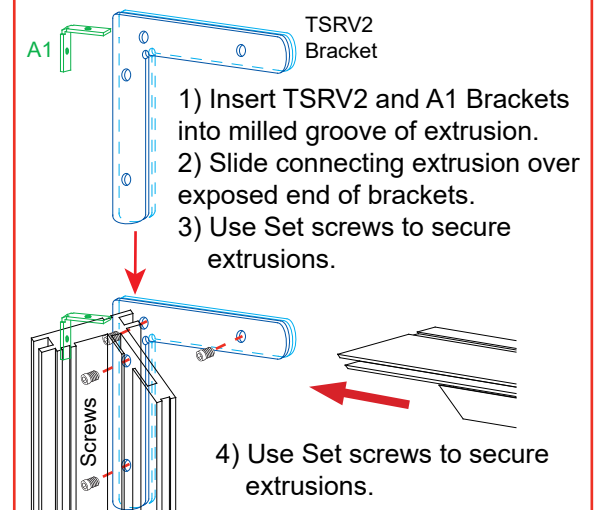


Item	Qty.	Description
12/12A	1/1	9"w Z32 Horizontal Extrusion

Steps:

- 1) Apply SEG graphics to closet & lightbox frame.
- 2) Attach shelf to closet by connecting horizontals [12,12A] to verticals [3,4]. See [Shelf Attachment](#) detail.
- 3) Install Monitor Mount to vertical [9] using standoffs. See [Monitor Mount Attachment](#) detail.

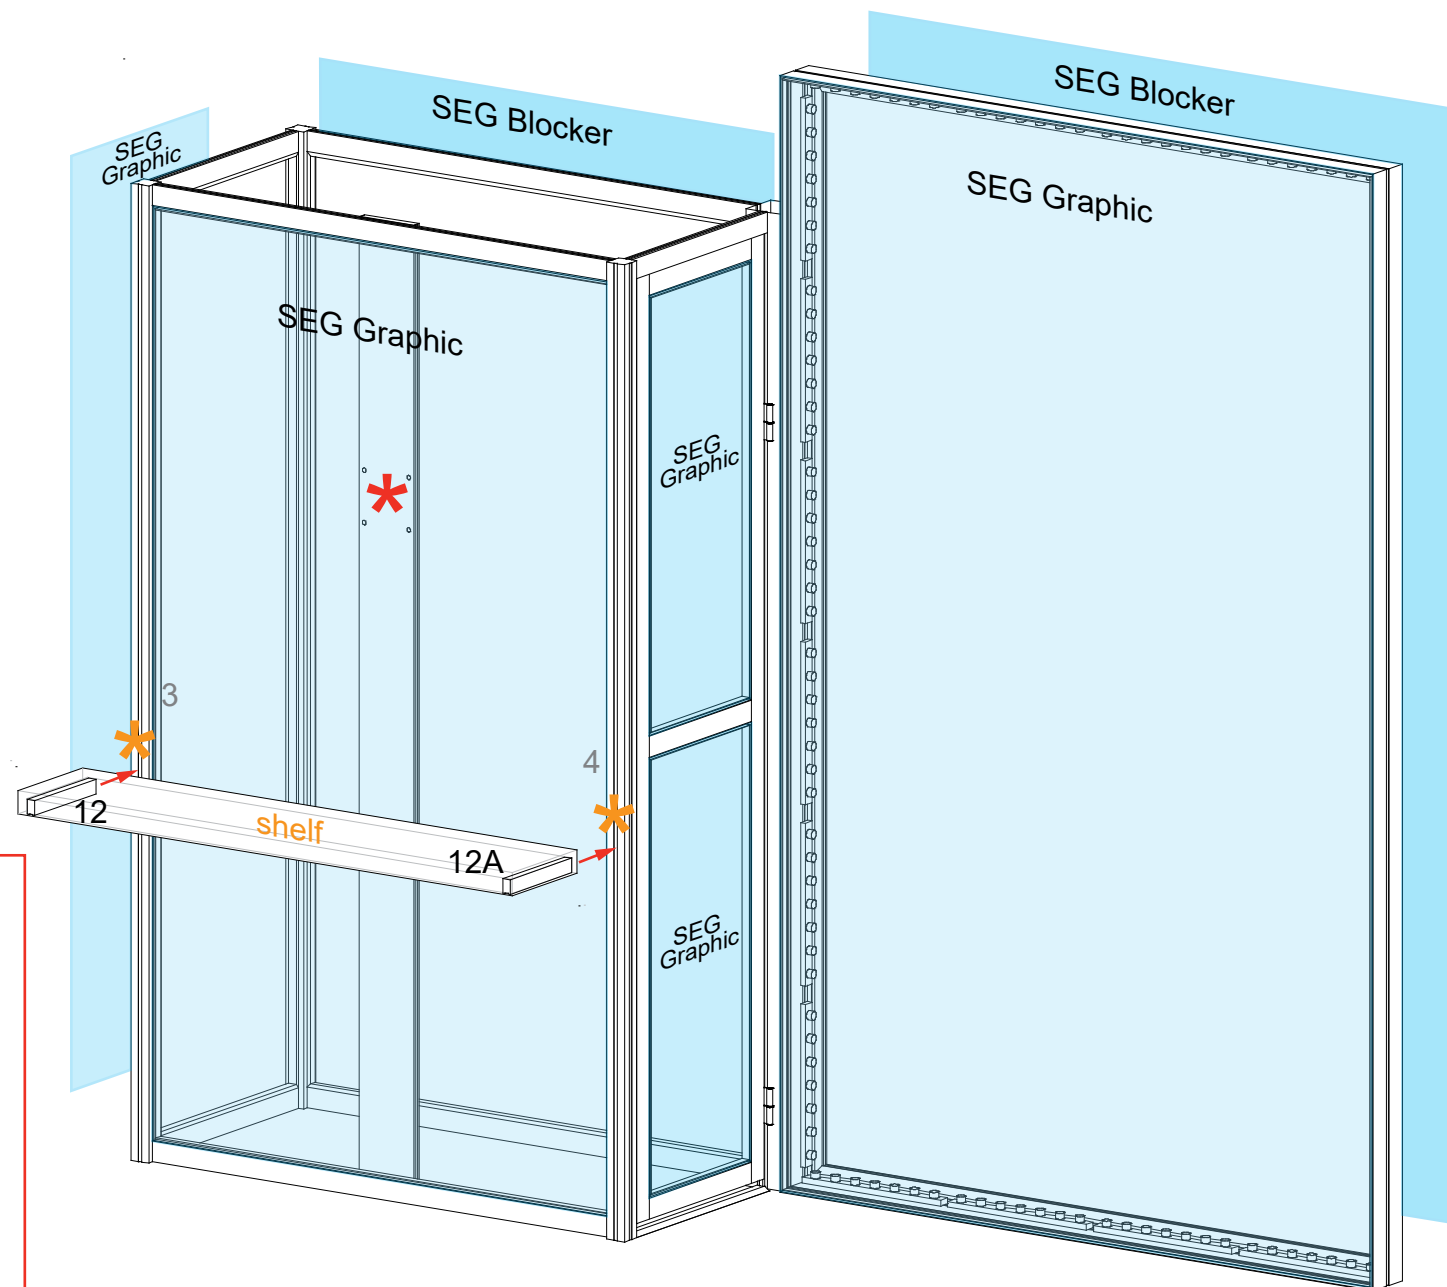

SEG Graphic Installation

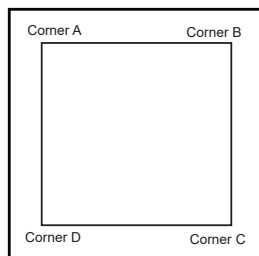

It is important to first insert graphic into each alternate corner then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.



Step 1
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.



Step 2
Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D, to complete the installation of the corners.

Graphic Removal




To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.




Step 3
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

* Shelf Attachment

Insert lock into groove of vertical extrusion and tighten setscrew.

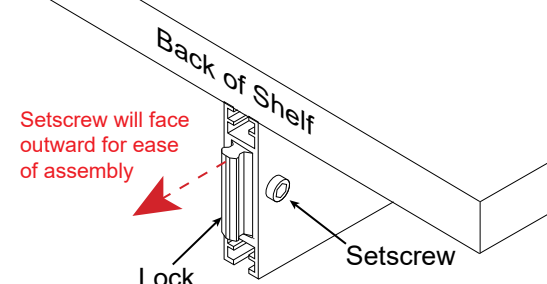

* Monitor Mount Attachment

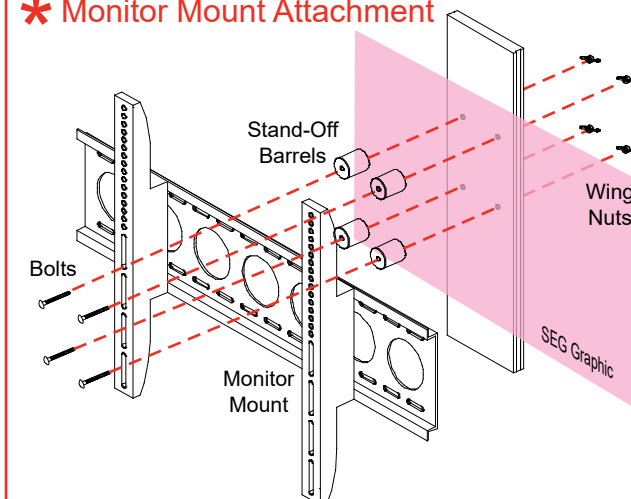

Attach monitor mount to Vertical extrusion using standoff barrels, bolts and wing nuts.

Note: Mount attaches *through* SEG graphic.

AERO


Using Your Setup Instructions

The Aero Setup Instructions are created specifically for your configuration. The instructions include an exploded view of the frame which is sequentially labeled. We encourage you to review the instructions before attempting to assemble your exhibit.



Connections are kept very simple; no tools required. Everything assembles with push-button connectors.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

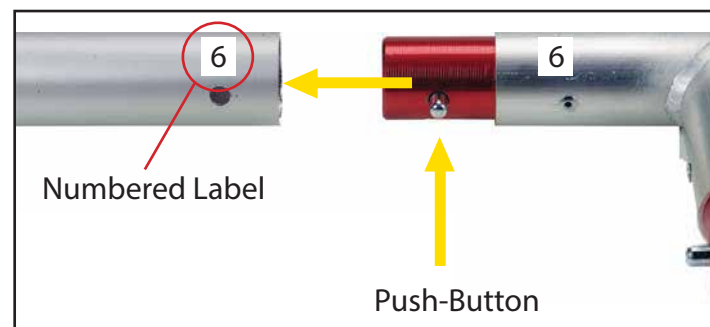


Connections are made by holding the button down and sliding the red tube into opposing tube until button locks into the hole of the opposing tube. To disassemble, push button and pull or twist extrusions apart.

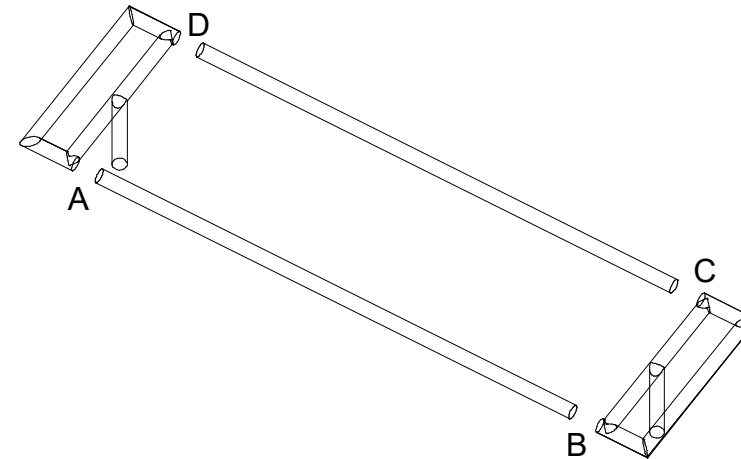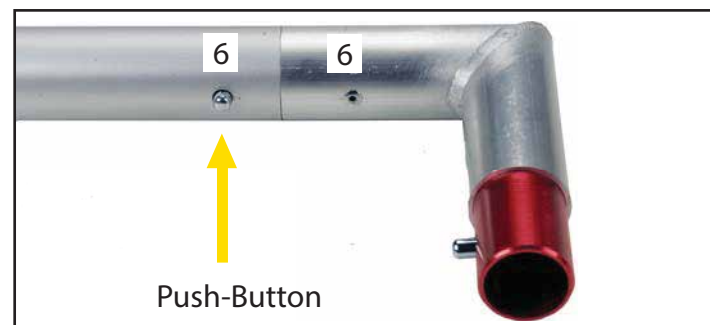


Steps:

- 1) Connect Aero frame in alphabetical order as shown.
- 2) Apply pillowcase graphic to frame.
- 3) Attach Canopy Mounts to verticals [3,4].

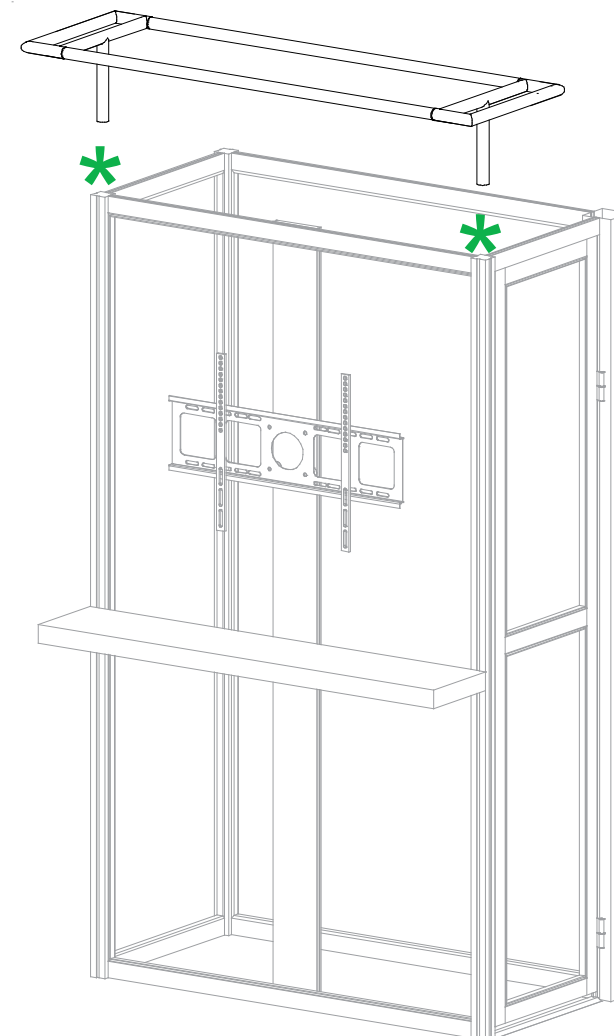

Canopy Mount Attachment

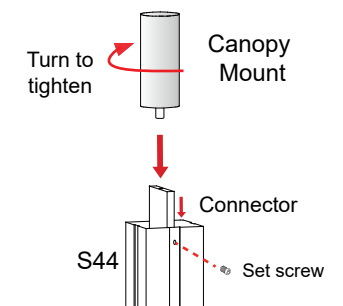

Attach connector to top of vertical extrusion; tighten set screws to secure.

Insert Canopy Mount into threaded hole in top of connector; turn barrel clockwise to tighten in place.

* Canopy Installation

Slide assembled aero canopy supports over installed mount barrels.

Canopy Mount