

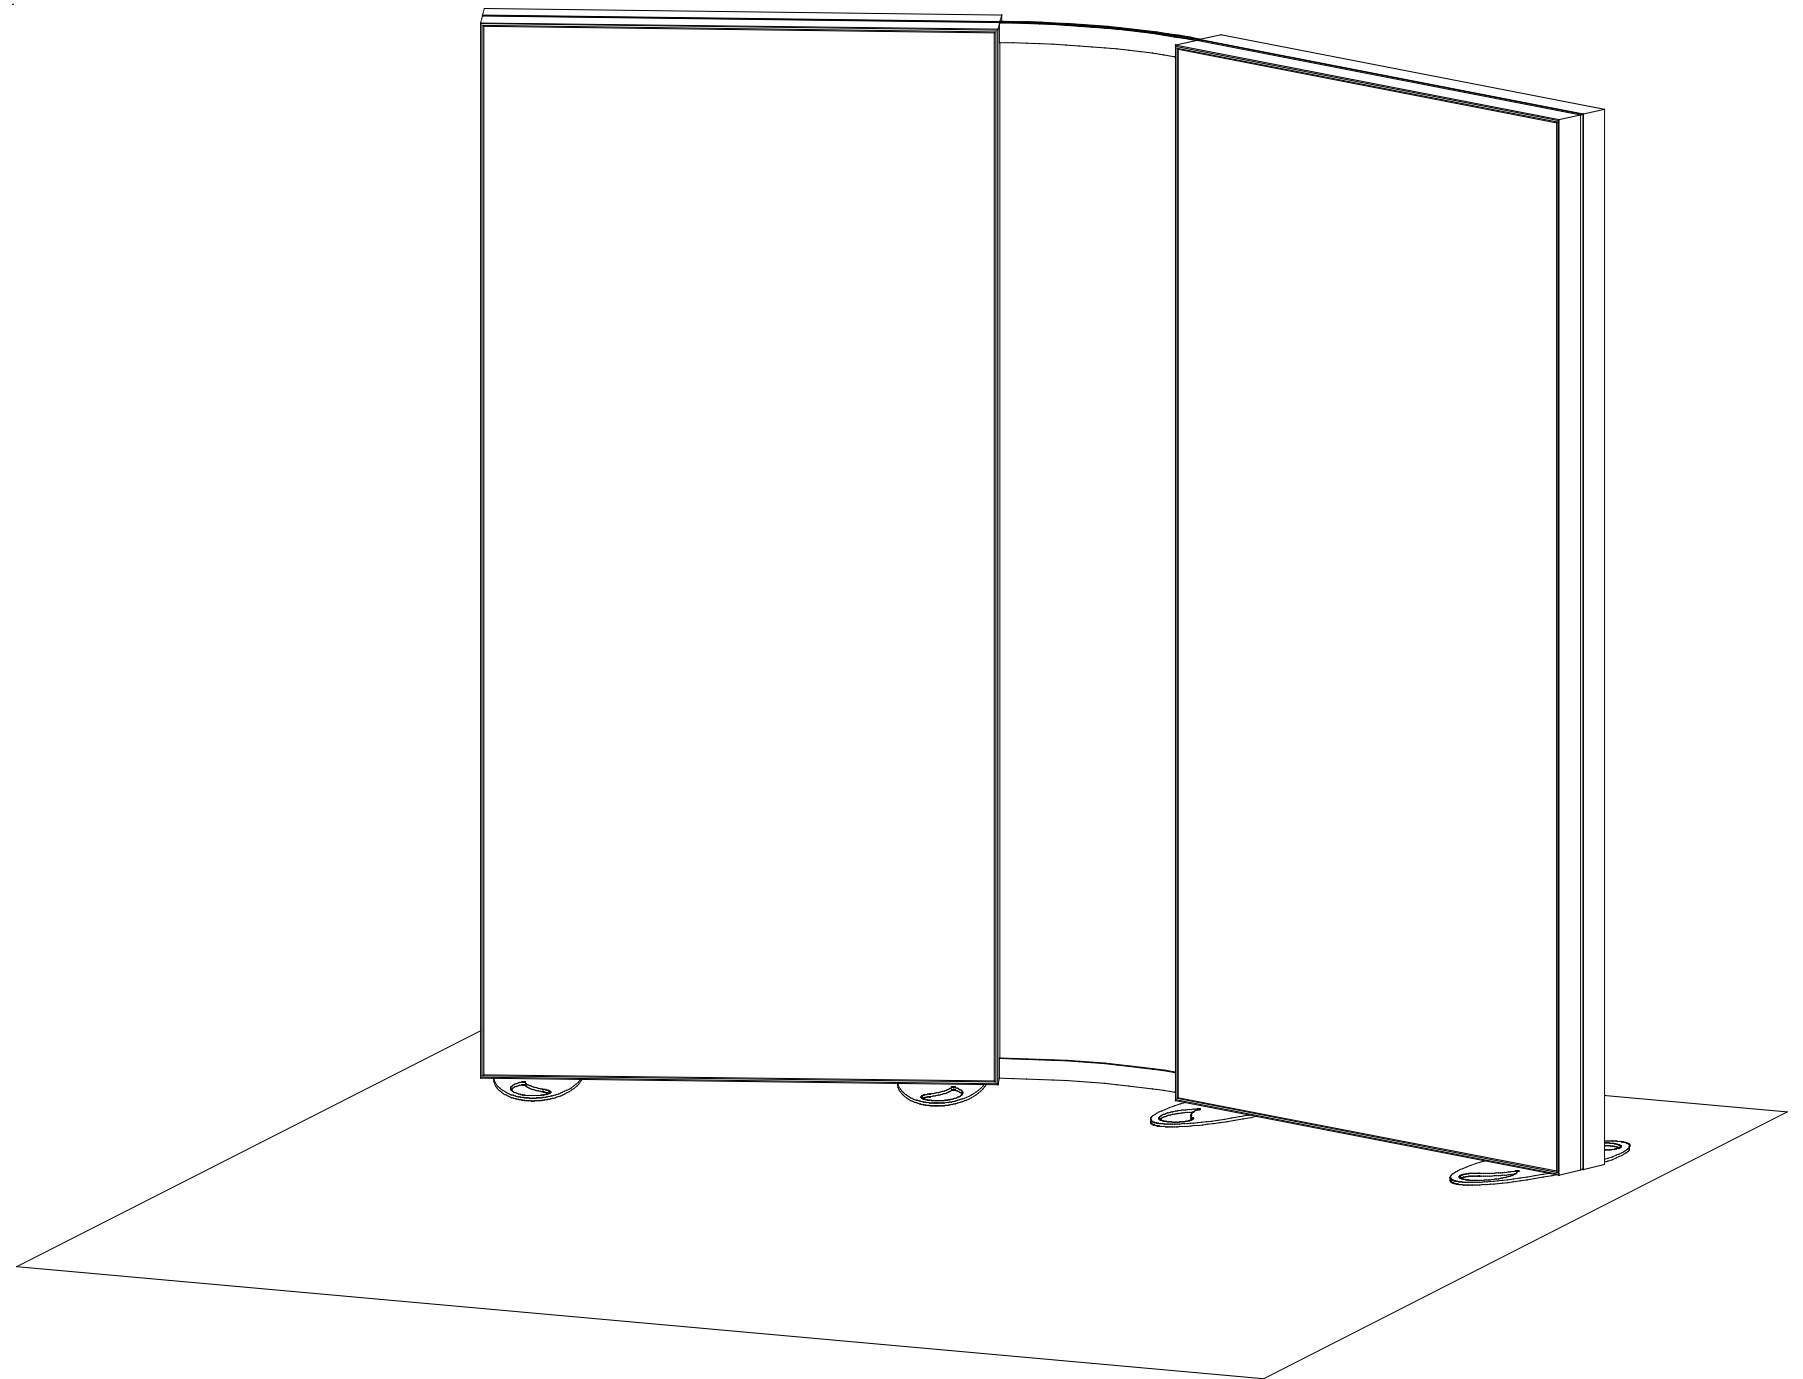


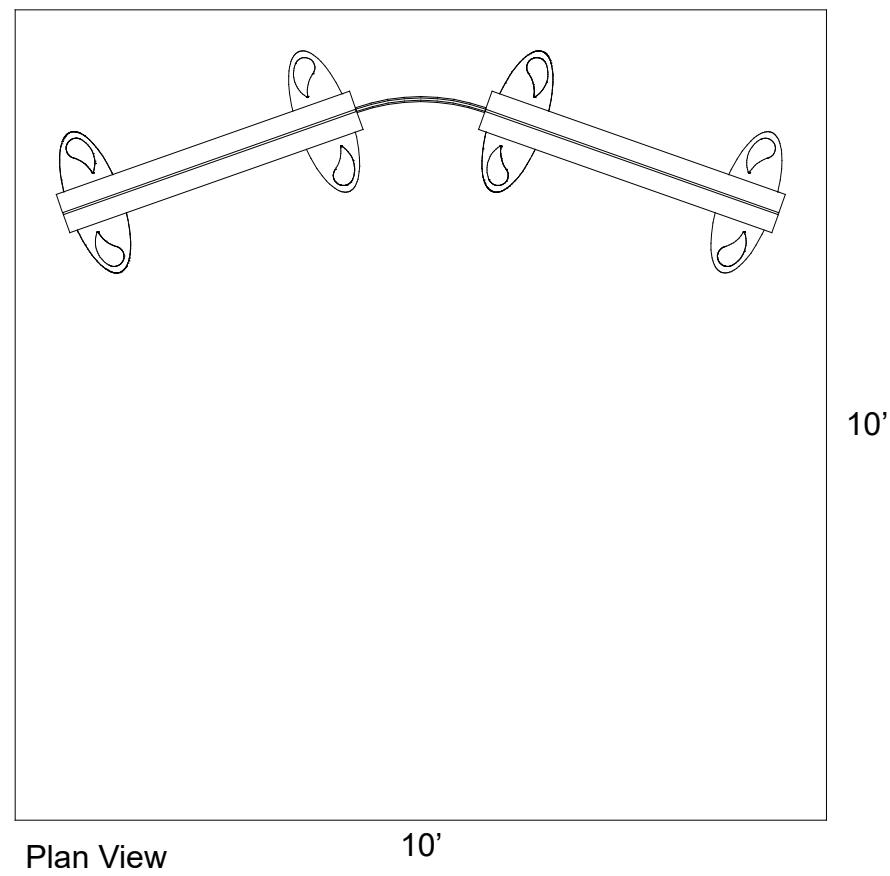


SETUP INSTRUCTIONS

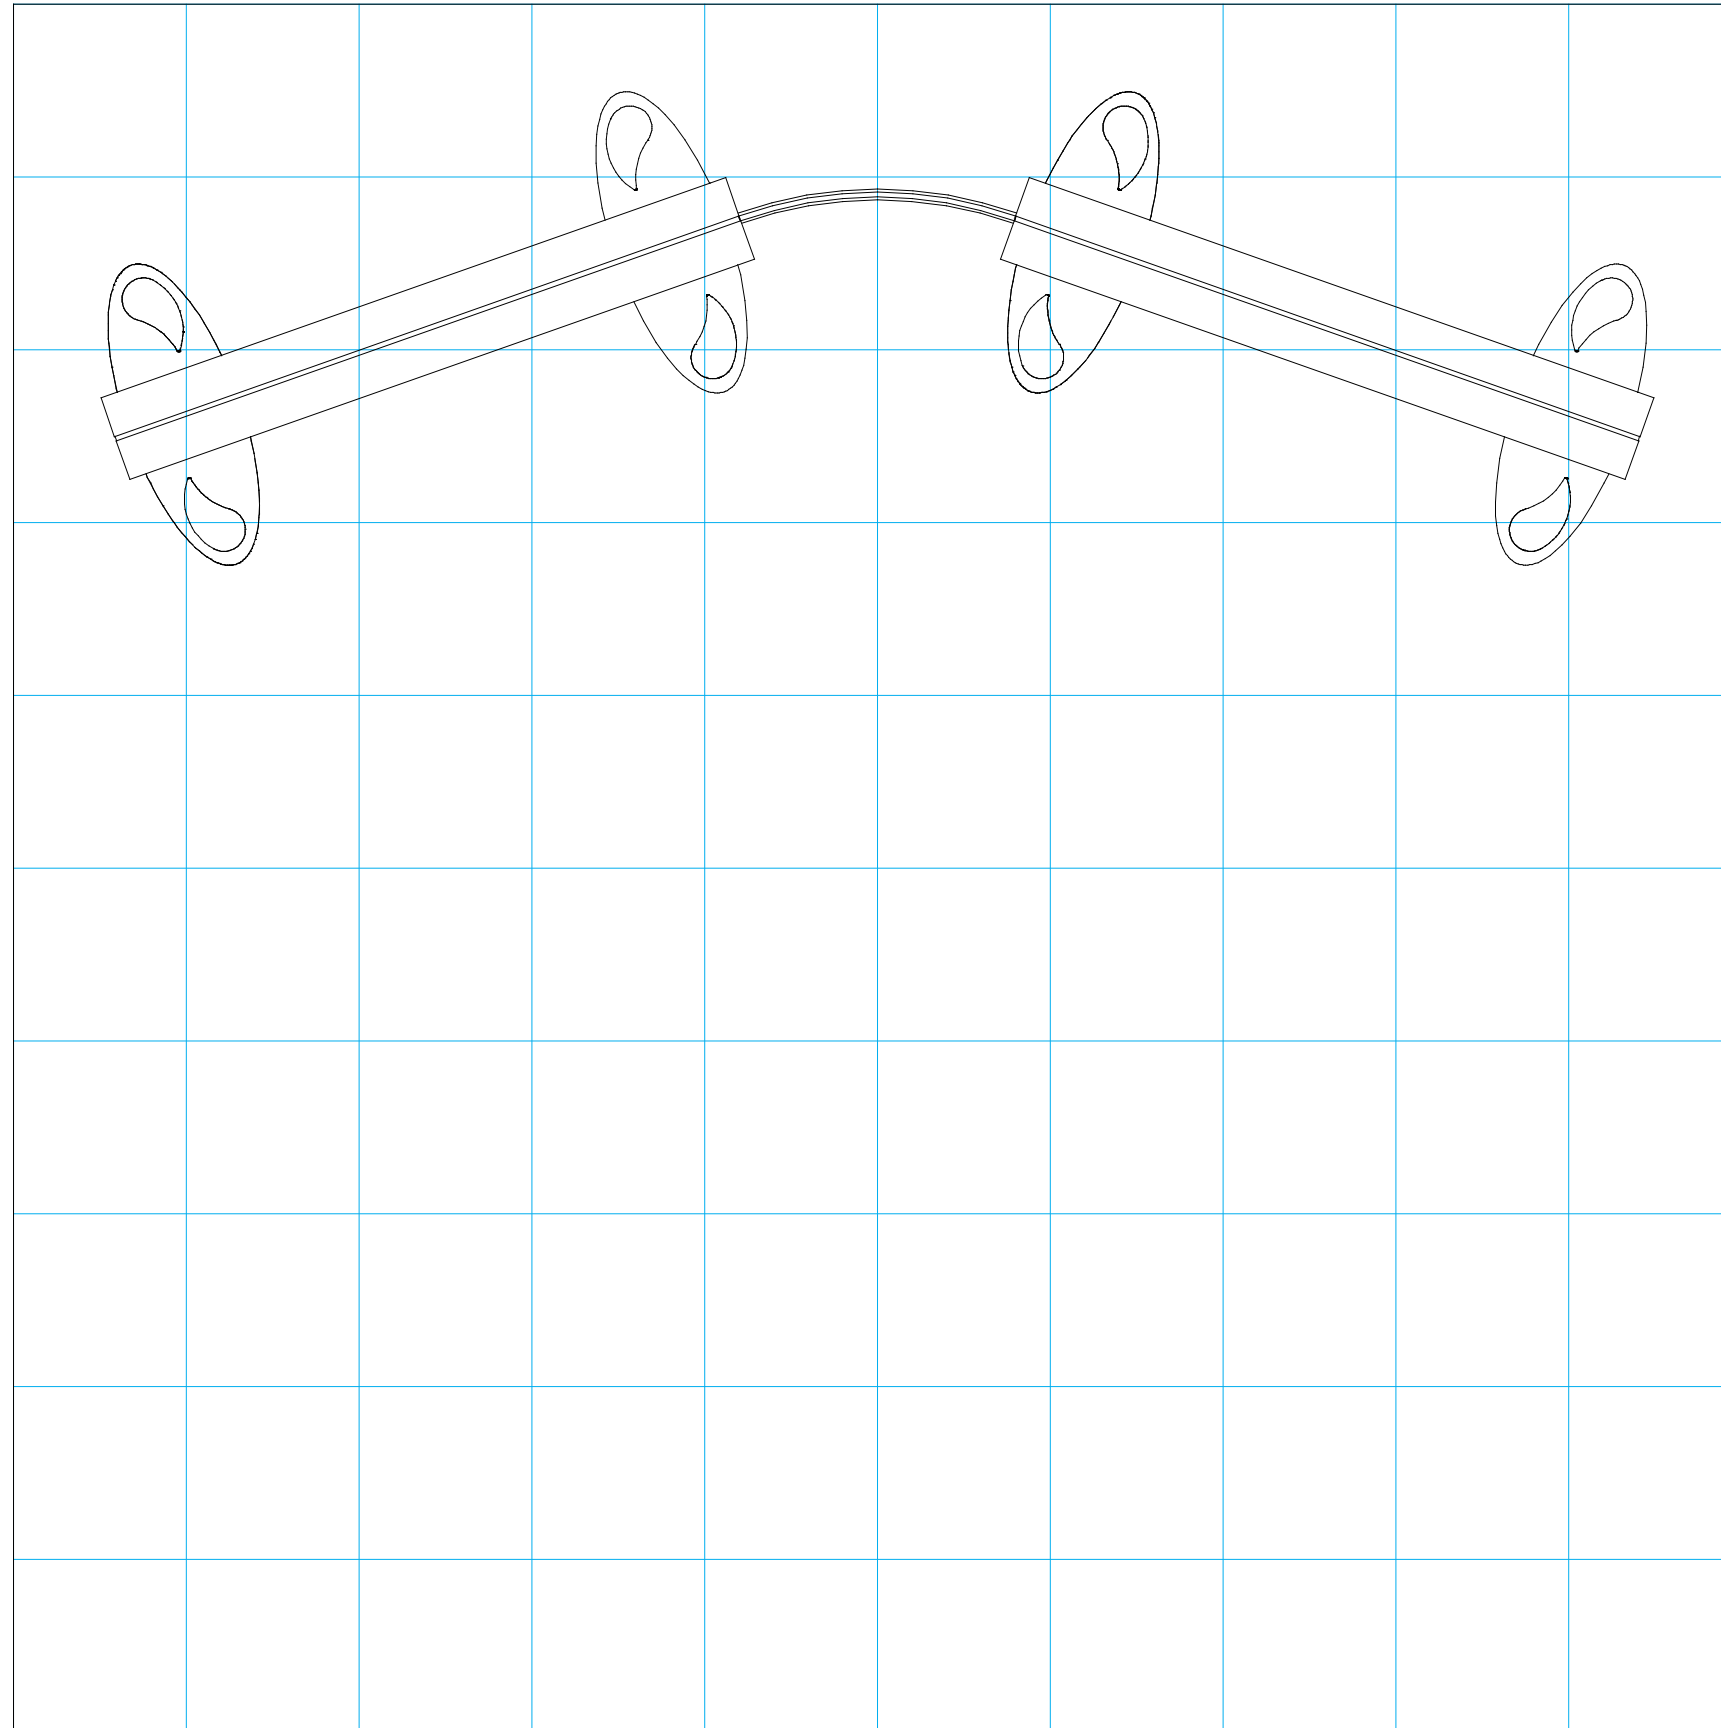


= 1 sq foot

General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

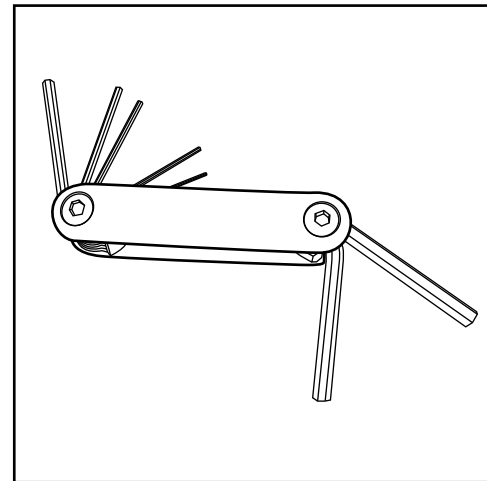

Hex Tool - Essential for Assembly

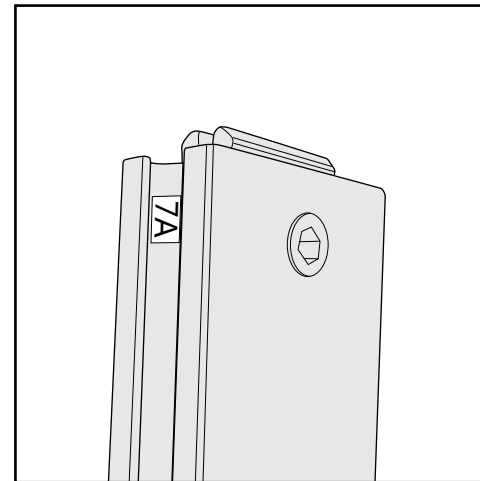

Part Identification - Numbering




WARNING

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

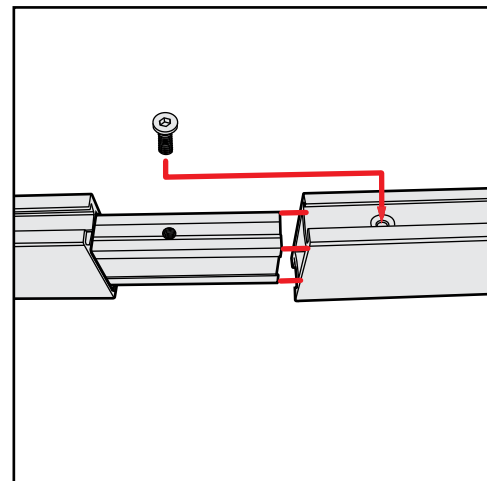

Spline Connection

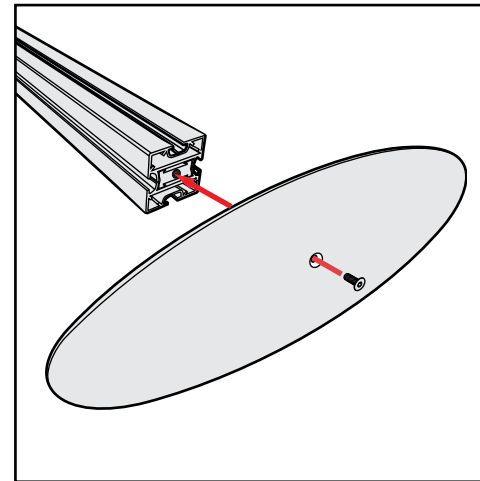


Base Plate & Extrusion Connection




DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED

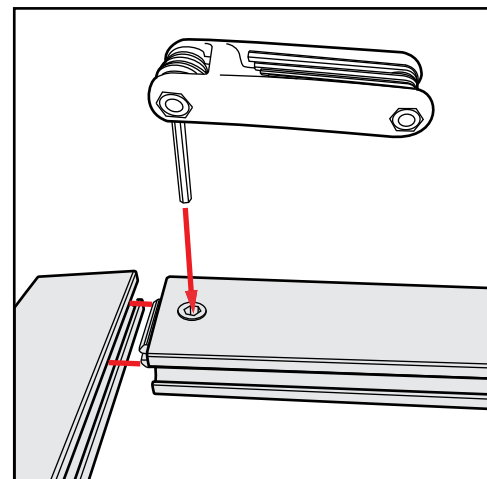

Extrusion & Lock Connection

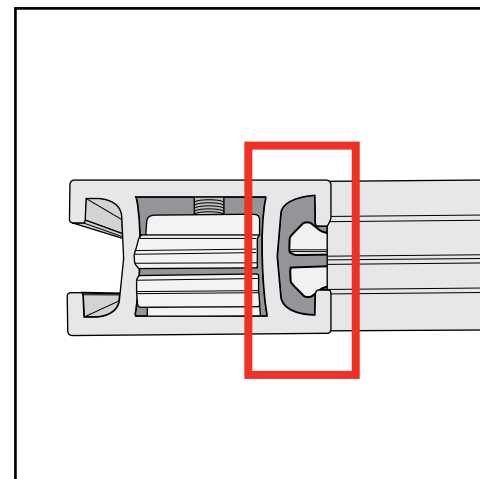



Engaged Lock



ALL CONNECTIONS MUST
BE TIGHTLY SECURED

ECO Panel Install


- 1 Place ECO panel together with a vertical offset, slide down to lock connector in place.
- 2 Panel Corner Connectors are installed just like ECO panels. Remove by off-setting top lock clips horizontally followed by separating vertically.

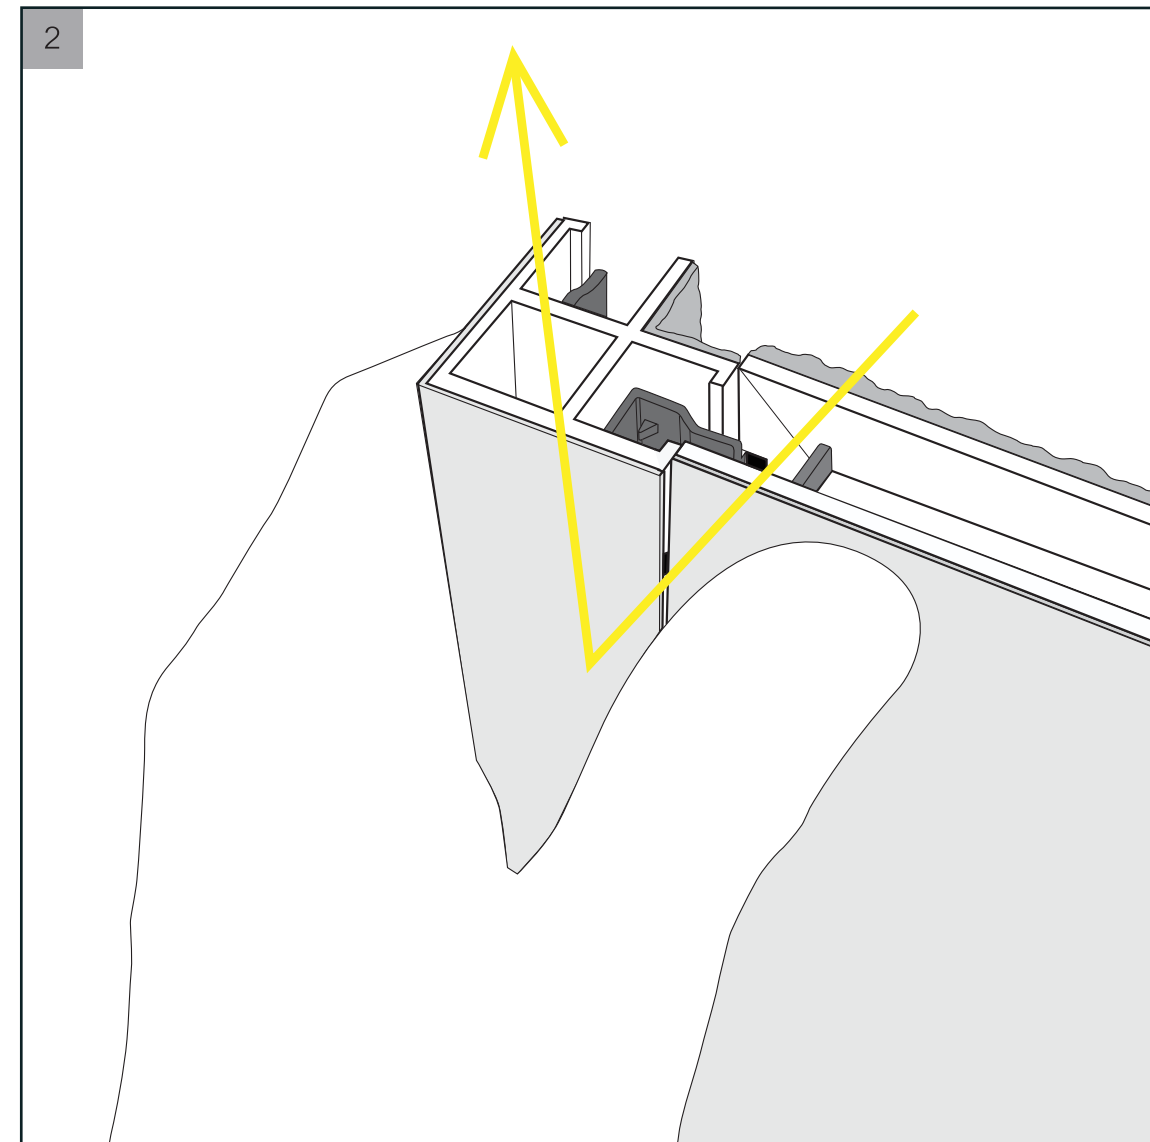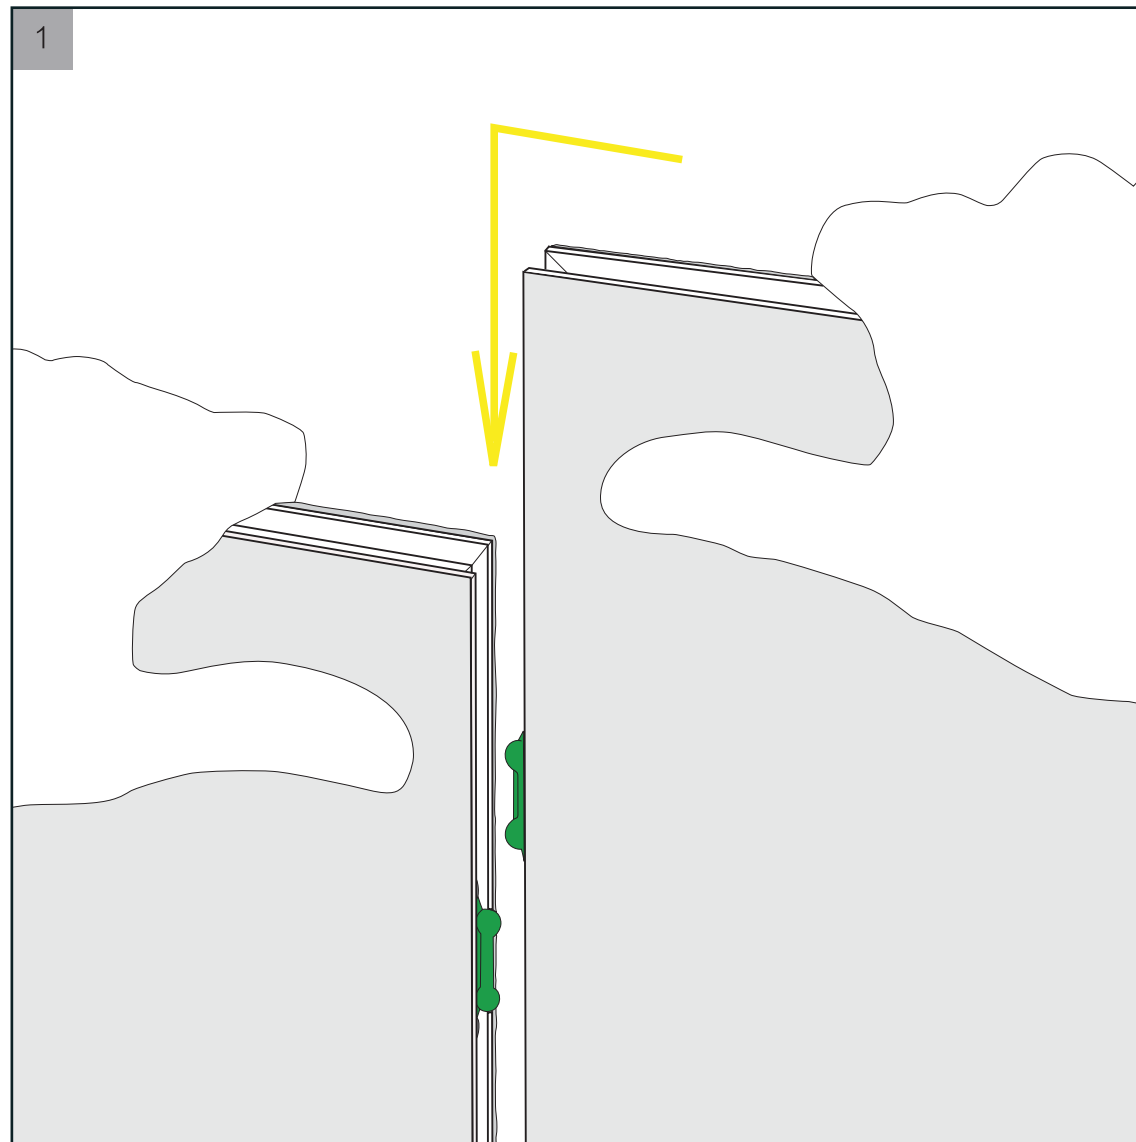


Straight Connection

When assembling frame, first attach all **straight connectors**, then attach **corner connectors**.

- 1) Place extrusions end-to-end.
- 2) Loosen all knobs, then slide **straight connectors** across the seam of extrusions.
- 3) Tighten all knobs to secure connection.

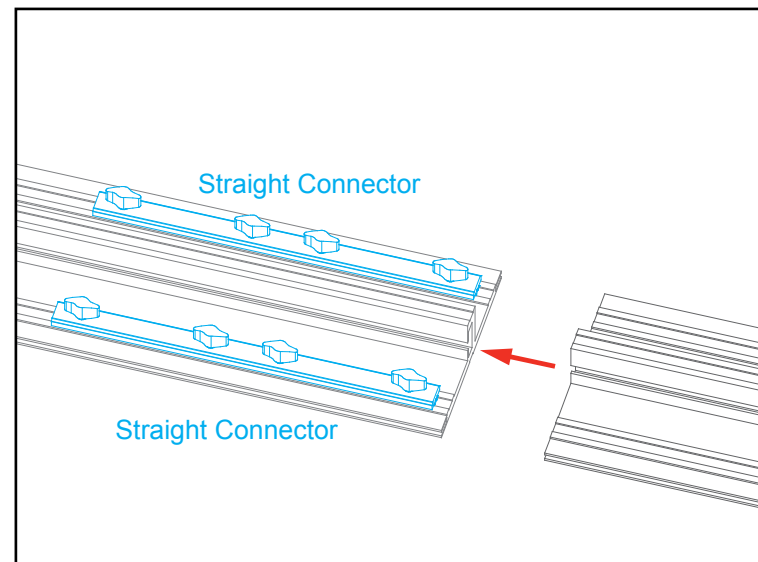

Slide both connectors across seam of extrusions.
Tighten all knobs.

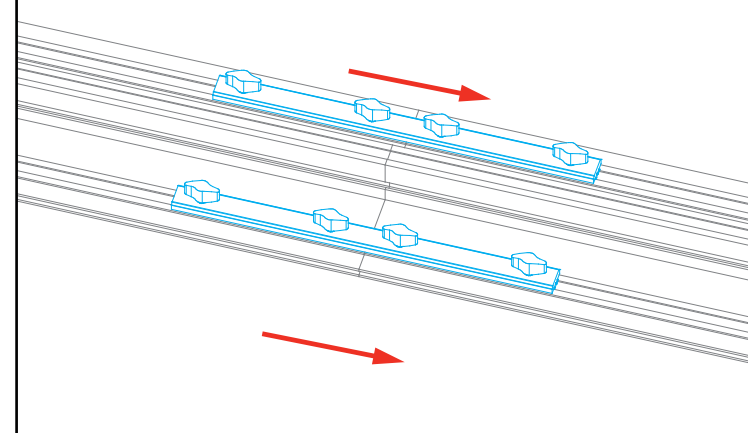

All knobs must be tightened securely to ensure a proper connection.

Disassembly

- 1) Loosen all knobs.
- 2) Slide connectors off of one extrusion.
- 3) Tighten knobs to prevent loss during packing & shipping.


Keep straight connectors in groove of extrusion. Do not remove connectors during disassembly.

Corner Connection


- 1) Loosen knobs, then slide vertical extrusions onto **corner connectors** of **lower** horizontal extrusion.
- 2) Slide **corner connectors** of **upper** horizontal extrusion into grooves of vertical extrusions.
- 3) Tighten all knobs to secure connection.

Disassembly

- 1) Loosen knobs on vertical extrusions.
- 2) Slide the vertical extrusions off of **corner connectors** on lower and upper horizontal extrusions.

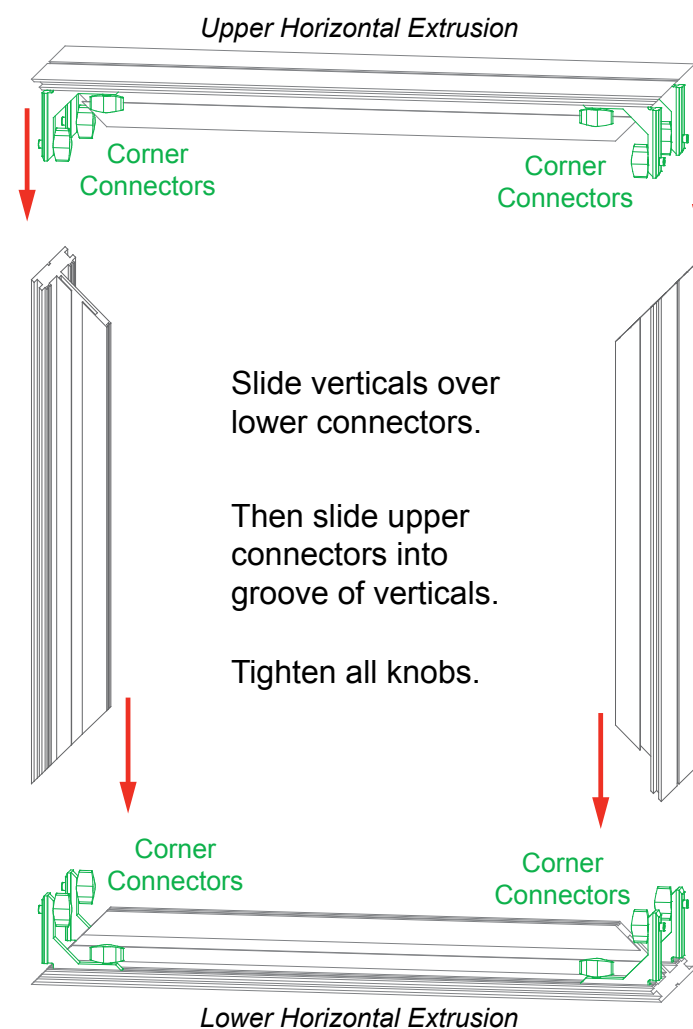


Adjust connectors if necessary to prevent gaps in connection.

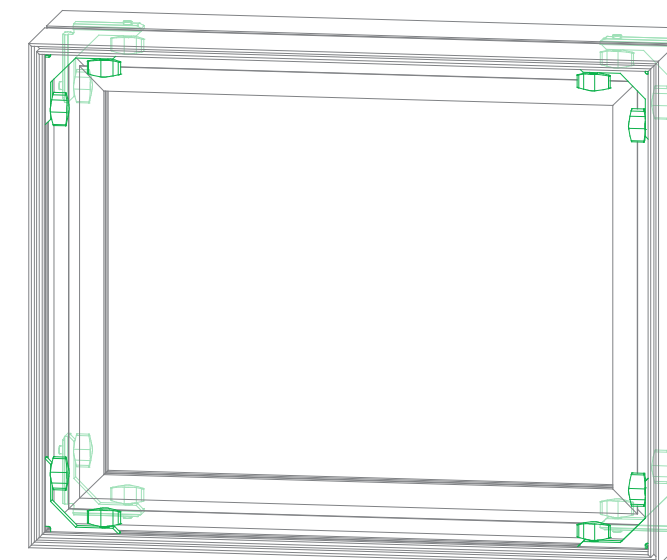

COMPLETED ASSEMBLY

All knobs must be tightened securely to ensure a proper connection.

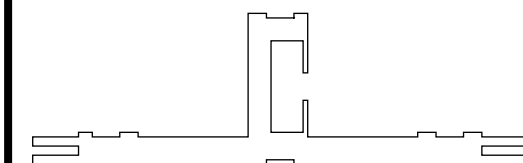


CEI152 Profile


SEG Graphic Installation *in 3 Steps*

The Perfect Fit


STEP 1: Attach Corners

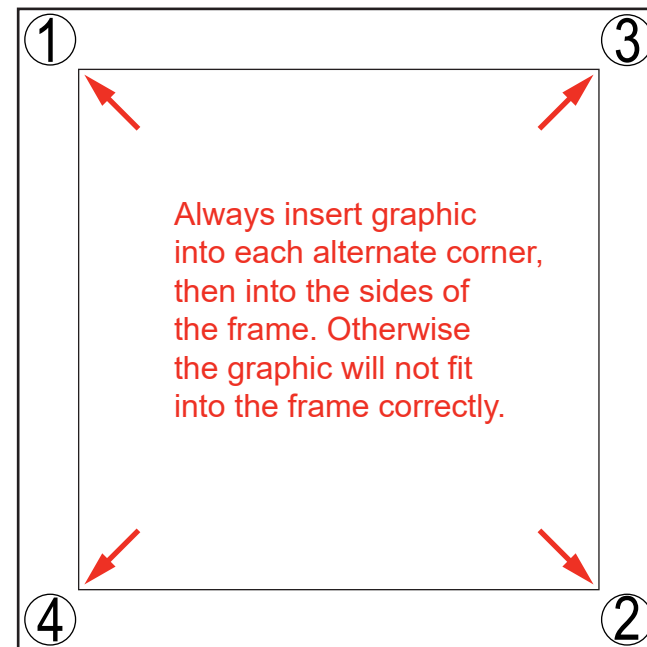

STEP 2: Attach Middle

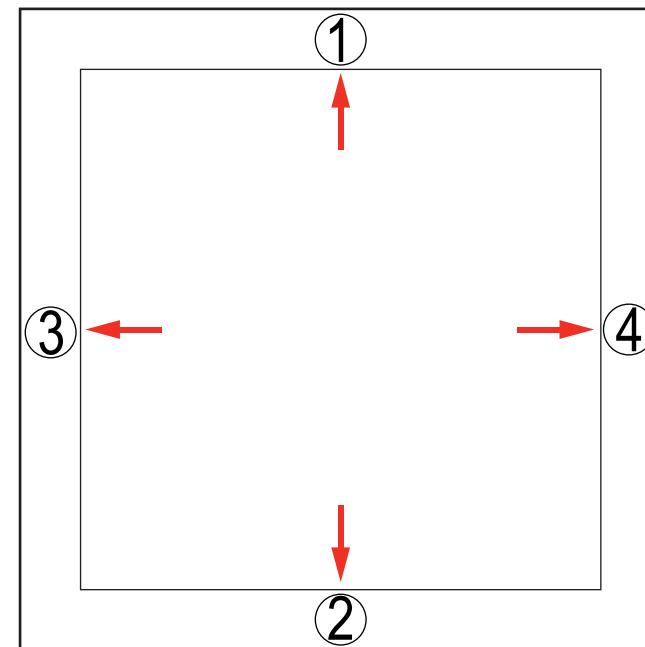

STEP 3: Attach Sides

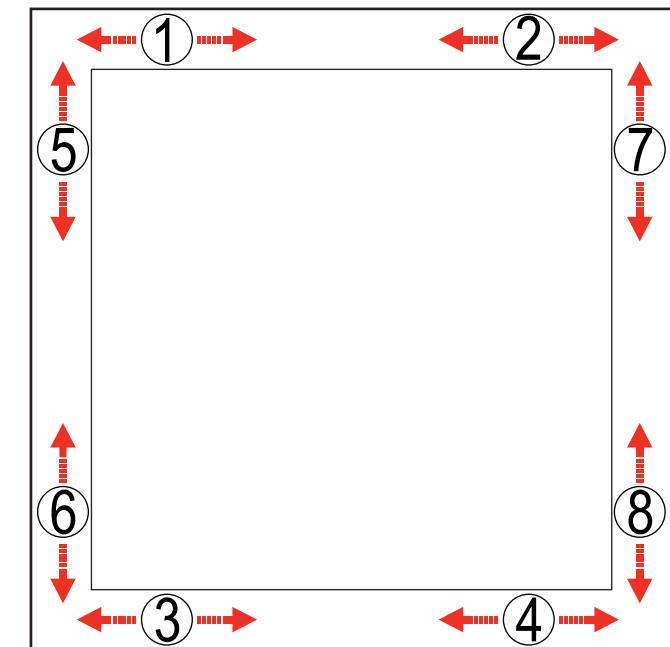

Insert narrow side of silicone welt into the channel at corner 1, with fabric to the outside.

Repeat for opposite corner 2, then corner 3, then corner 4.

Once corners are attached, press the middle of edge 1 into the channel. Then press middle of edge 2 into the channel on opposite side.

Repeat with edge 3 & 4.

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location 1. Repeat the process between center and corner at location 2.

Do the same for welt on opposite side, at locations 3 & 4. Then repeat for locations 5 & 6 and 7 & 8.

Once the welt is fully inserted on all sides, smooth out edges as needed for a perfect fit.



To remove the graphic from the frame, locate the fabric **pull tab**. Gently pull on the tab to remove the graphic.

Install video:




CRATE PACKING

Item	Qty.	Description
13	1	96"h CEI152 Vertical Extrusion
14	1	96"h CEI152 Vertical Extrusion
15	1	46"w CEI152 Horizontal Extrusion
16	1	46"w CEI152 Horizontal Extrusion
17	2	8" x 22" Base Plate
--	2	U-Channel



Steps:

Refer to the CEI152 Frame Assembly general information page.

- 1) Install U-Channel to horizontal [15]. See [U-Channel Attachment](#) detail.
- 2) Connect verticals [13,14] between horizontals [15,16].
- 3) Install Base Plates [17] to bottom of horizontal [15], using bolts & wing nuts.

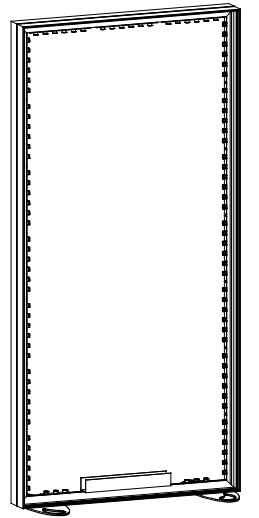

When assembled

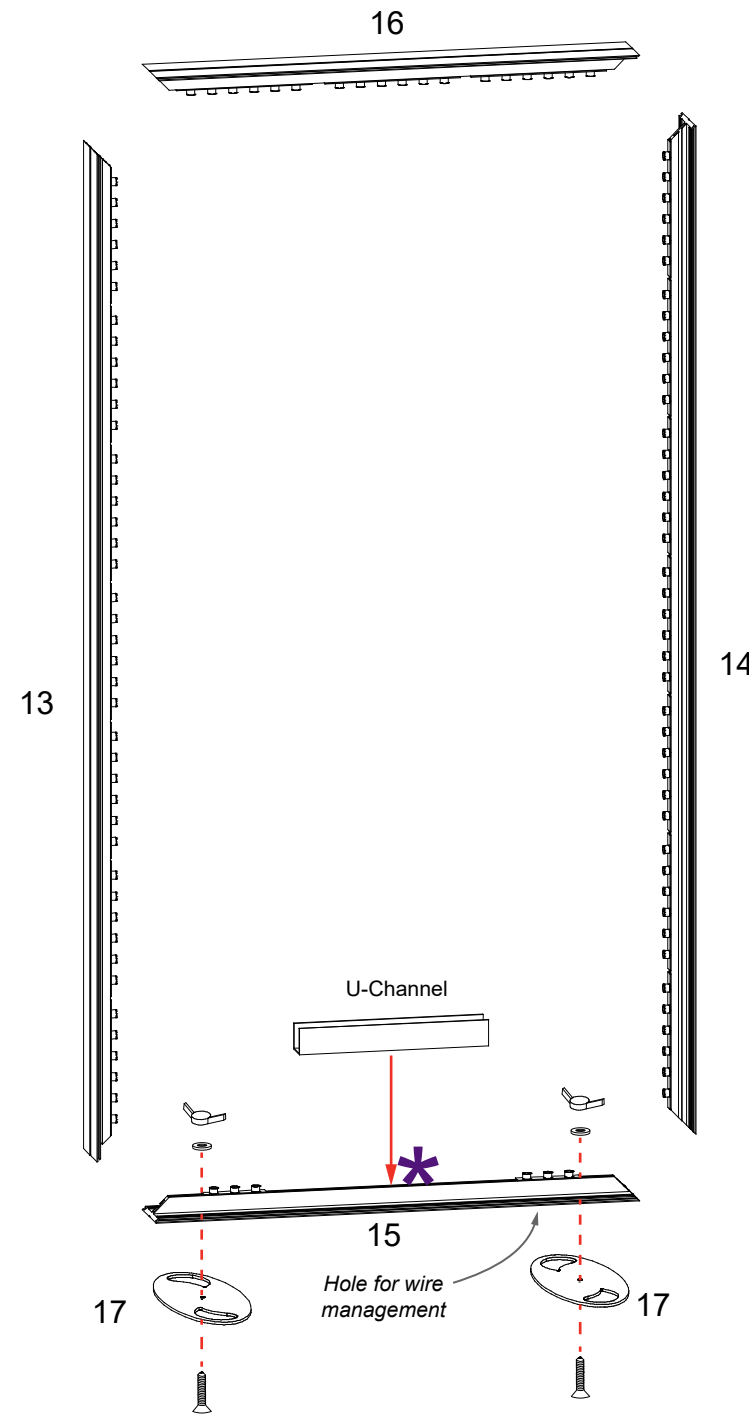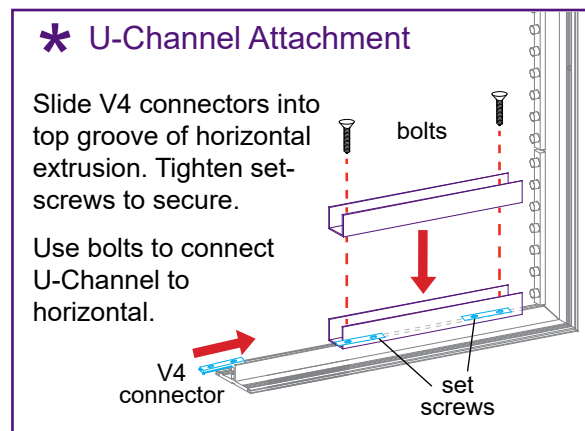


AS VIEWED FROM
INSIDE THE BOOTH

Item	Qty.	Description
18	1	96"h CEI152 Vertical Extrusion
19	1	96"h CEI152 Vertical Extrusion
20	1	46"w CEI152 Horizontal Extrusion
21	1	46"w CEI152 Horizontal Extrusion
22	2	8" x 22" Base Plate
--	2	U-Channel



Steps:

Refer to the CEI152 Frame Assembly general information page.

- 1) Install U-Channel to horizontal [20]. See [U-Channel Attachment](#) detail.
- 2) Connect verticals [18,19] between horizontals [20,21].
- 3) Install Base Plates [22] to bottom of horizontal [20], using bolts & wing nuts.


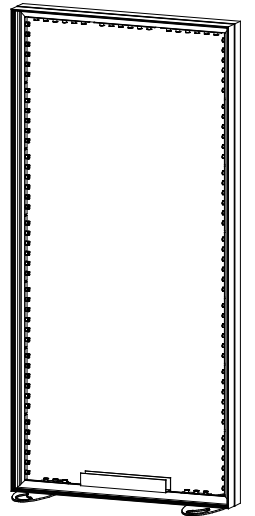


When assembled

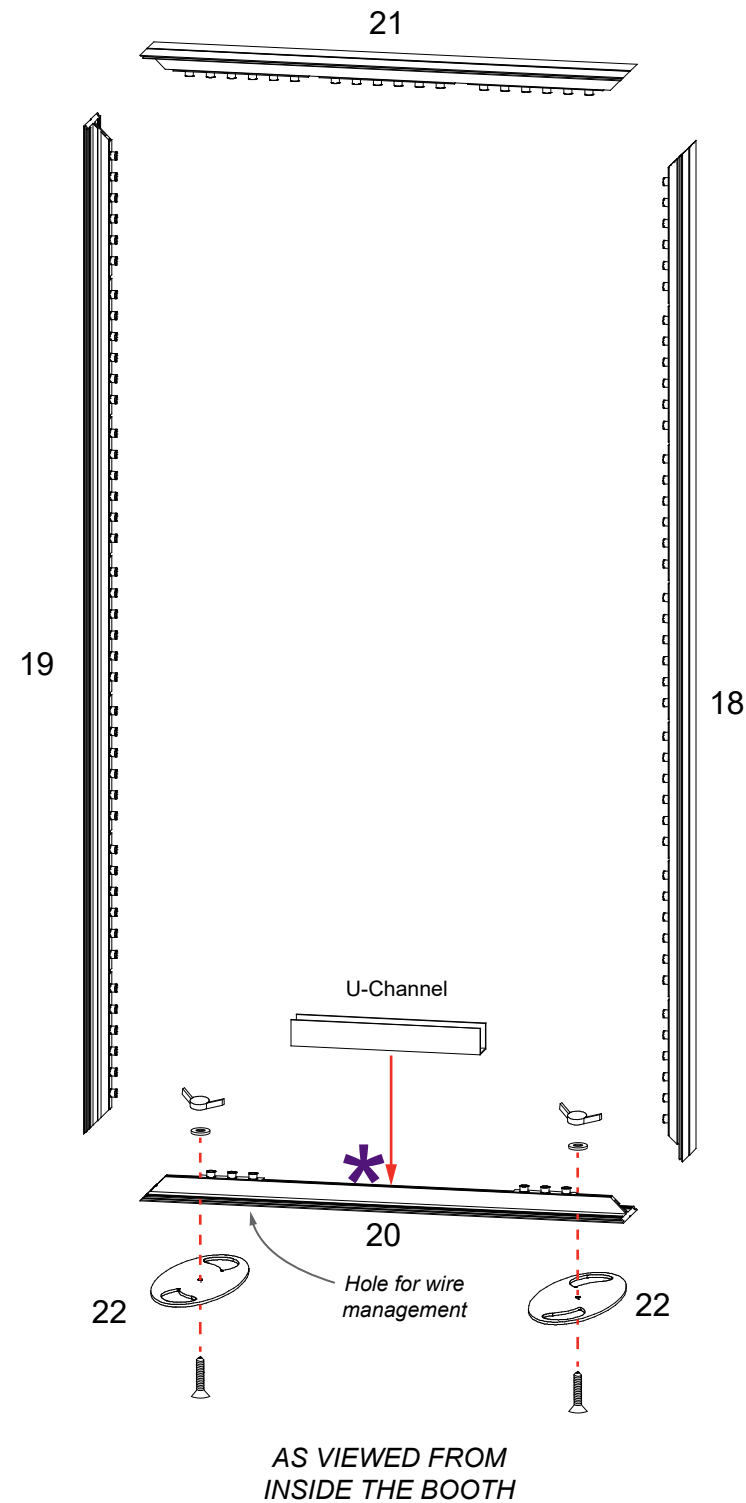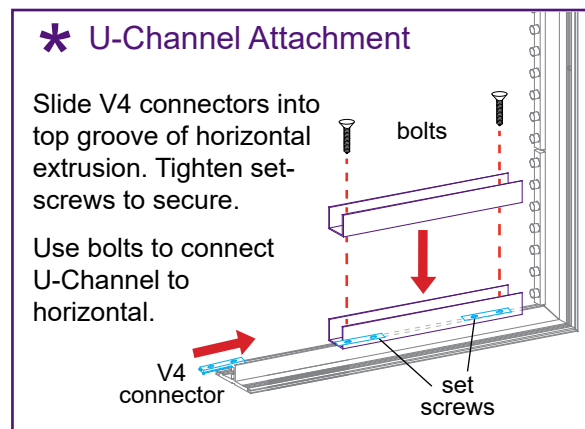

Steps:

- 1) Connect power cords to Supernova lights as shown.

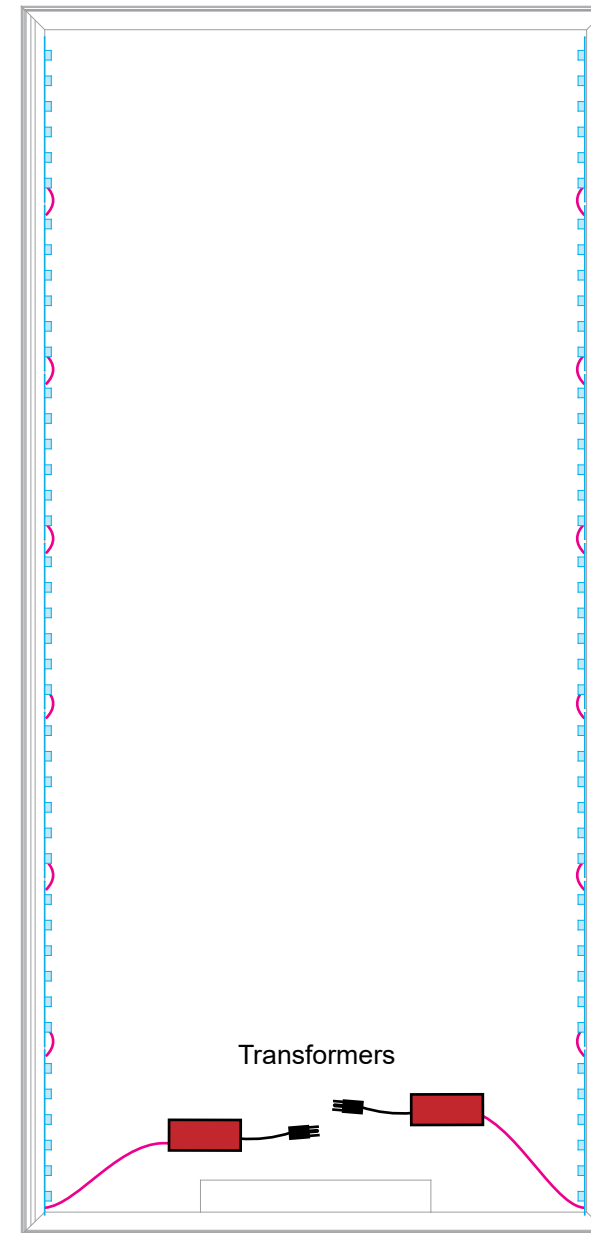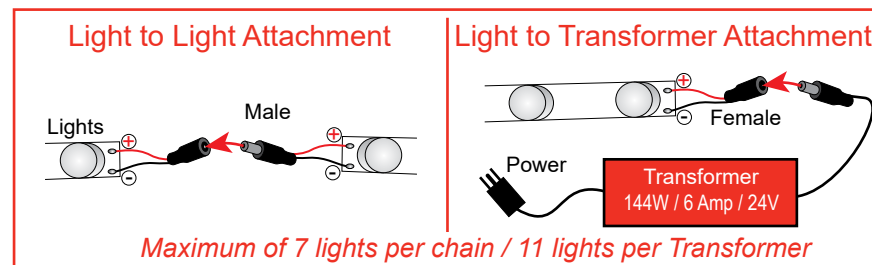


LEFT & RIGHT LIGHTBOXES

Item	Qty.	Description
10	2	19.722"w Z45 curved Horizontal Extrusion

- Steps:
- 1) Assemble horizontals [10] between verticals [14,19], inserting **Infill**.
 - 2) Apply SEG Graphics to lightbox frames.

Refer to the SEG Installation general information page.

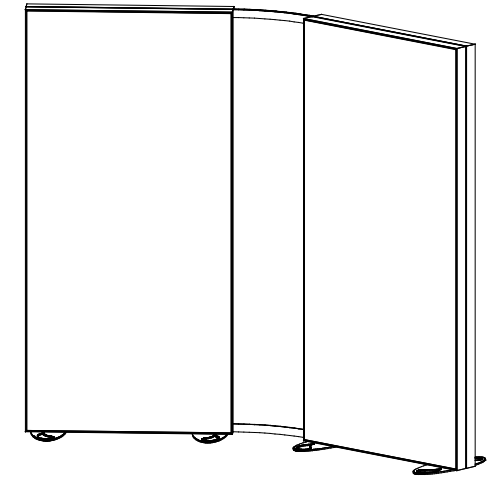

Completed Assembly

