

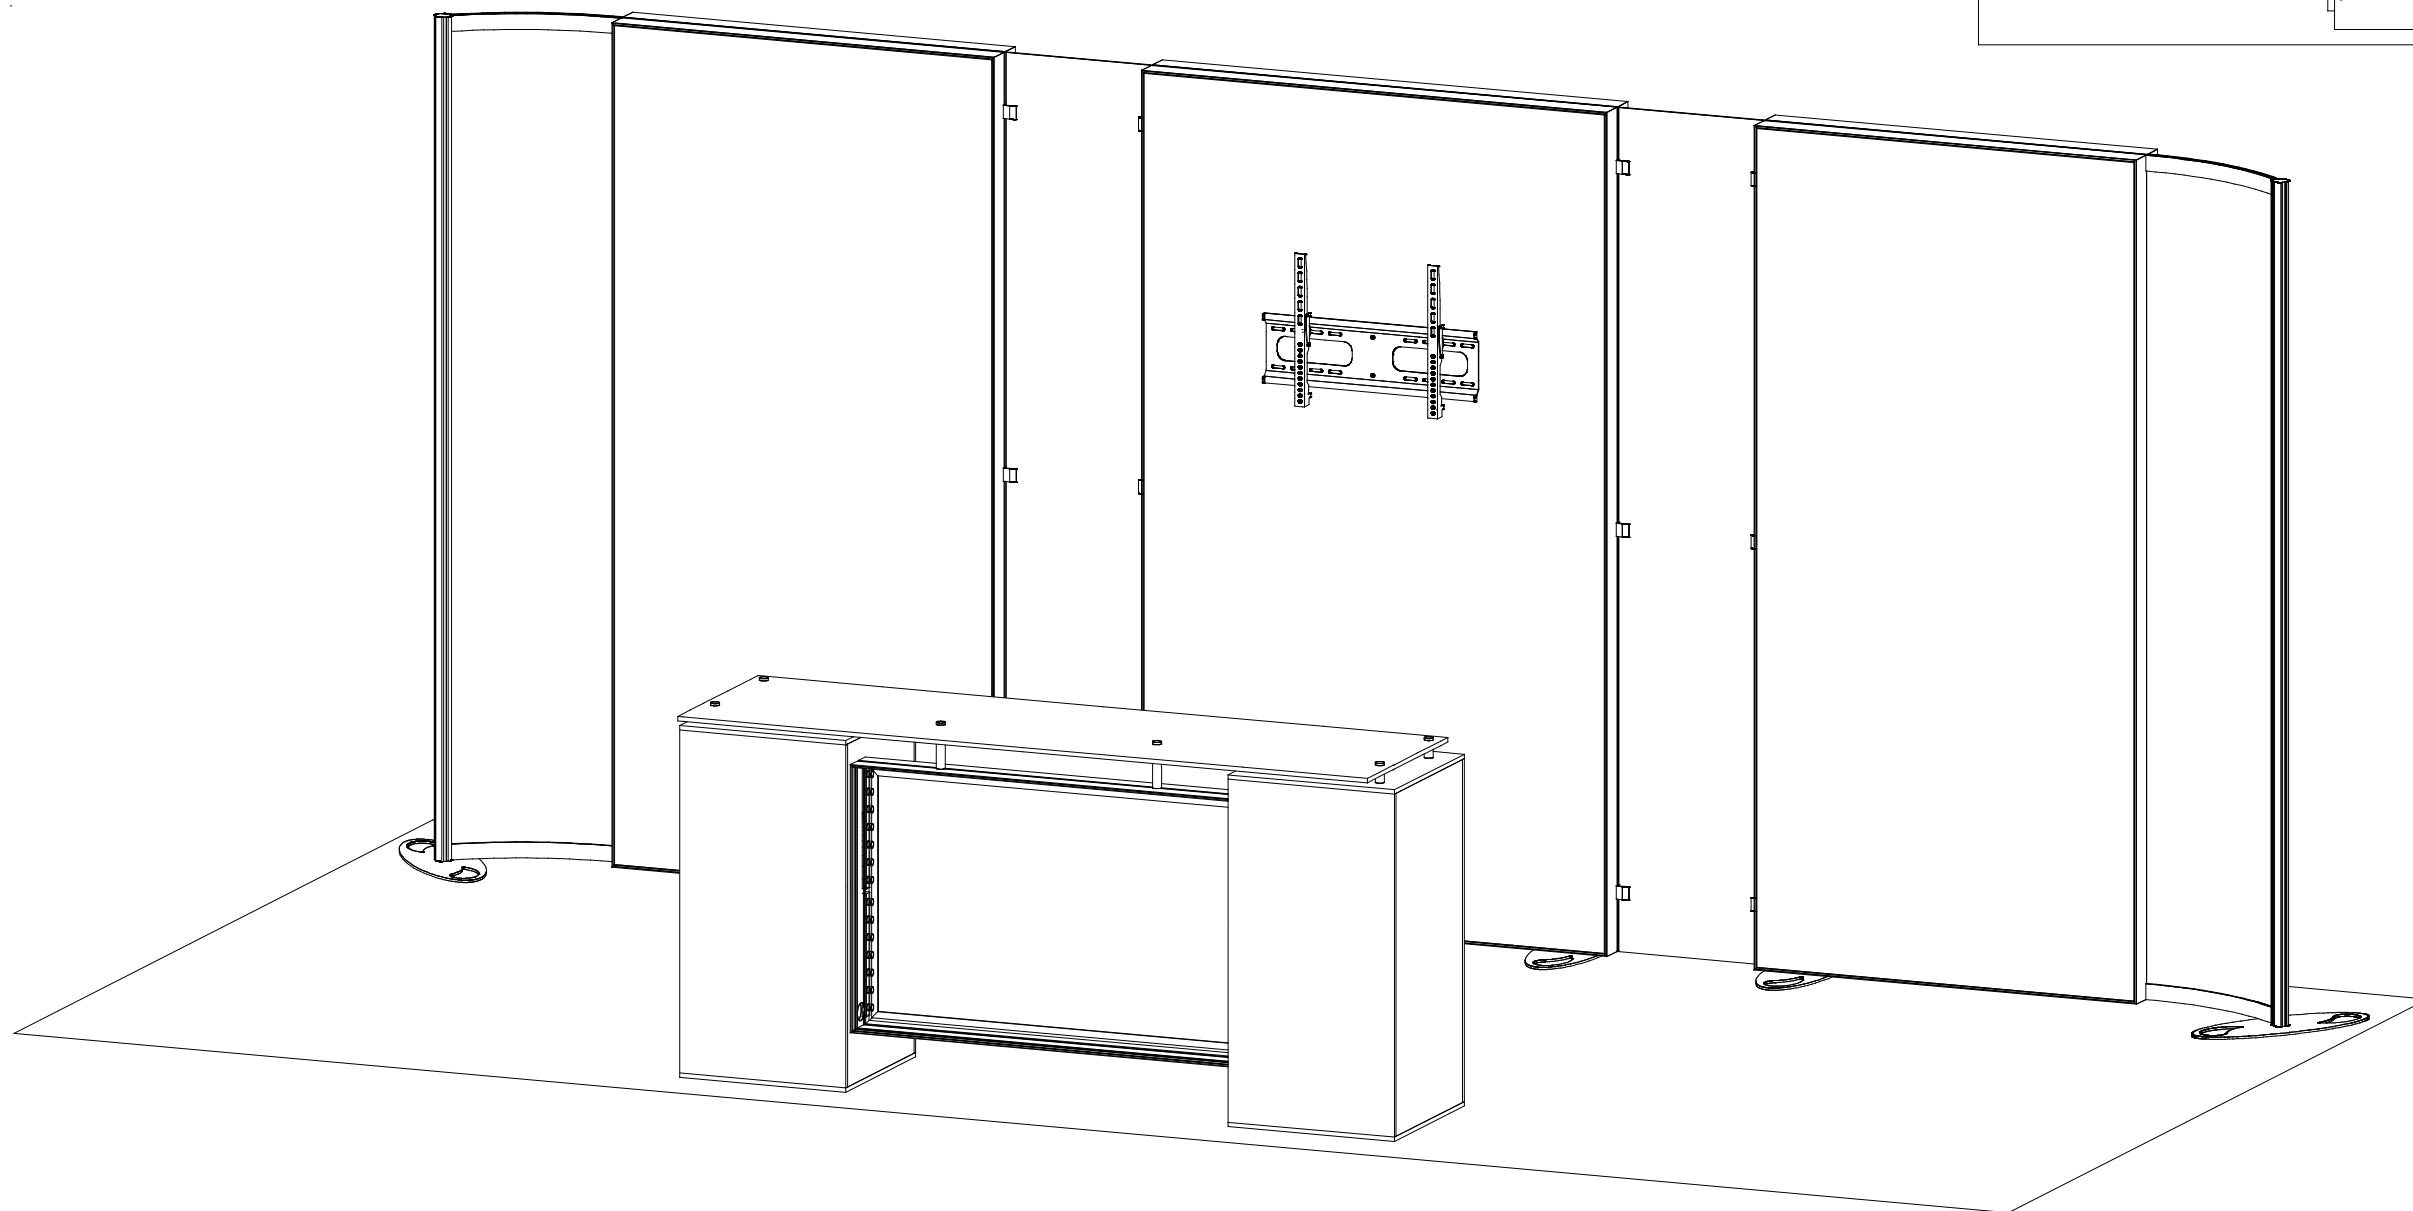


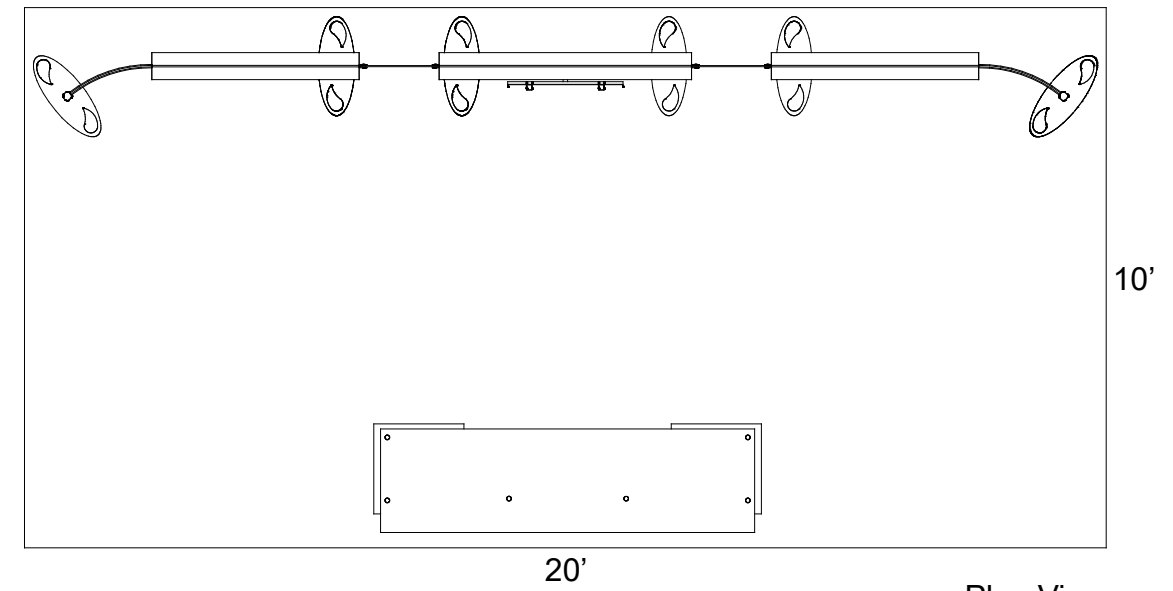


SETUP INSTRUCTIONS

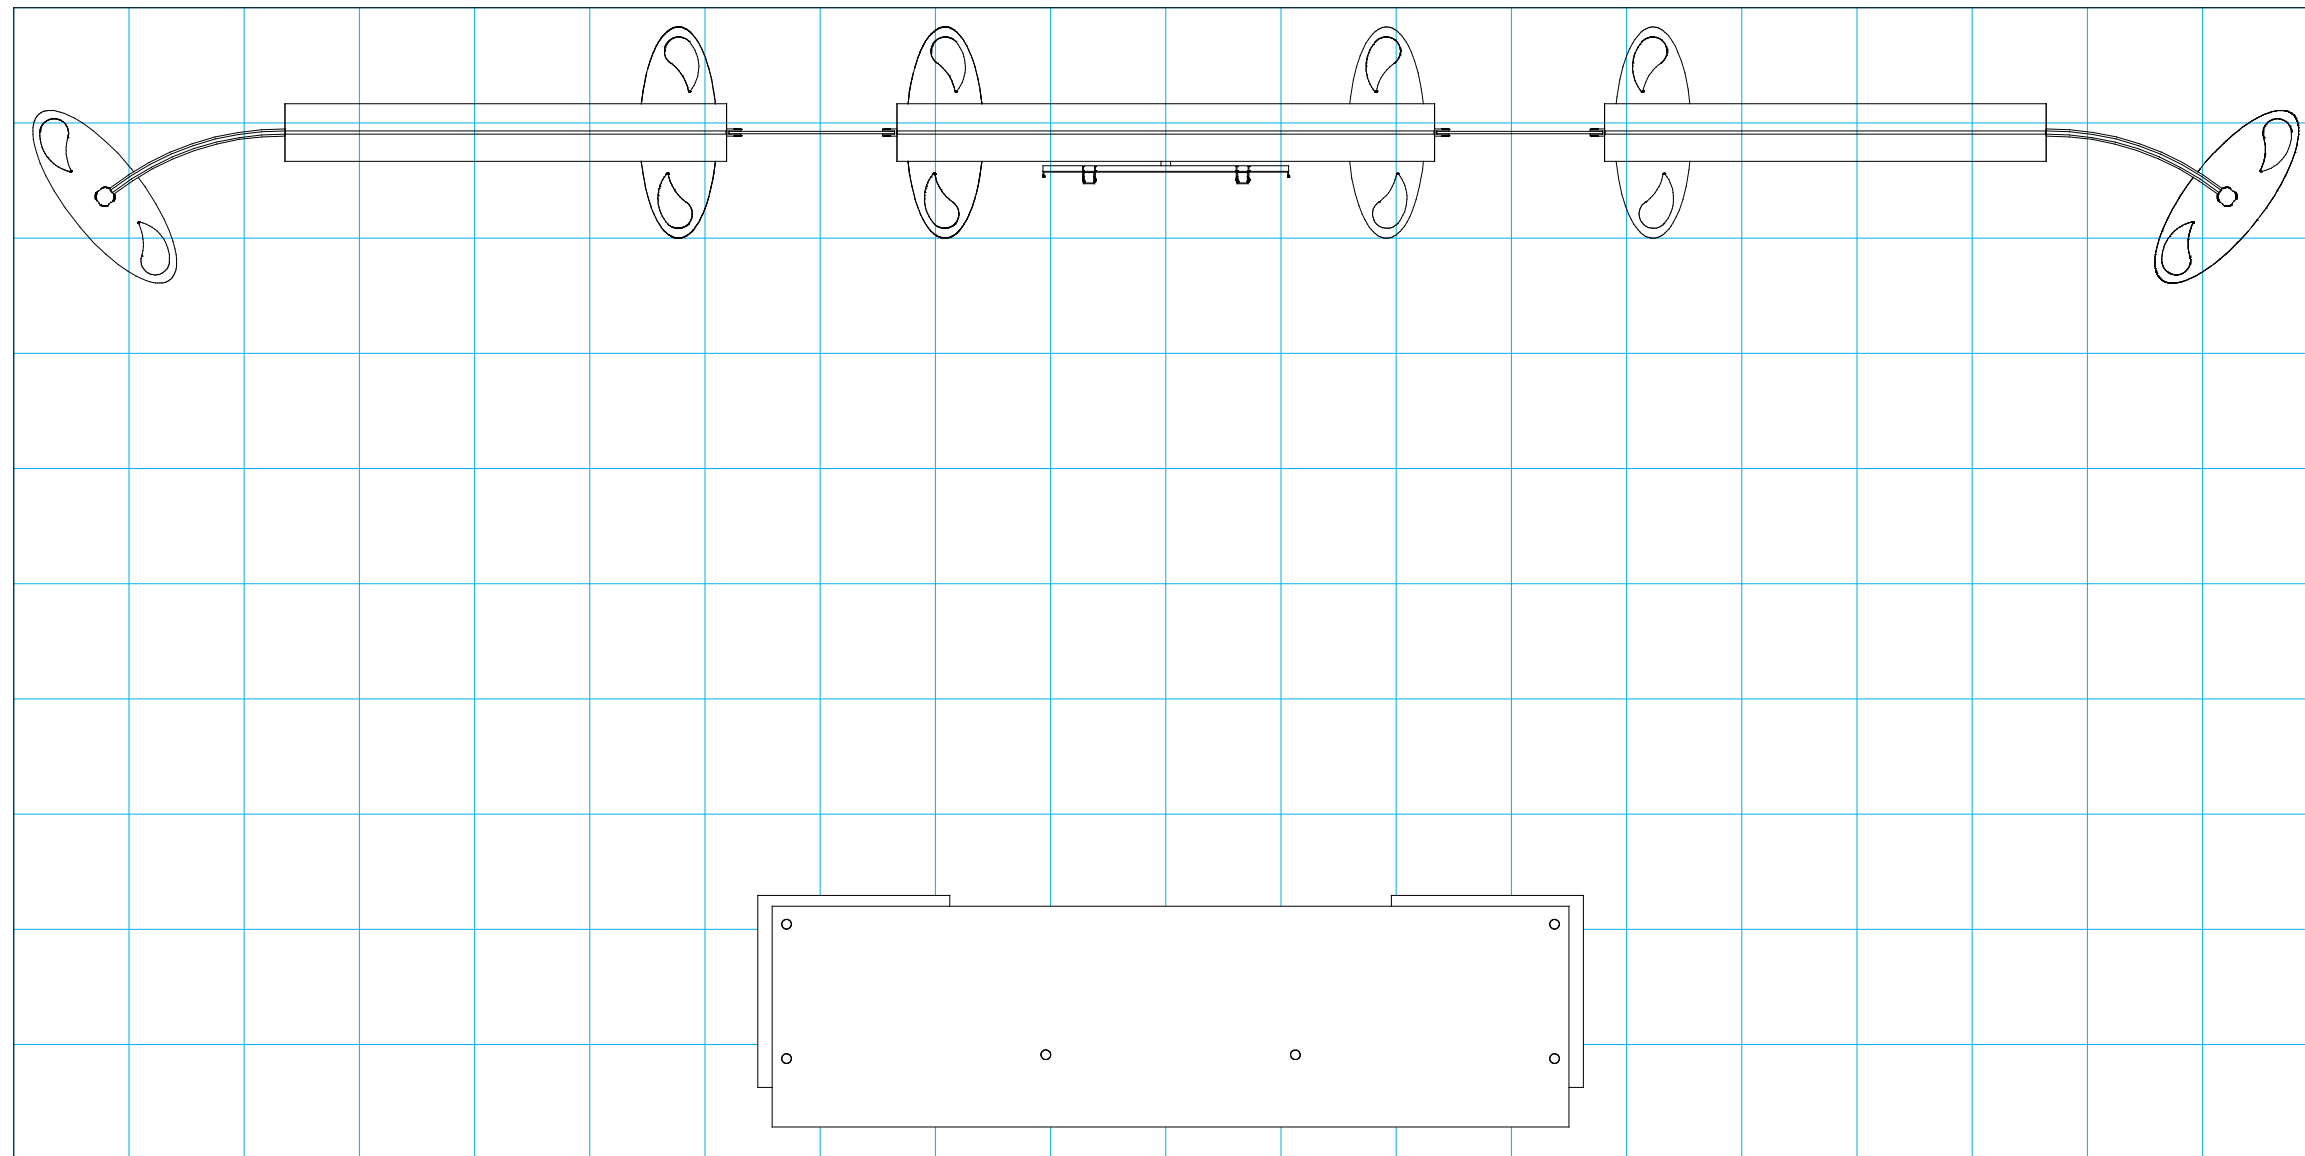


 = 1 sq foot

General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

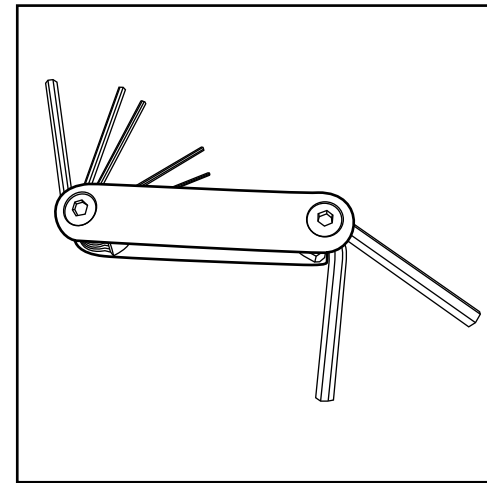

Hex Tool - Essential for Assembly

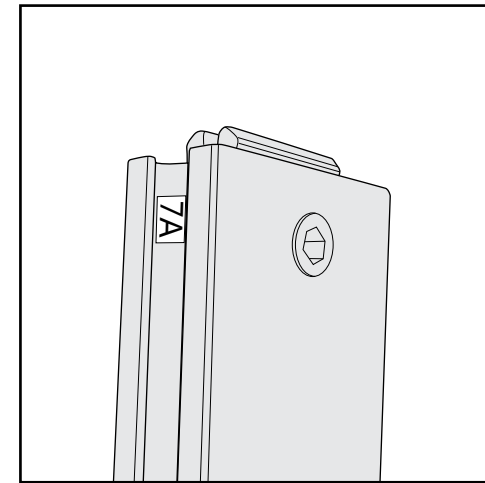

Part Identification - Numbering




WARNING

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

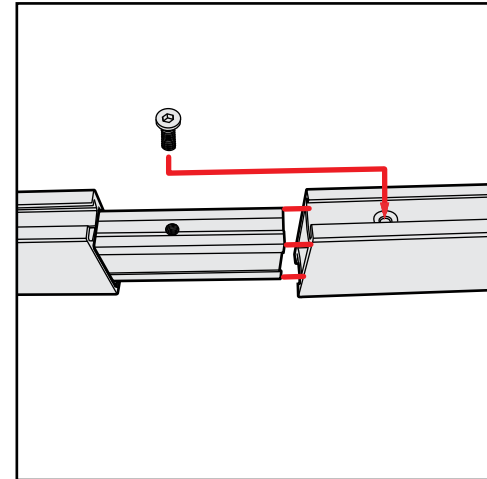


Spline Connection

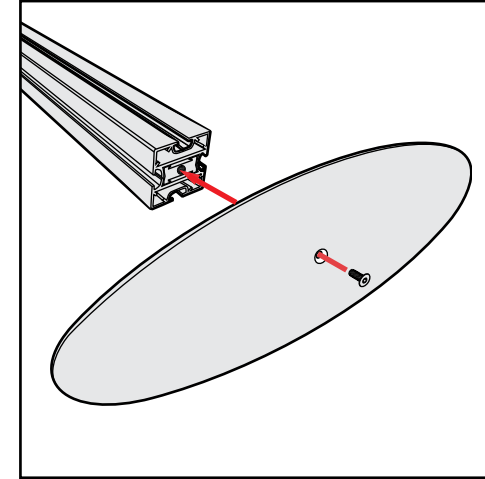


Base Plate & Extrusion Connection




DO NOT USE POWER TOOLS

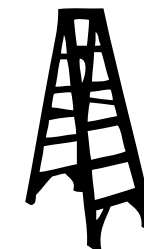

LADDERS OR LIFTS
MAY BE REQUIRED

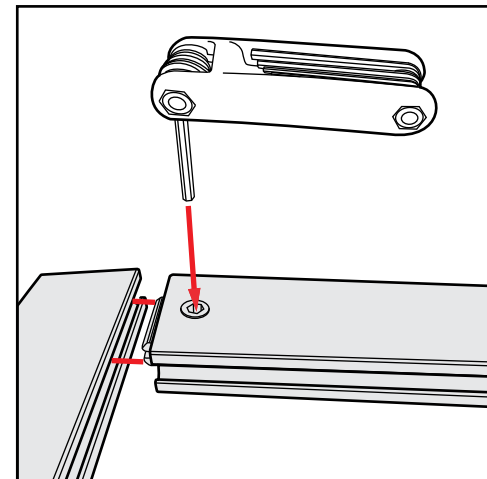

Extrusion & Lock Connection

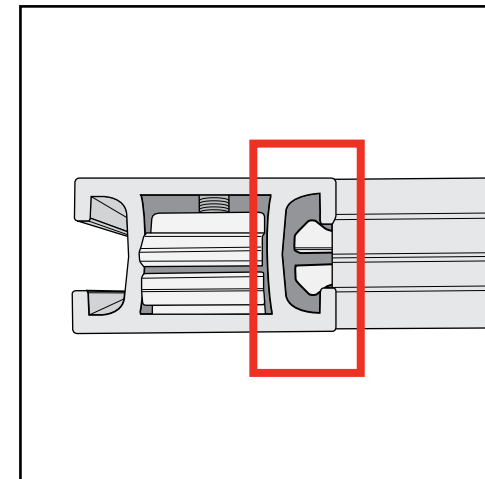

Engaged Lock




ALL CONNECTIONS MUST
BE TIGHTLY SECURED


Straight Connection

When assembling frame, first attach all **straight connectors**, then attach **corner connectors**.

- 1) Place extrusions end-to-end.
- 2) Loosen all knobs, then slide **straight connectors** across the seam of extrusions.
- 3) Tighten all knobs to secure connection.

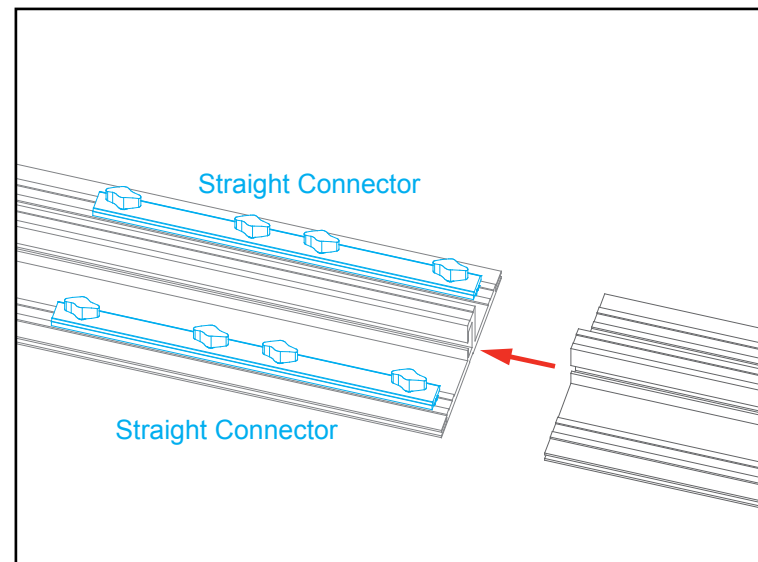

Slide both connectors across seam of extrusions.
Tighten all knobs.

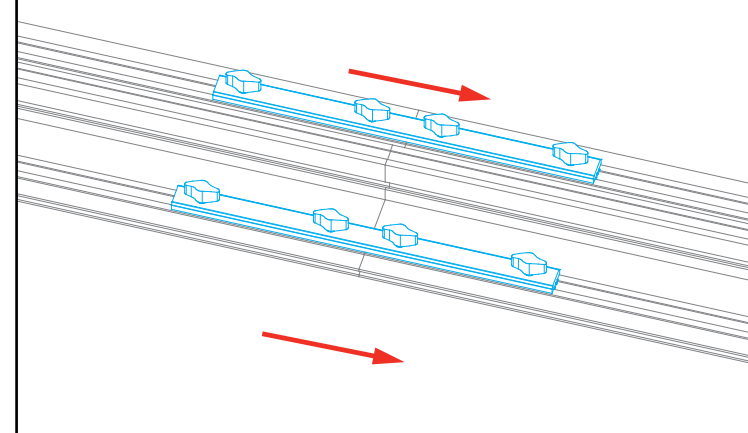

All knobs must be tightened securely to ensure a proper connection.

Disassembly

- 1) Loosen all knobs.
- 2) Slide connectors off of one extrusion.
- 3) Tighten knobs to prevent loss during packing & shipping.


Keep straight connectors in groove of extrusion. Do not remove connectors during disassembly.

Corner Connection


- 1) Loosen knobs, then slide vertical extrusions onto **corner connectors** of **lower** horizontal extrusion.
- 2) Slide **corner connectors** of **upper** horizontal extrusion into grooves of vertical extrusions.
- 3) Tighten all knobs to secure connection.

Disassembly

- 1) Loosen knobs on vertical extrusions.
- 2) Slide the vertical extrusions off of **corner connectors** on lower and upper horizontal extrusions.

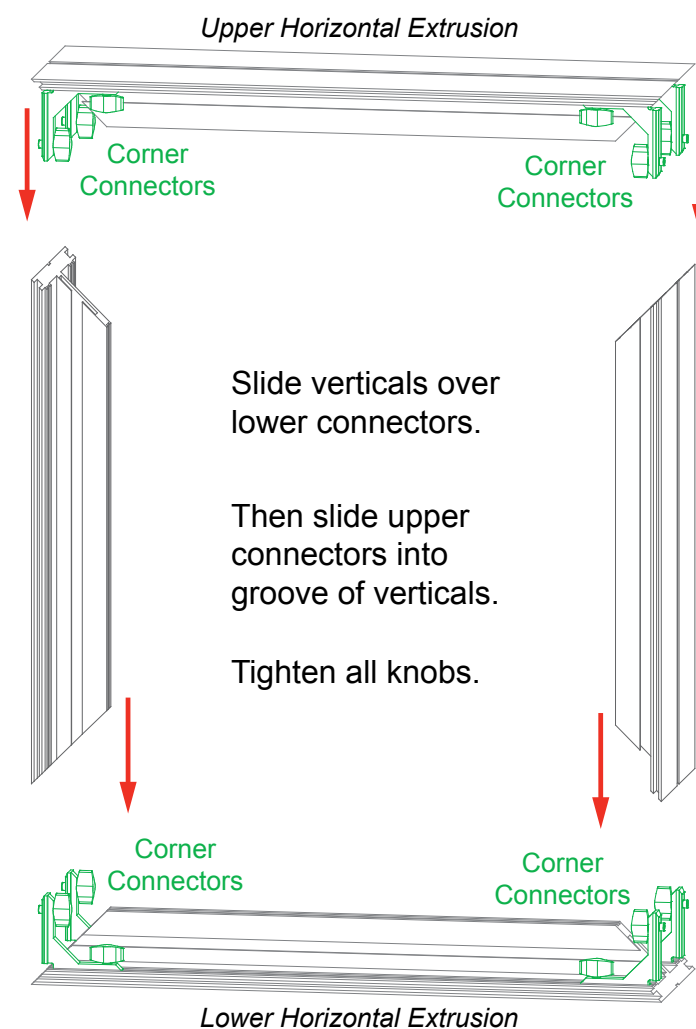


Adjust connectors if necessary to prevent gaps in connection.

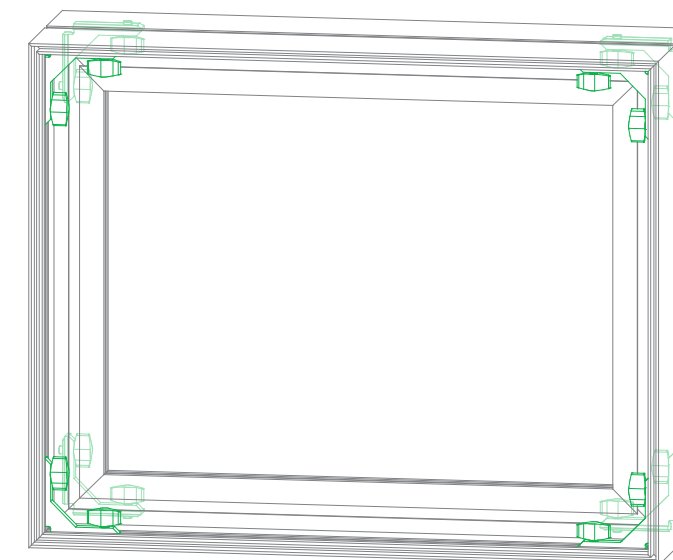

COMPLETED ASSEMBLY

All knobs must be tightened securely to ensure a proper connection.

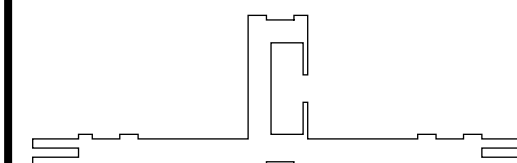


CEI152 Profile


Straight Connection

When assembling frame, first attach all **straight connectors**, then attach **corner connectors**.

- 1) Place extrusions end-to-end.
- 2) Loosen all knobs, then slide **straight connectors** across the seam of extrusions.
- 3) Tighten all knobs to secure connection.

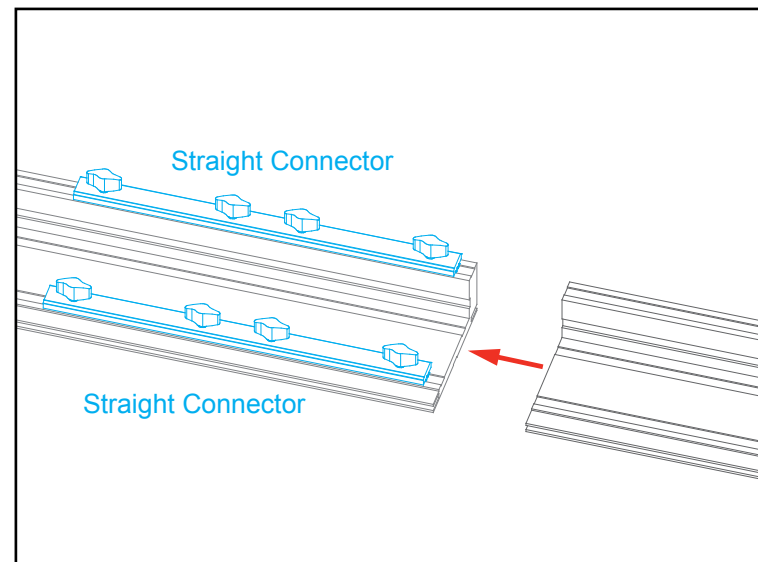

Slide both connectors across seam of extrusions.
Tighten all knobs.

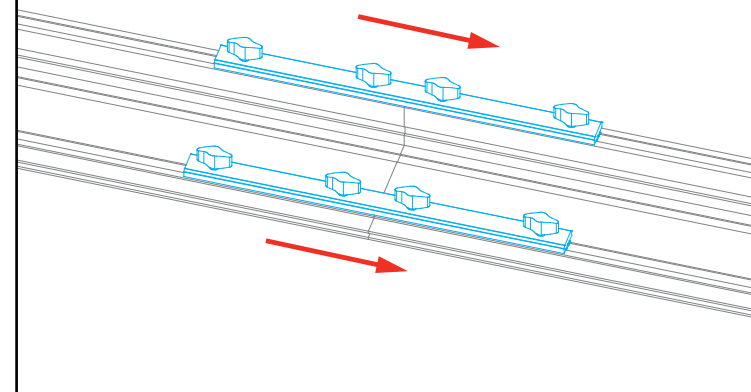

All knobs must be tightened securely to ensure a proper connection.

Disassembly

- 1) Loosen all knobs.
- 2) Slide connectors off of one extrusion.
- 3) Tighten knobs to prevent loss during packing & shipping.


Keep straight connectors in groove of extrusion. Do not remove connectors during disassembly.

Corner Connection


- 1) Loosen knobs, then slide vertical extrusions onto **corner connectors** of **lower** horizontal extrusion.
- 2) Slide **corner connectors** of **upper** horizontal extrusion into grooves of vertical extrusions.
- 3) Tighten all knobs to secure connection.

Disassembly

- 1) Loosen knobs on vertical extrusions.
- 2) Slide the vertical extrusions off of **corner connectors** on lower and upper horizontal extrusions.

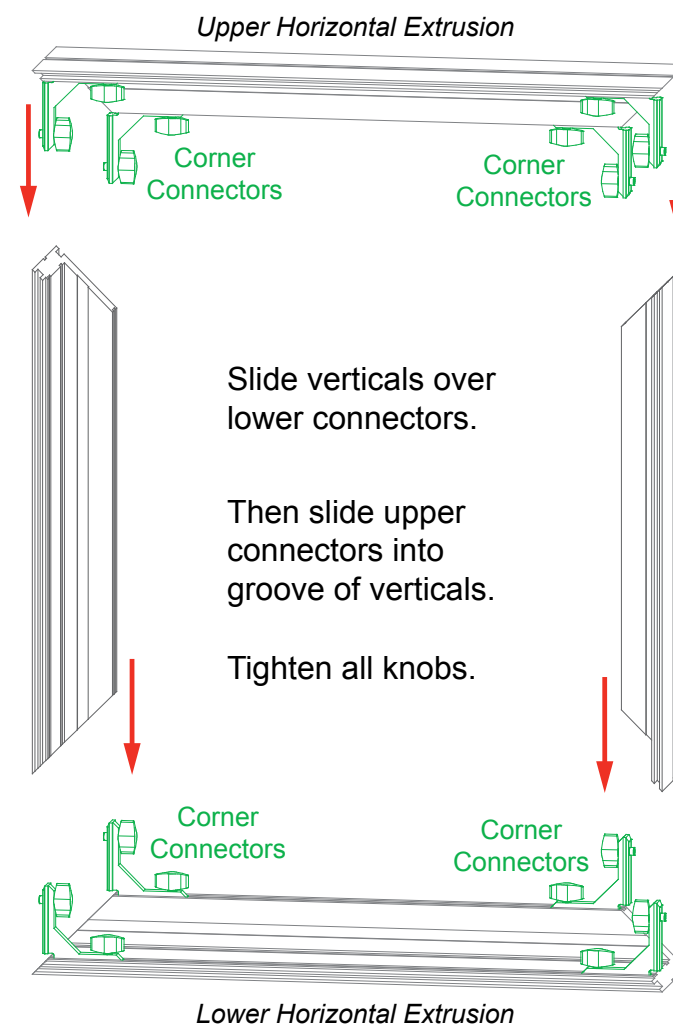


Adjust connectors if necessary to prevent gaps in connection.

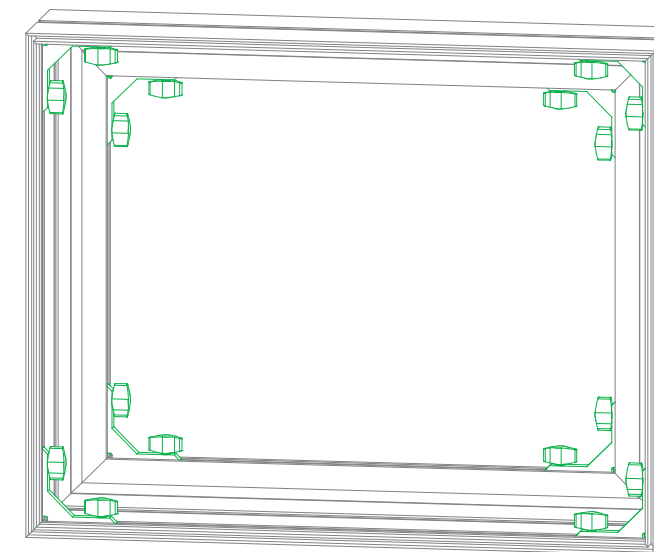

COMPLETED ASSEMBLY

All knobs must be tightened securely to ensure a proper connection.

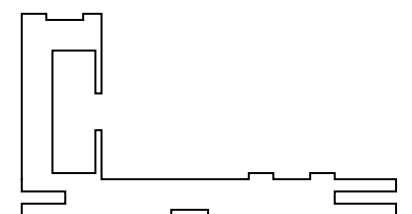


CEI110 Profile


SEG Graphic Installation *in 3 Steps*

The Perfect Fit


STEP 1: Attach Corners

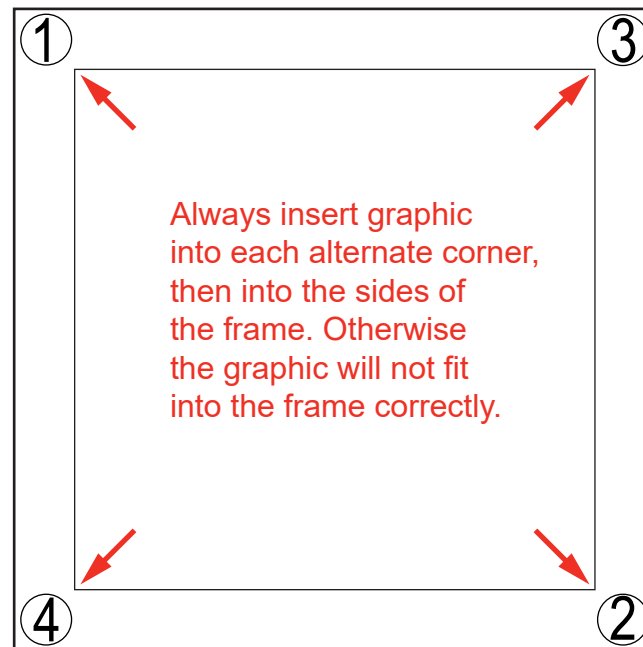

STEP 2: Attach Middle

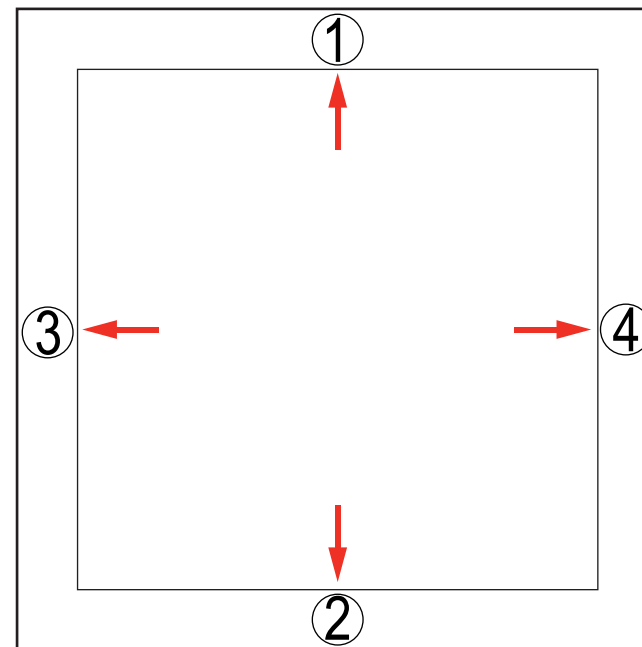

STEP 3: Attach Sides

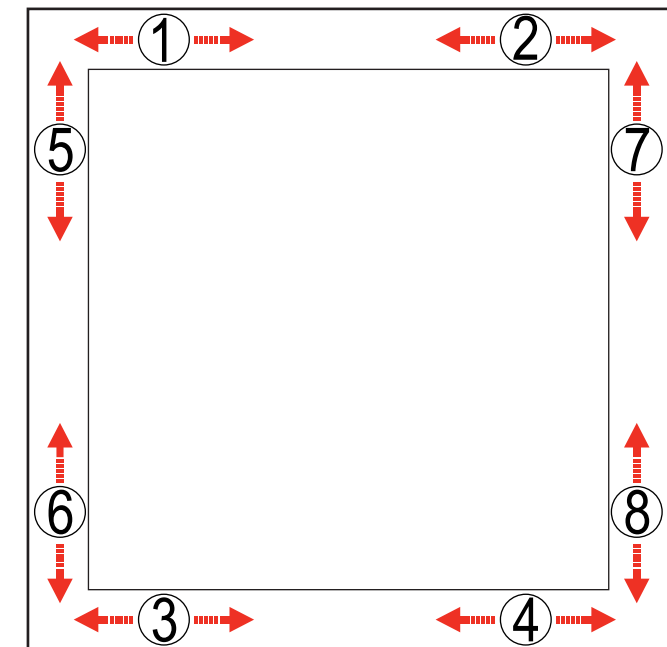

Insert narrow side of silicone welt into the channel at corner 1, with fabric to the outside.

Repeat for opposite corner 2, then corner 3, then corner 4.

Once corners are attached, press the middle of edge 1 into the channel. Then press middle of edge 2 into the channel on opposite side.

Repeat with edge 3 & 4.

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location 1. Repeat the process between center and corner at location 2.

Do the same for welt on opposite side, at locations 3 & 4. Then repeat for locations 5 & 6 and 7 & 8.

Once the welt is fully inserted on all sides, smooth out edges as needed for a perfect fit.



To remove the graphic from the frame, locate the fabric **pull tab**. Gently pull on the tab to remove the graphic.

Install video:






CRATE PACKING

Item	Qty.	Description
1	1	96"h CEI152 Vertical Extrusion
3	1	96"h CEI152 Vertical Extrusion
5	1	56"w CEI152 Horizontal Extrusion
6	1	56"w CEI152 Horizontal Extrusion
7	1	56"w Z140 Horizontal Extrusion
8	2	Base Plate
--	1	U-Channel


Steps:

Refer to the *CEI152 Frame Assembly general information page*.


- 1) Attach U-Channel to lower horizontal. See [U-Channel Attachment](#) detail.
- 2) Connect verticals [1,3] between horizontals [5,6] using corner connectors.
- 3) Attach horizontal [7] between verticals [1,3].
- 4) Connect Base Plates [8] to underside of horizontal [5].
- 5) Connect power cords to Supernova lights; place transformers into U-channels.

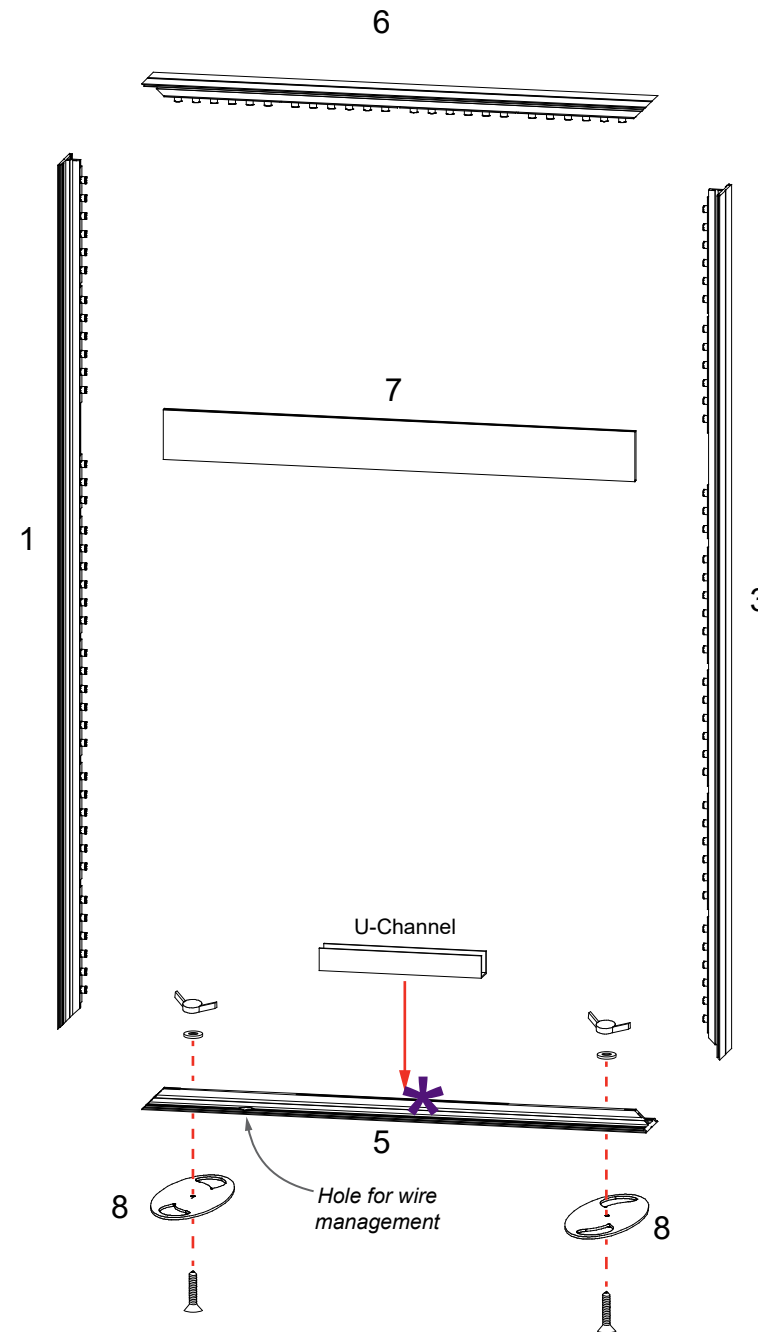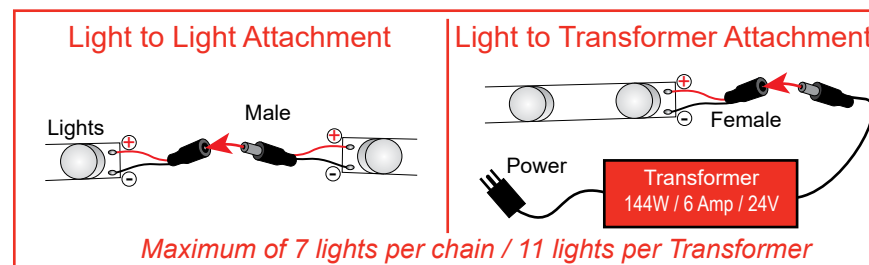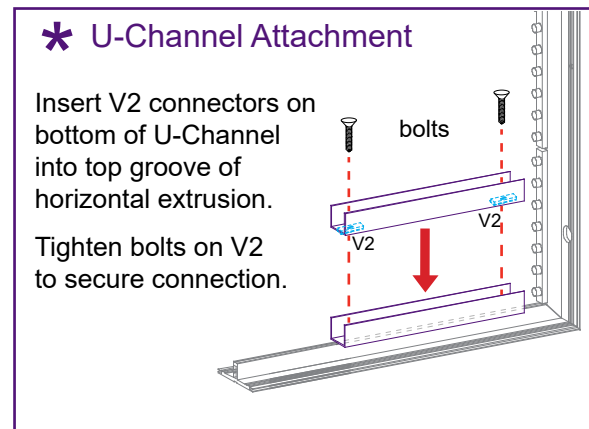

FRONT VIEW

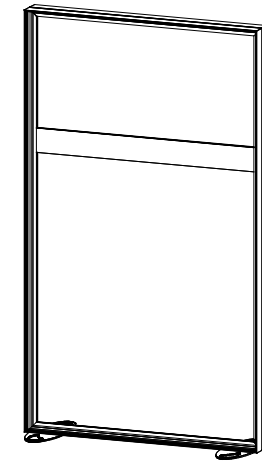

When assembled

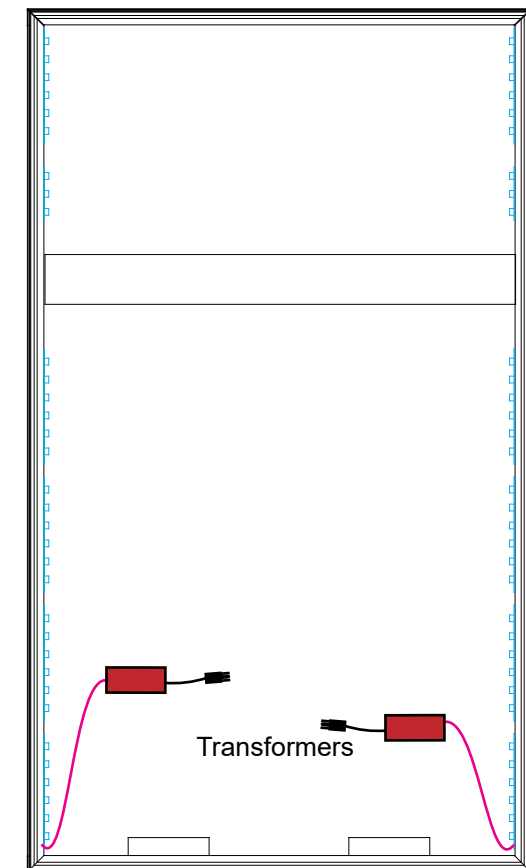




ELEVATION VIEW

Item	Qty.	Description
13	1	96"h CEI152 Vertical Extrusion
14	1	96"h CEI152 Vertical Extrusion
15	1	46"w CEI152 Horizontal Extrusion
16	1	46"w CEI152 Horizontal Extrusion
17	1	8" x 22" Base Plate
--	2	U-Channel


Steps:

Refer to the CEI152 Frame Assembly general information page.


- 1) Install U-Channel to horizontal [15]. See [U-Channel Attachment](#) detail.
- 2) Connect verticals [13,14] between horizontals [15,16].
- 3) Install Base Plate [17] to bottom of horizontal [15], using bolt & wing nut.
- 4) Connect power cords to Supernova lights as shown.

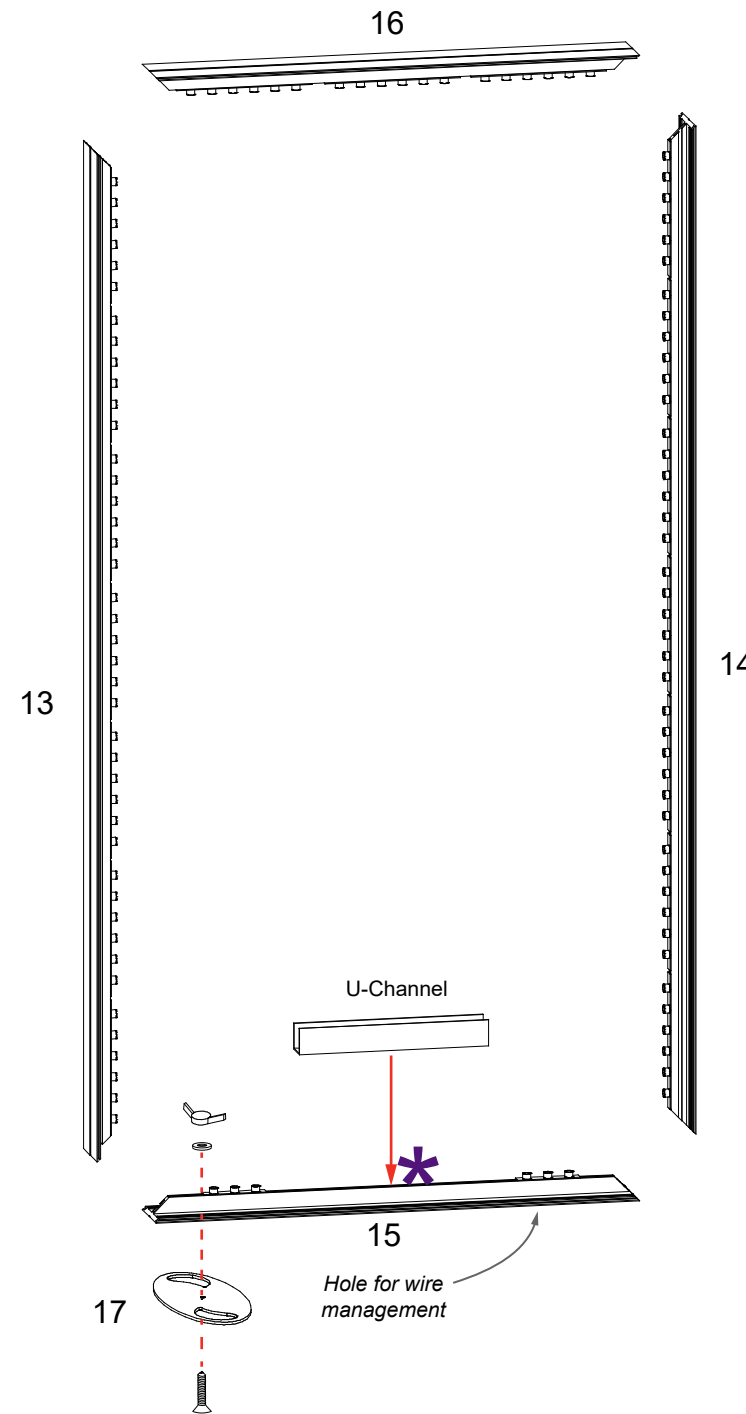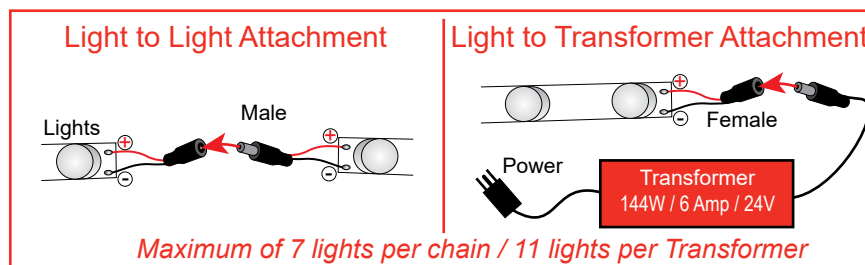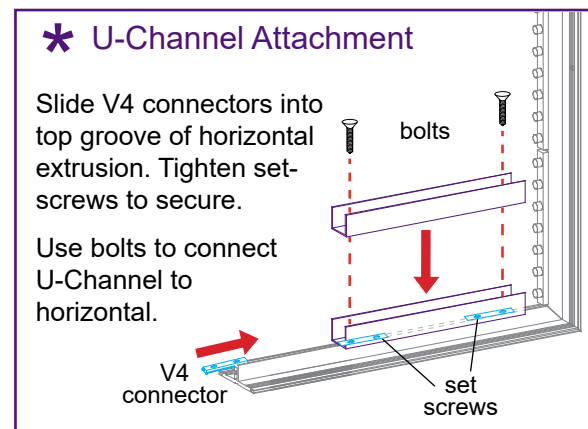

AS VIEWED FROM
INSIDE THE BOOTH

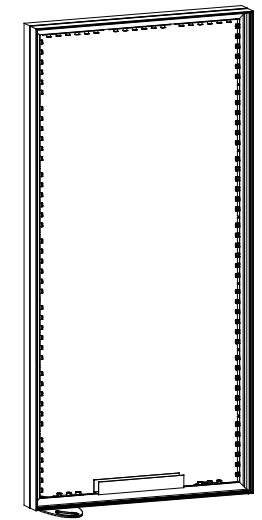

When assembled

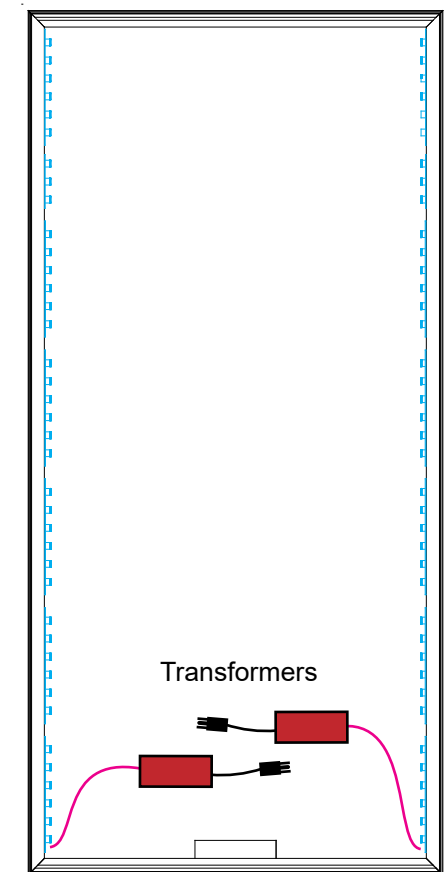




ELEVATION VIEW

Item	Qty.	Description
18	1	96"h CEI152 Vertical Extrusion
19	1	96"h CEI152 Vertical Extrusion
20	1	46"w CEI152 Horizontal Extrusion
21	1	46"w CEI152 Horizontal Extrusion
22	1	8" x 22" Base Plate
--	2	U-Channel


Steps:

Refer to the CEI152 Frame Assembly general information page.


- 1) Install U-Channel to horizontal [20]. See [U-Channel Attachment](#) detail.
- 2) Connect verticals [18,19] between horizontals [20,21].
- 3) Install Base Plate [22] to bottom of horizontal [20], using bolt & wing nut.
- 4) Connect power cords to Supernova lights as shown.

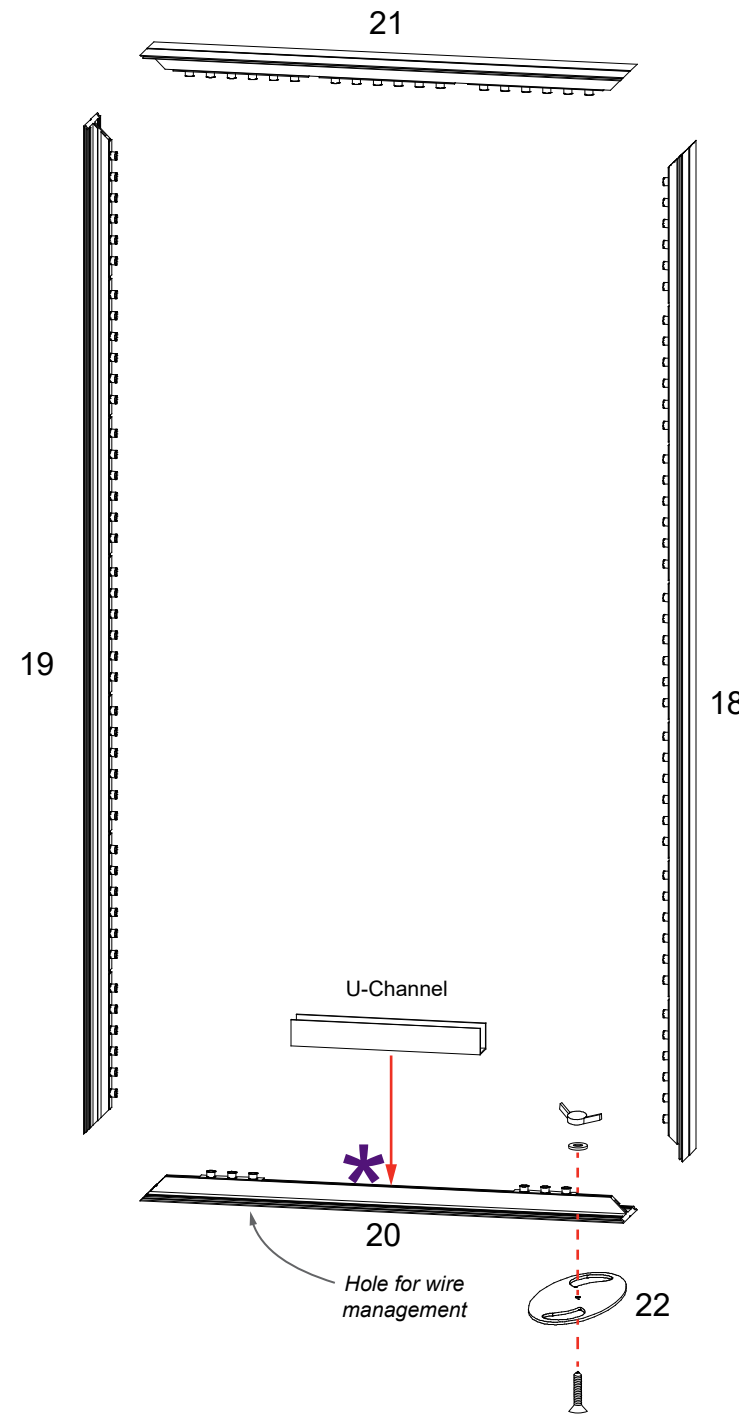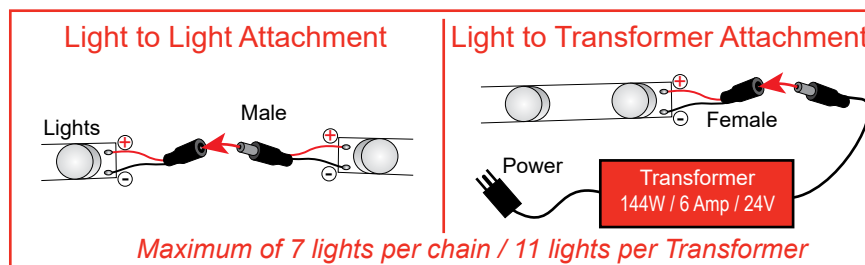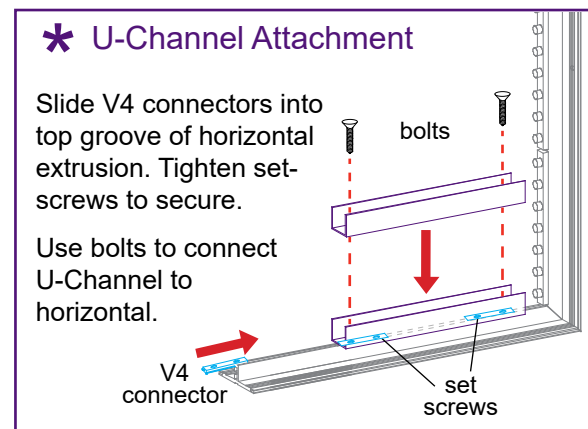

AS VIEWED FROM
INSIDE THE BOOTH

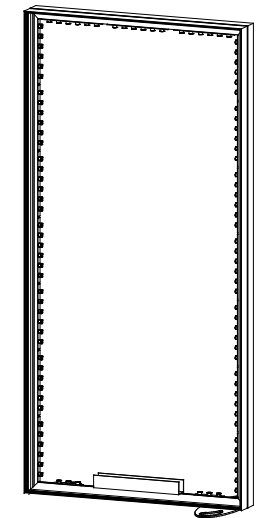

When assembled


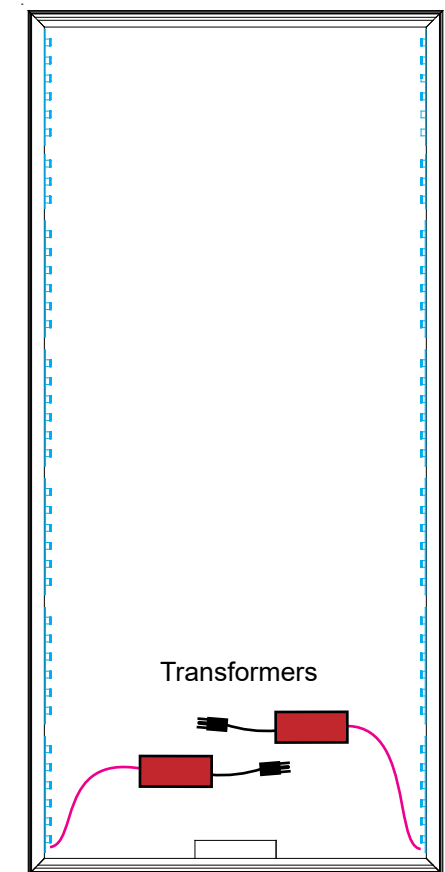


ELEVATION VIEW


Item	Qty.	Description
9	2	96"h RSG540 Vertical Extrusion
10	4	19.722"w Z41 curved Horizontal Extrusion
17,22	1,1	Base Plate

Steps:

- 1) Connect **Infills** between frame assemblies as shown, using A10 clamps. See [A10 Attachment](#) detail.
- 2) Attach Base Plates [17,22] to bottom of verticals [9].
- 3) Assemble horizontals [10] between verticals [9,13] & [9,18], inserting **Infill**.

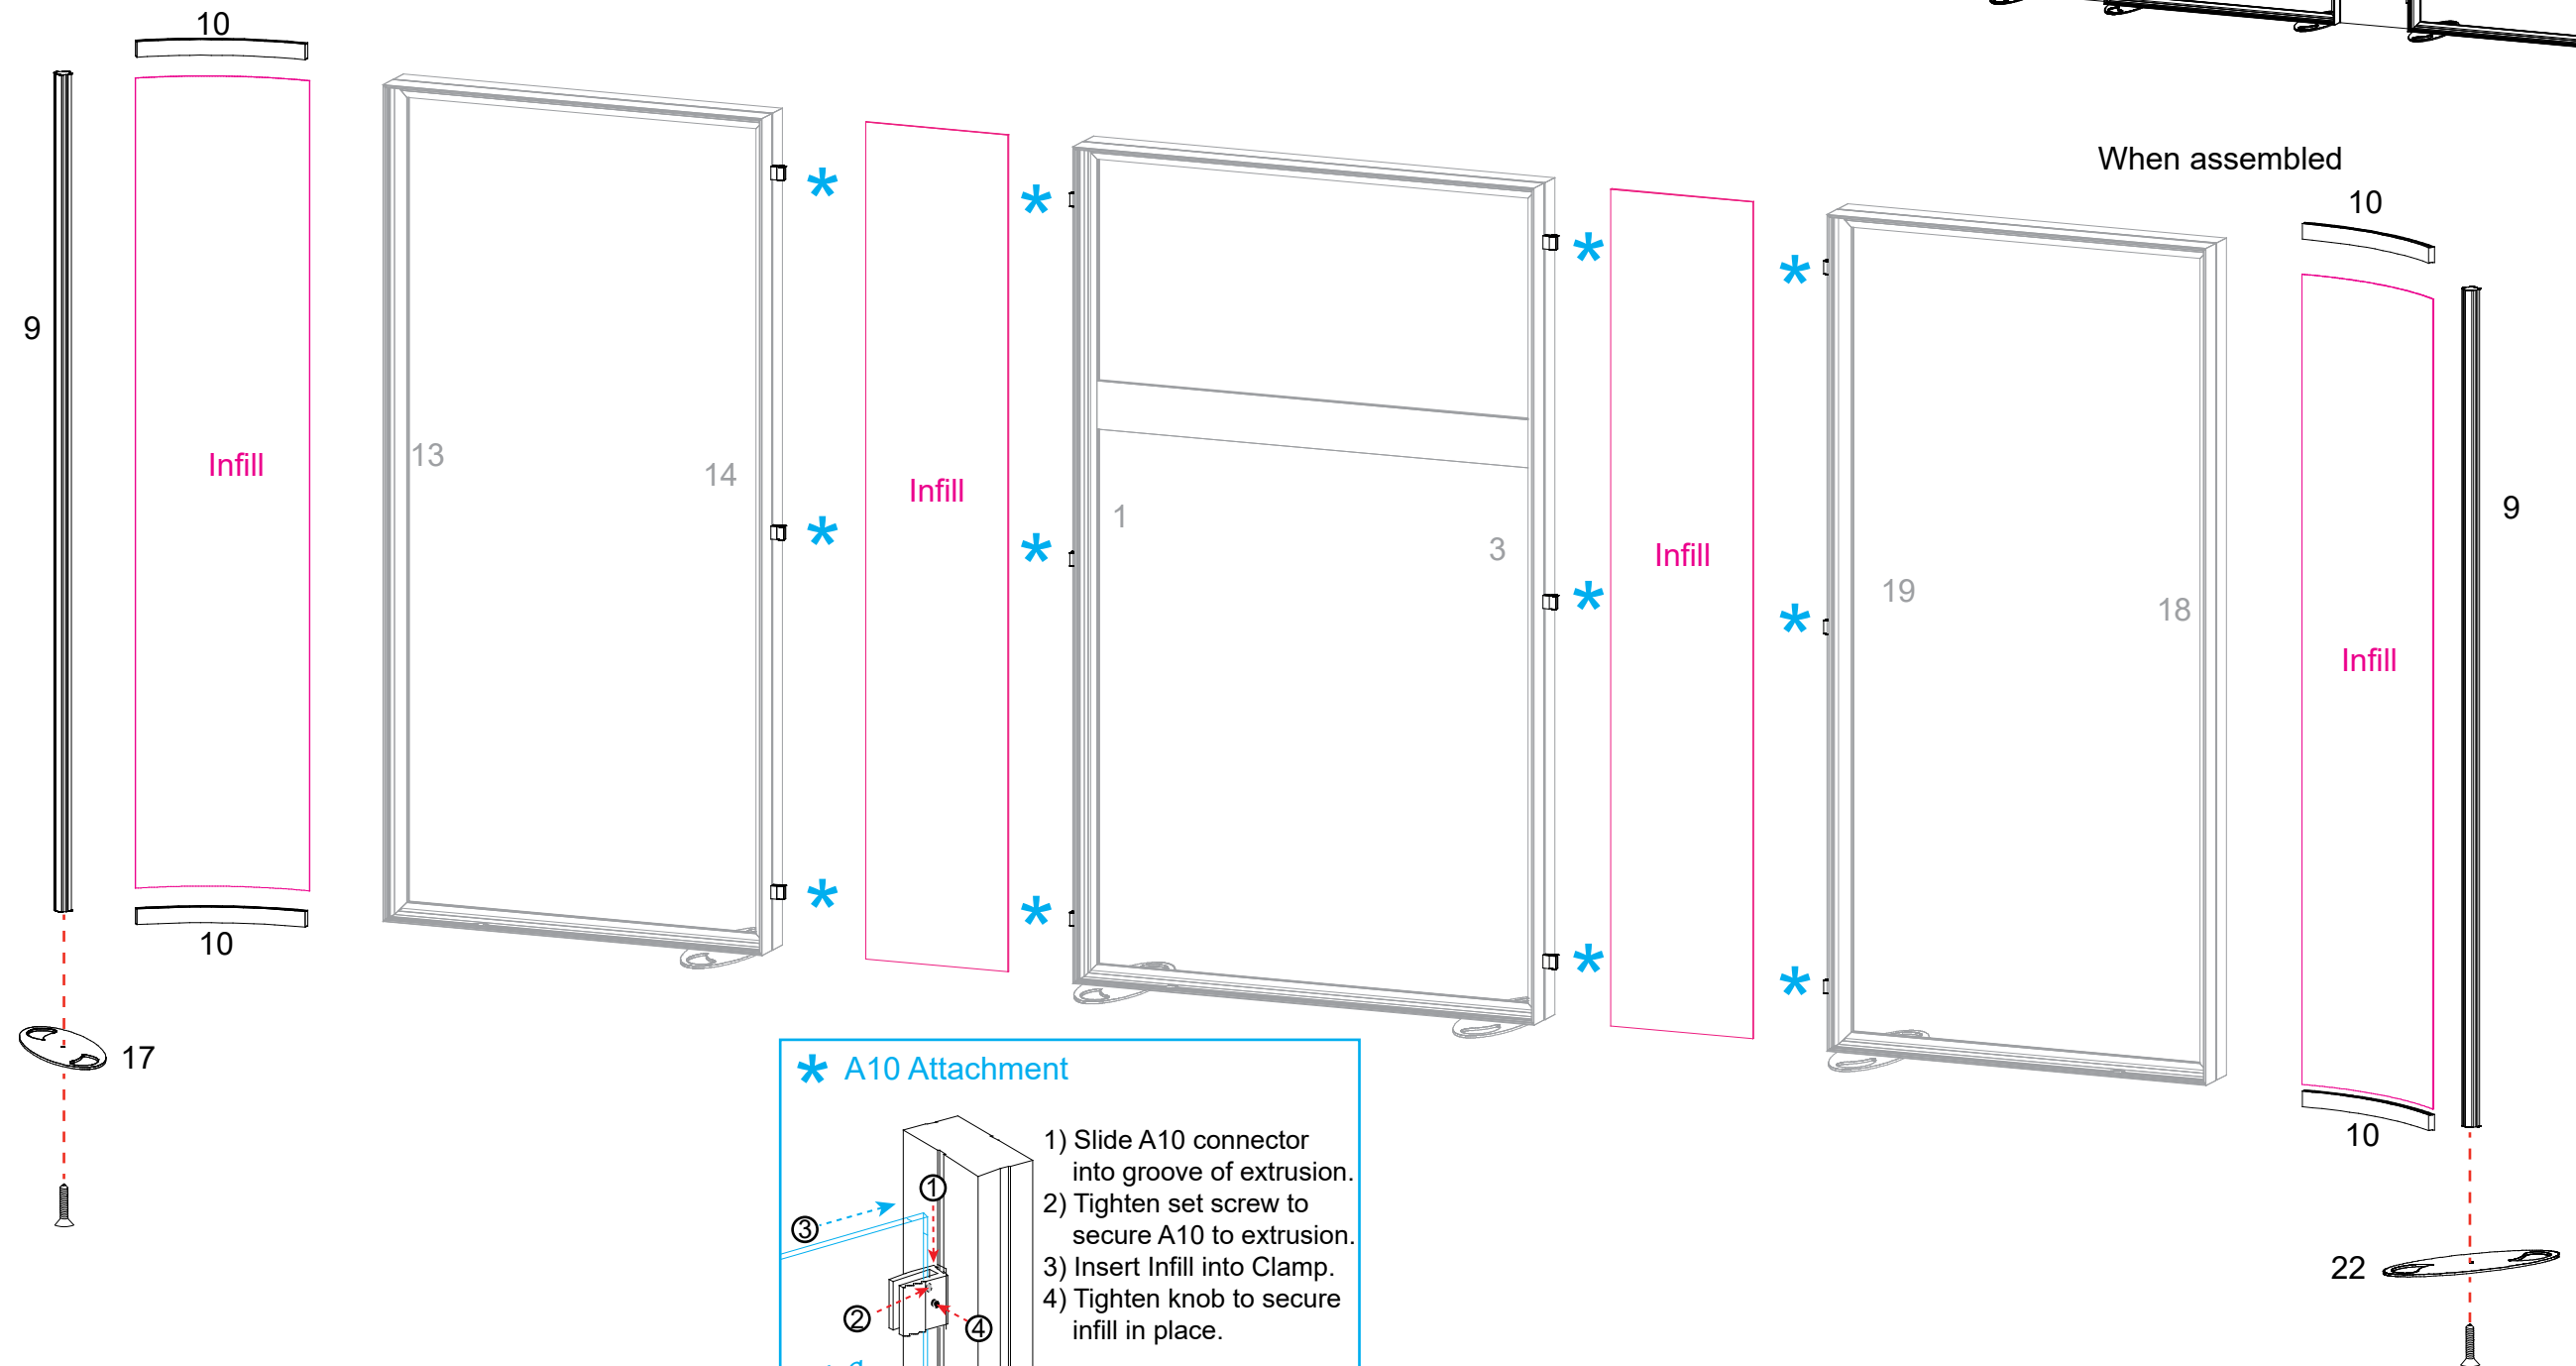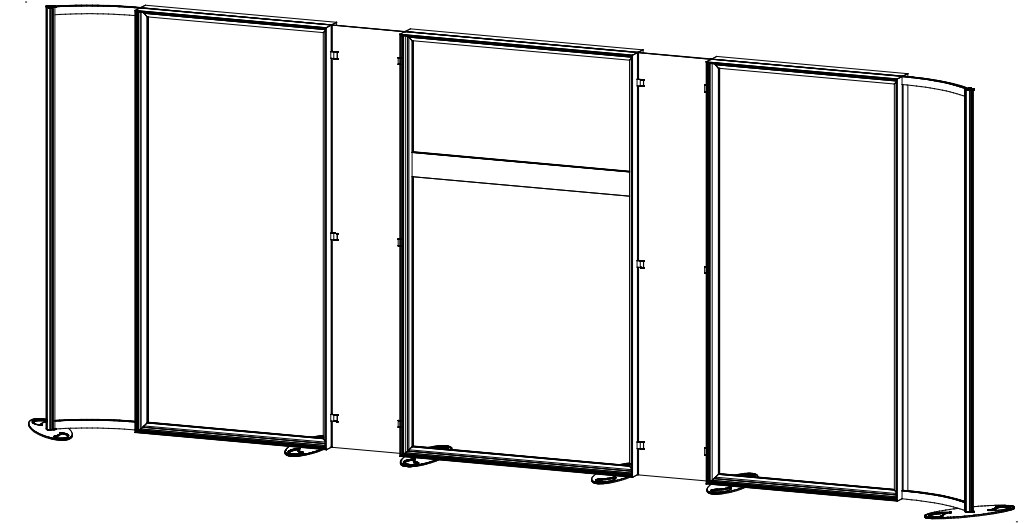

* A10 Attachment

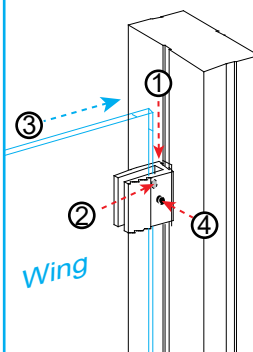


- 1) Slide A10 connector into groove of extrusion.
- 2) Tighten set screw to secure A10 to extrusion.
- 3) Insert Infill into Clamp.
- 4) Tighten knob to secure infill in place.

* Monitor Mount Attachment

Attach Stand-off Barrels to horizontal extrusion using wing nuts.

Install Monitor Mount to Stand-off Barrels using bolts.

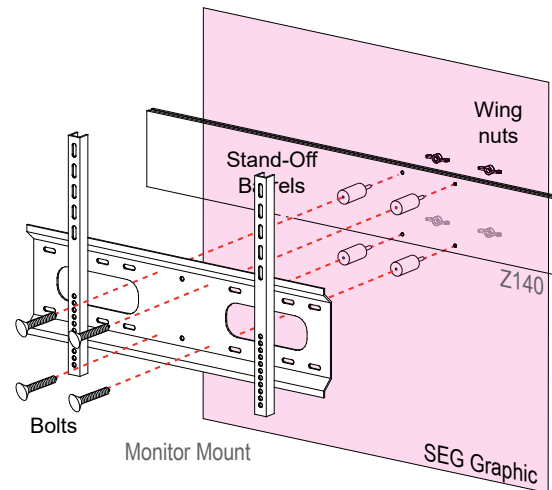


Note: Monitor mount installs over SEG graphic.


Steps:

Refer to the SEG Installation general information page.

- 1) Apply SEG Graphics to lightbox frames.
- 2) Connect Monitor Mount to horizontal [7].
See **Monitor Mount Attachment** detail.

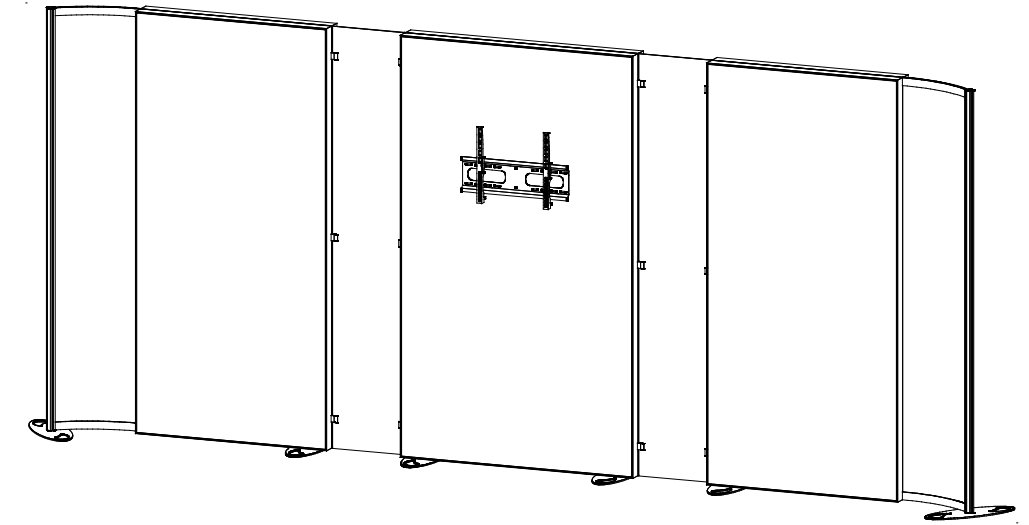


Completed Assembly

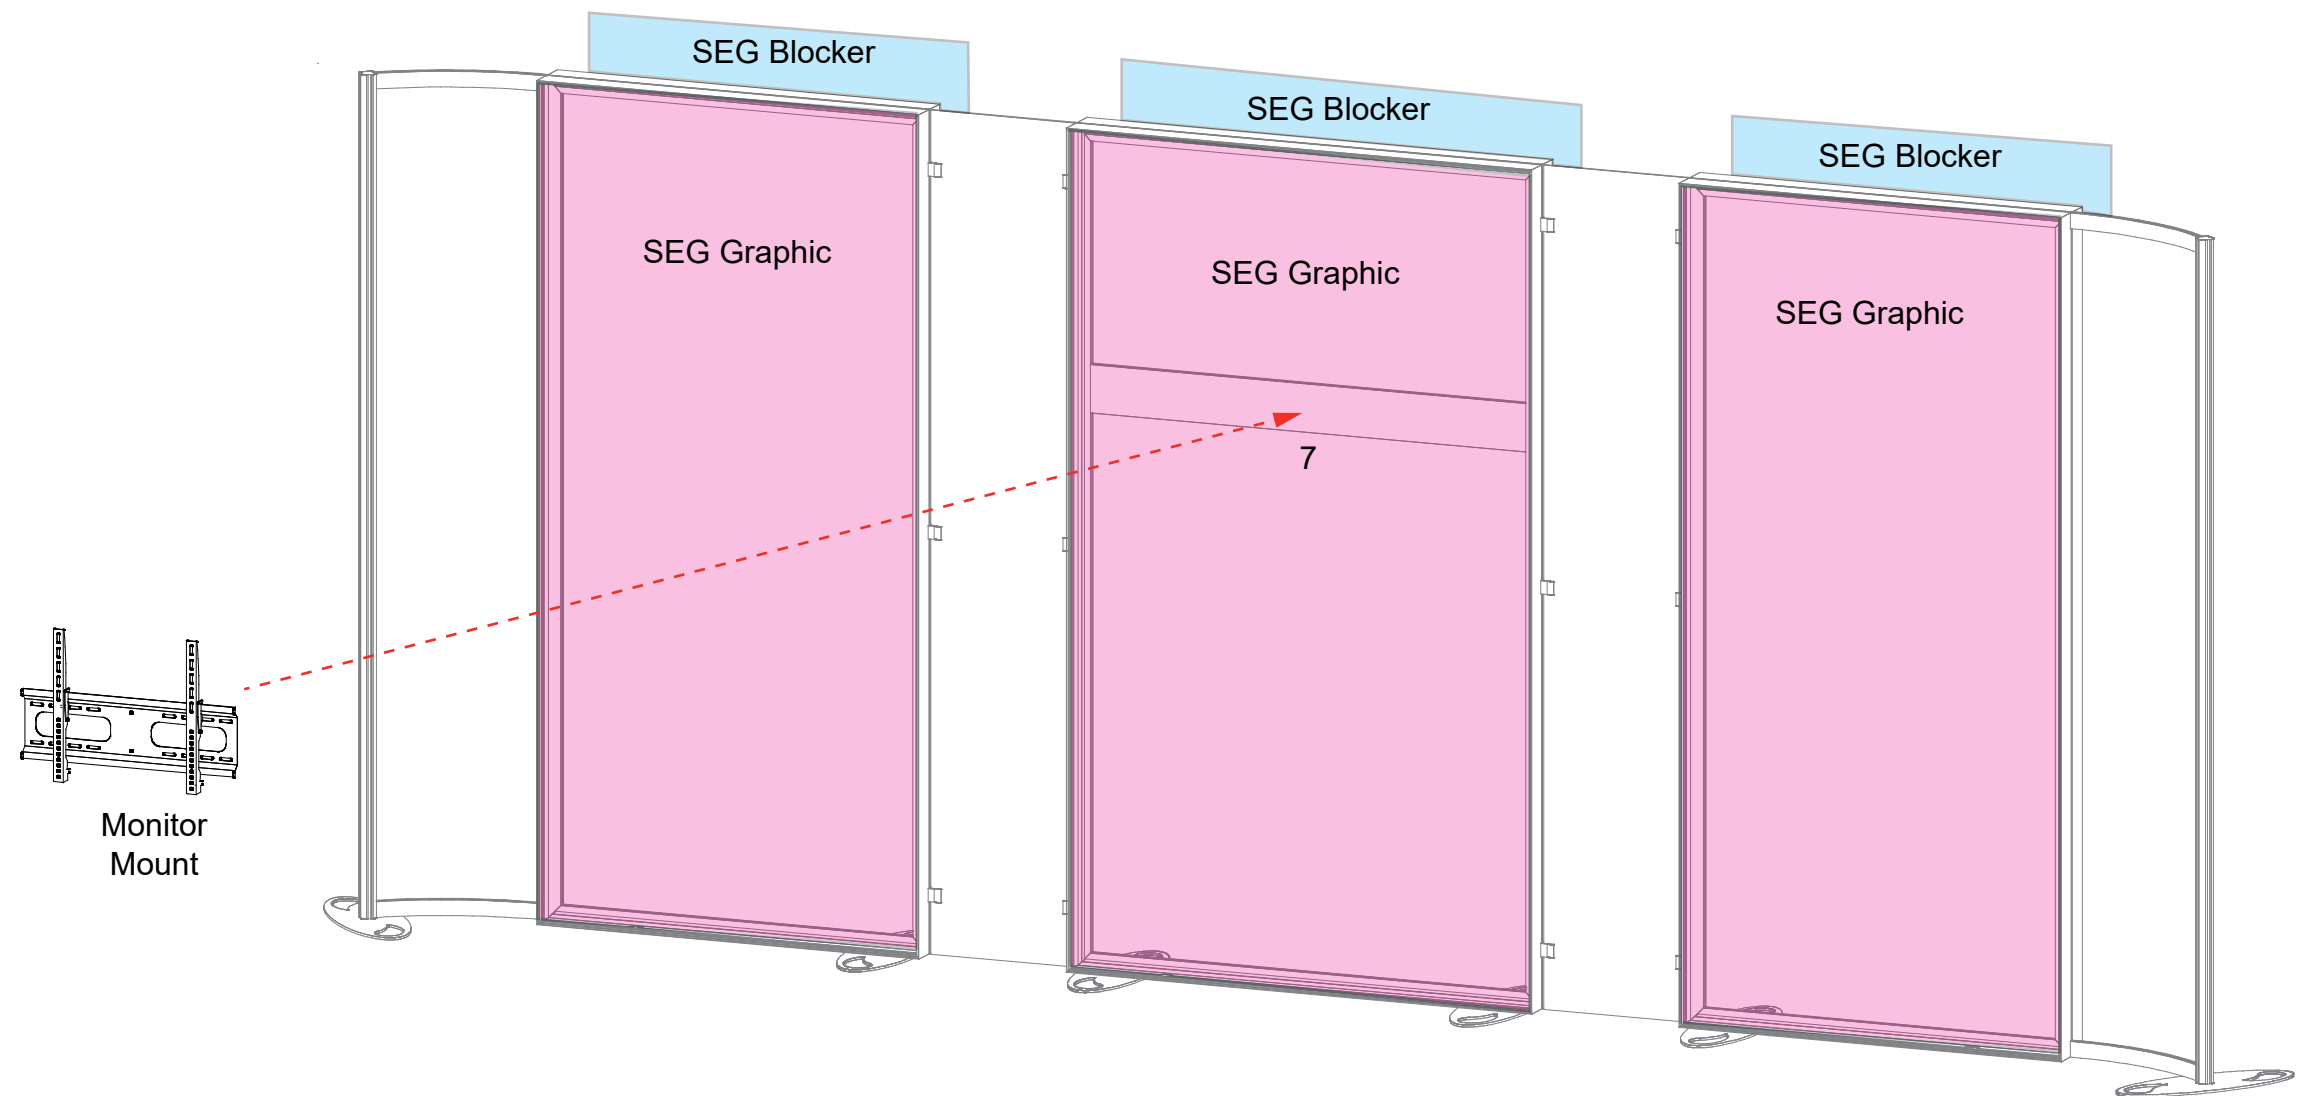

Item	Qty.	Description
1/2	1/1	30.5"h CEI110 Vertical Extrusion
3/4	1/1	46"w CEI110 Horizontal Extrusion



* CEI-110 Corner Connection

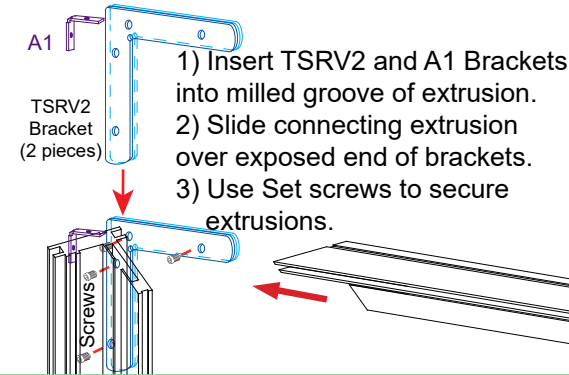


Steps:

- 1) Connect horizontals [3,4] between verticals [1,2], sliding backer panel between verticals.
See [CEI-110 Corner Connection](#) detail.
- 2) Attach left & right cabinets to frame assembly [1/2/3/4] using bolts & wing nuts.
- 3) Install [Counter Top](#) to assembly using standoff barrels.
See [Standoff Barrel Attachment](#) detail.
- 4) Connect power cords to Supernova lights as shown.
- 5) Apply SEG graphic to frame.


Refer to the [SEG Installation general information page](#).

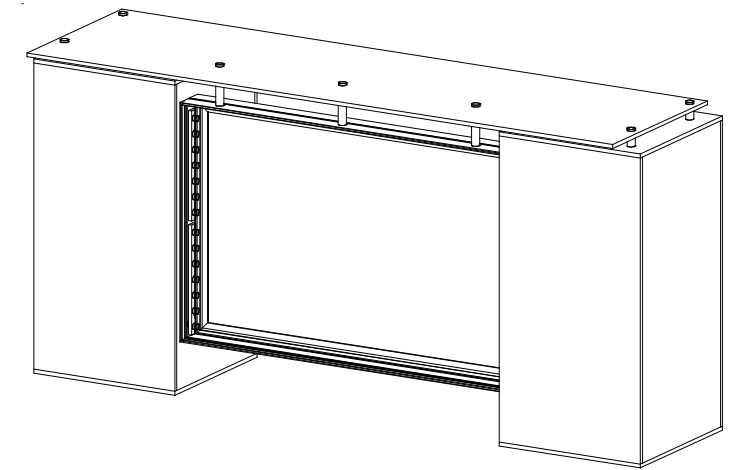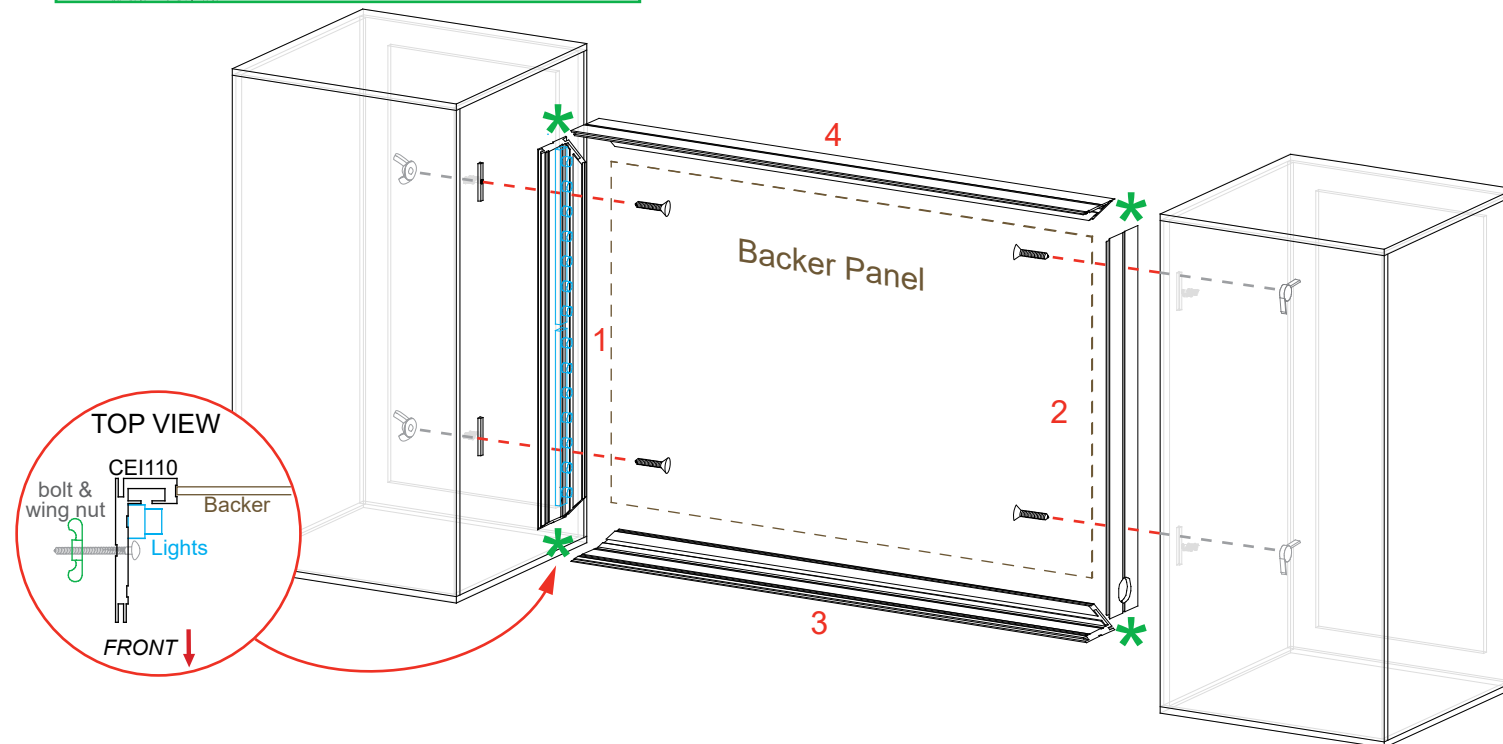


When assembled

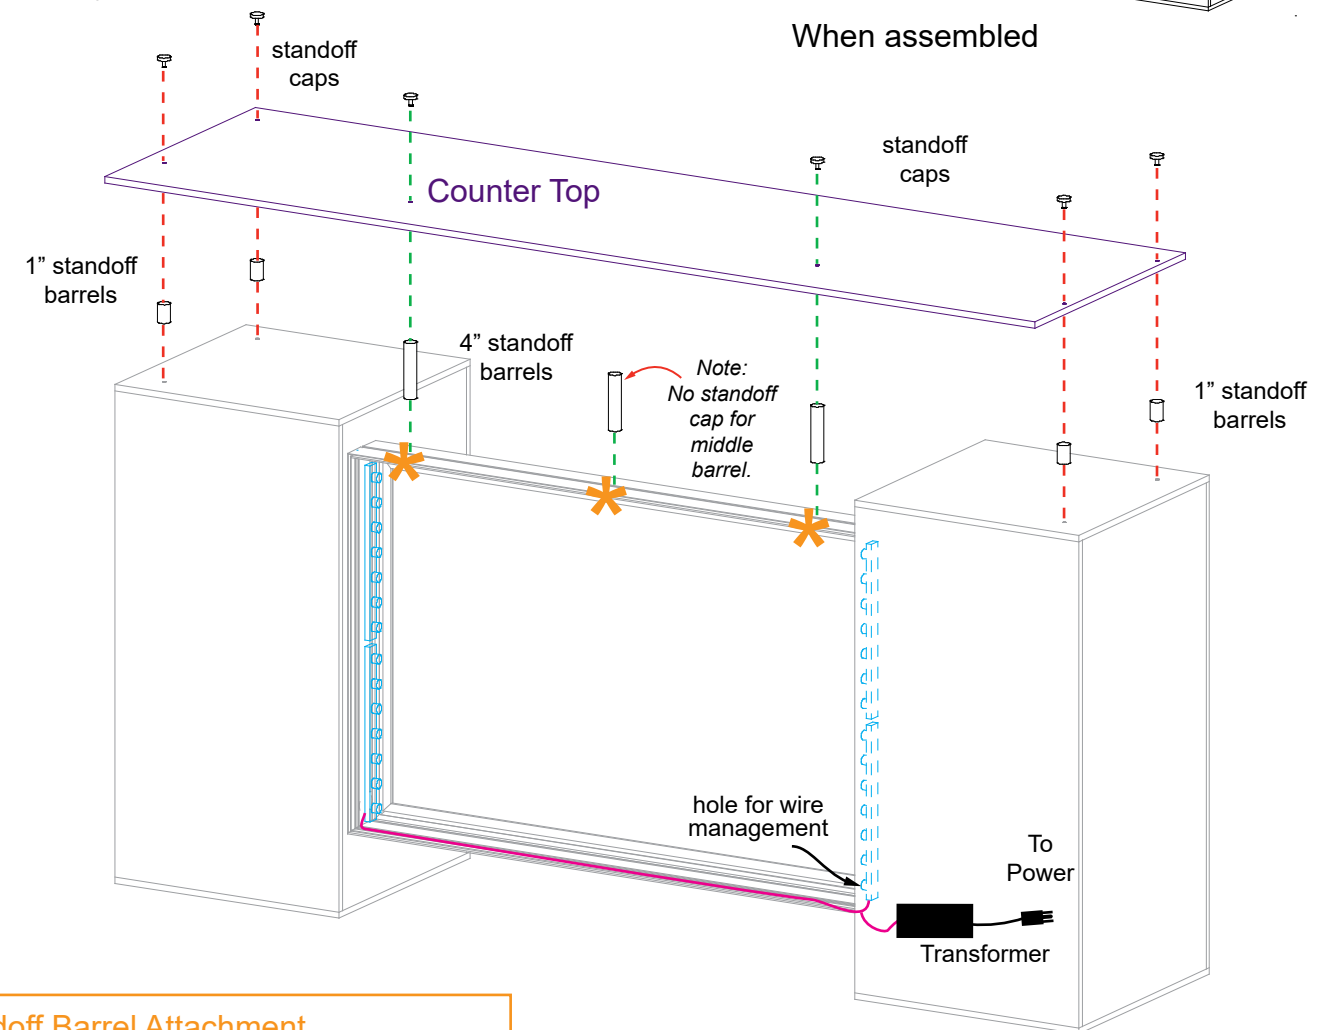


* Standoff Barrel Attachment

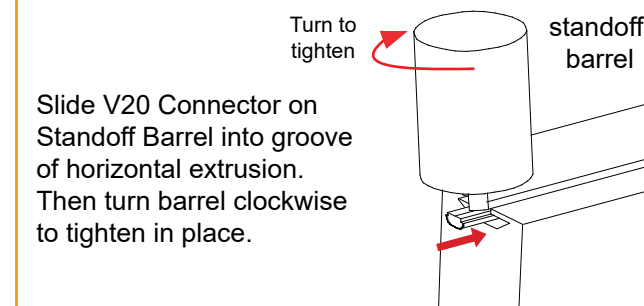

Light to Light Attachment



Light to Transformer Attachment

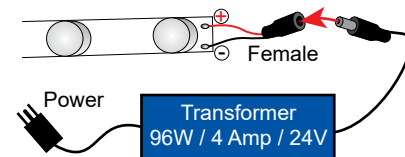

Maximum of 7 lights per chain / 7 lights per Transformer