



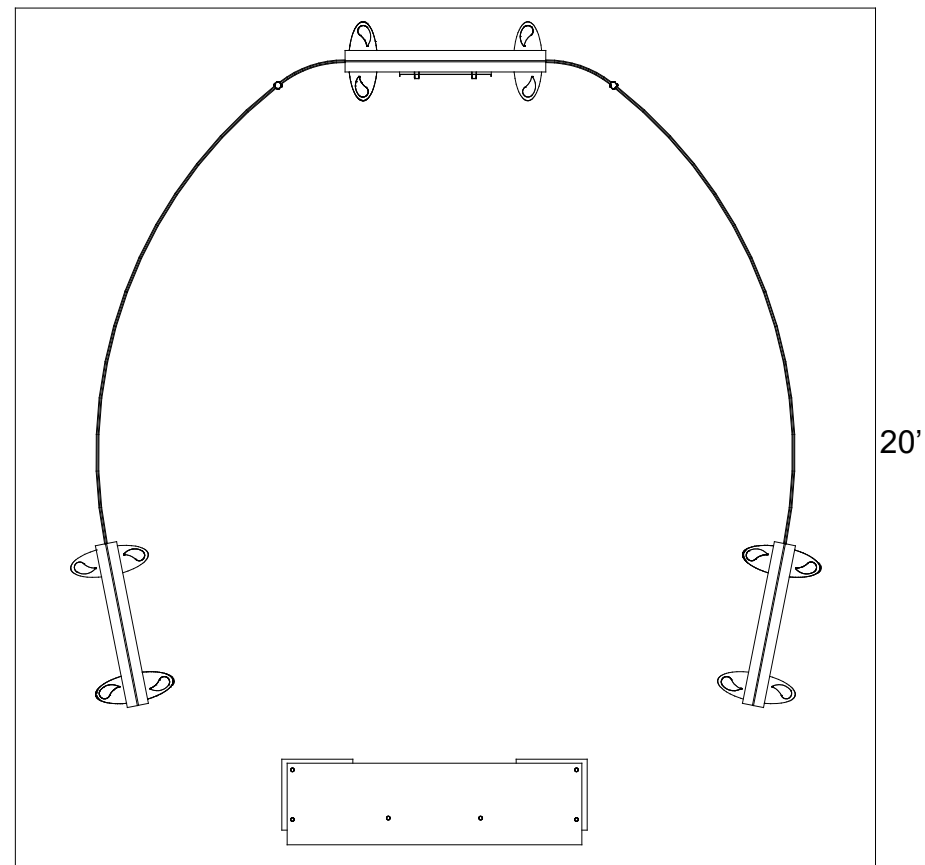


Plan View

20'

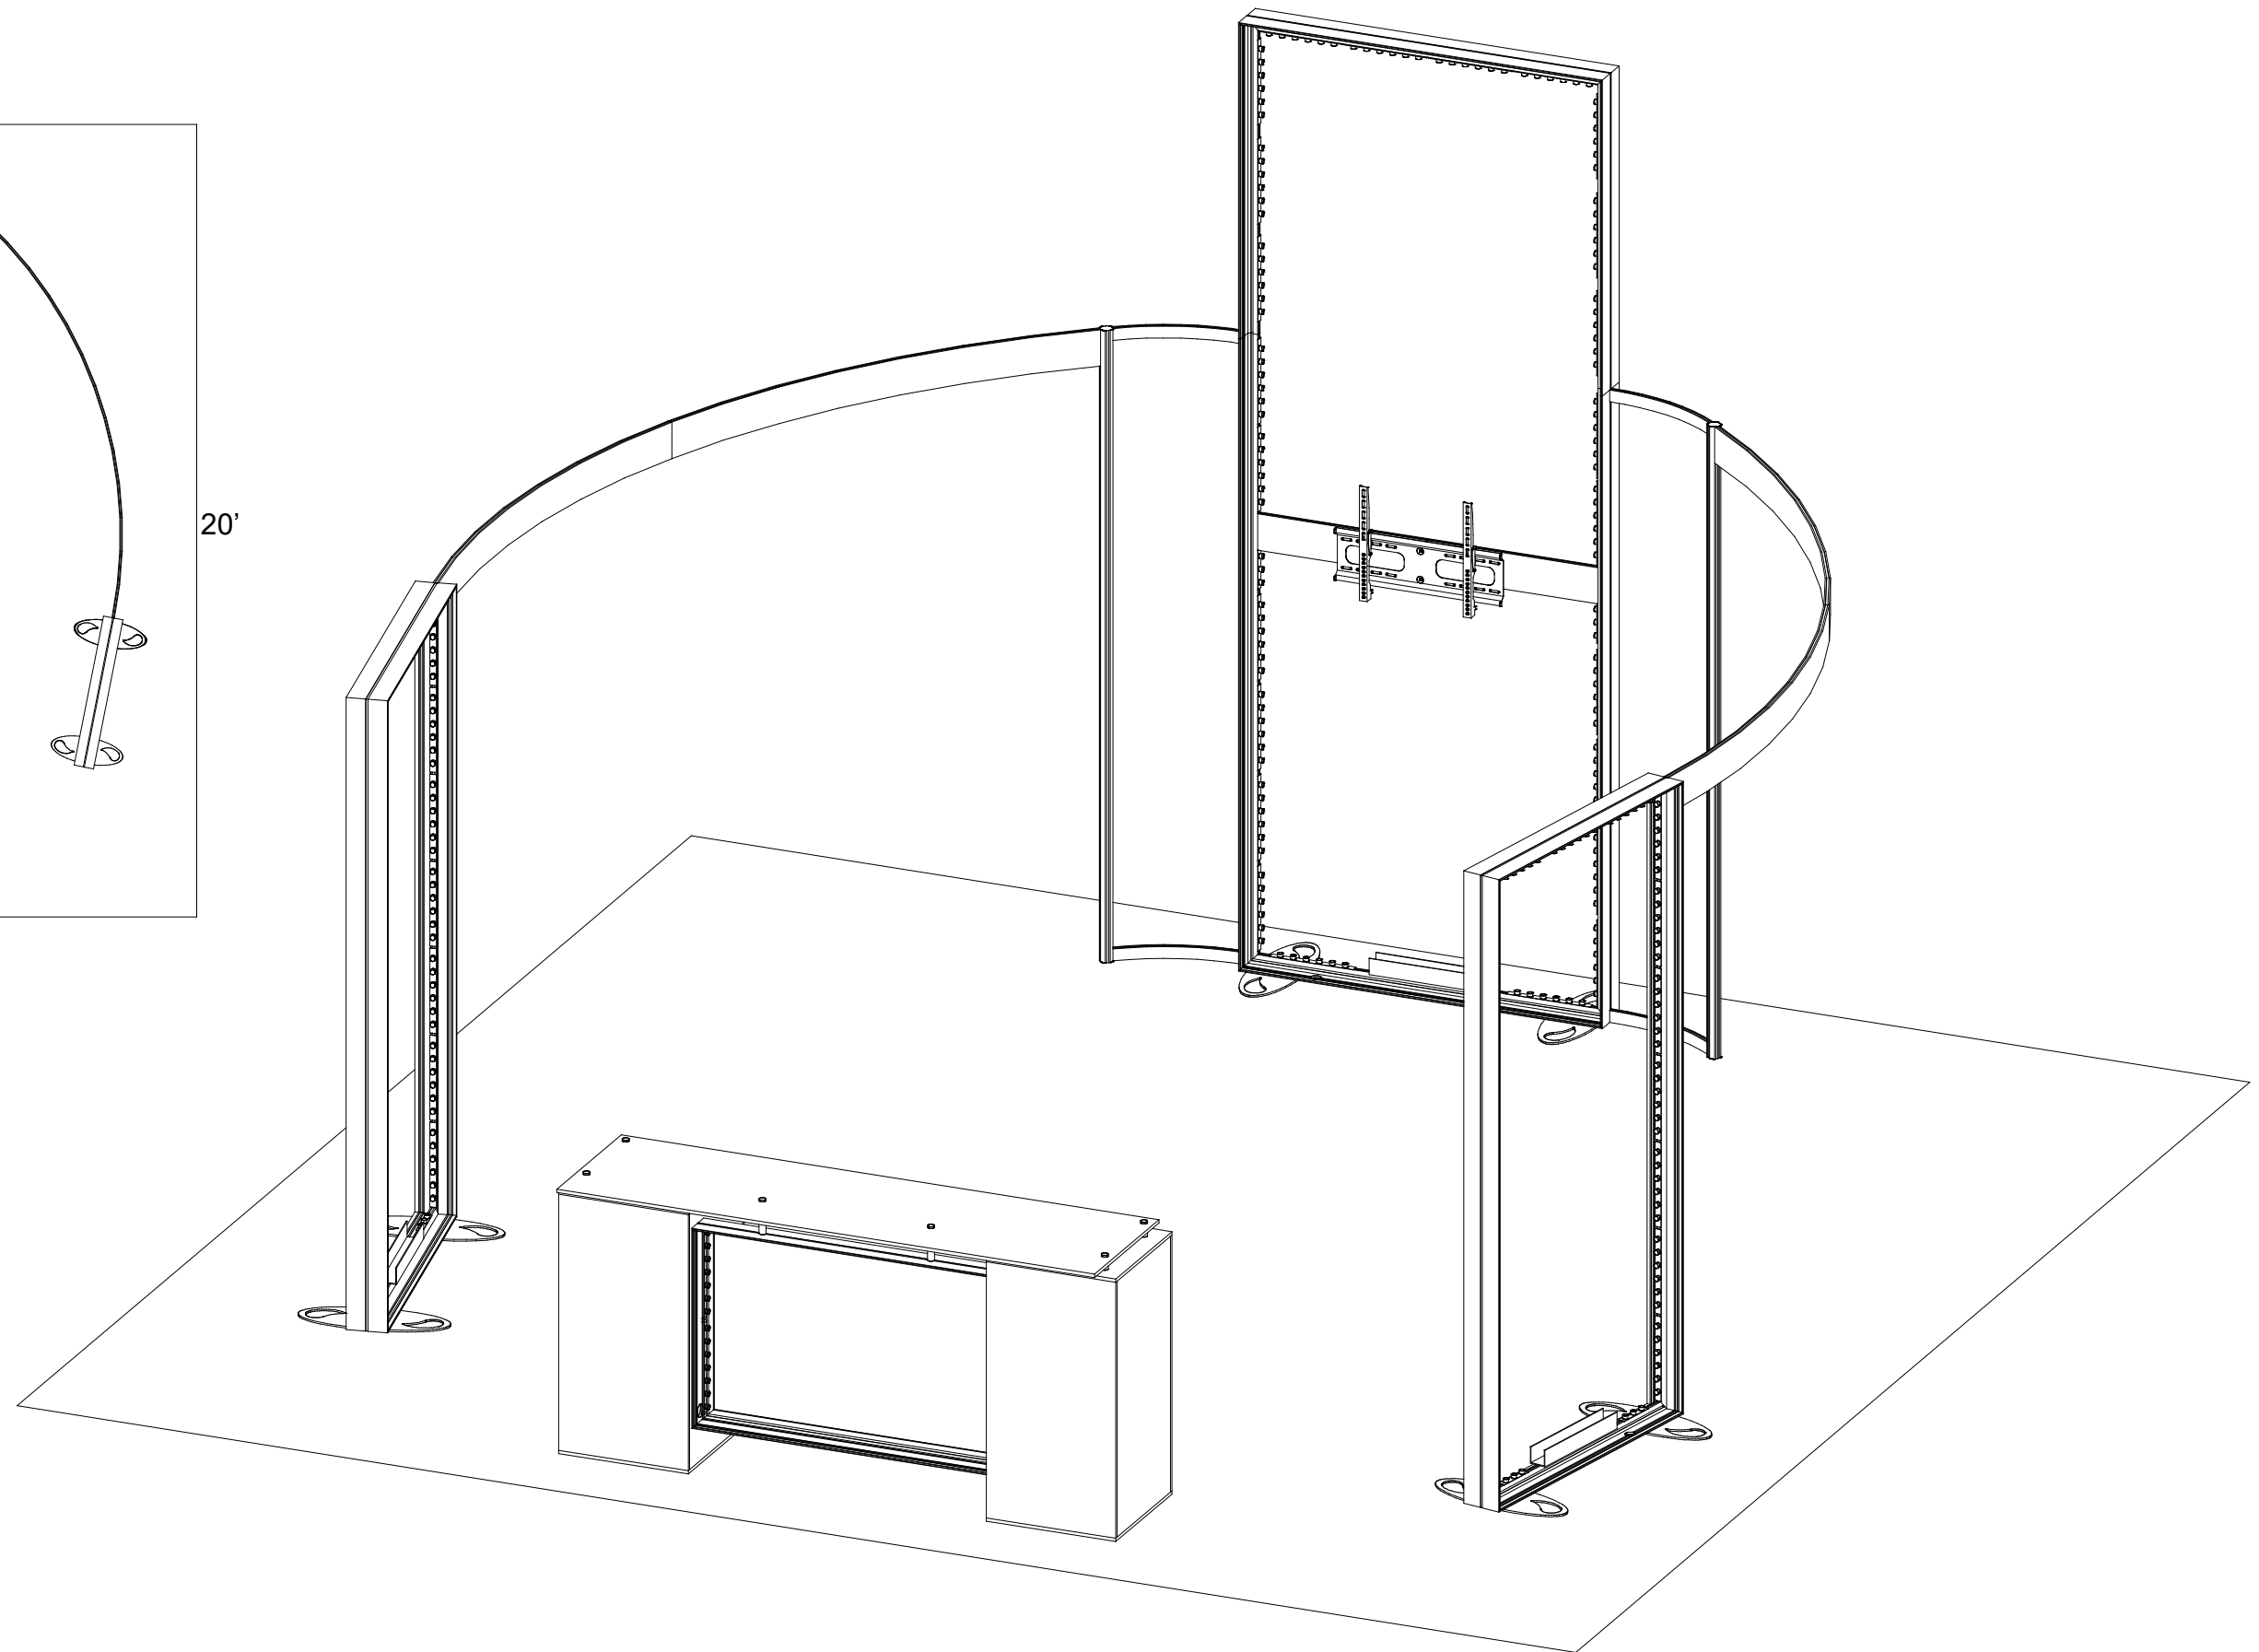


SETUP INSTRUCTIONS

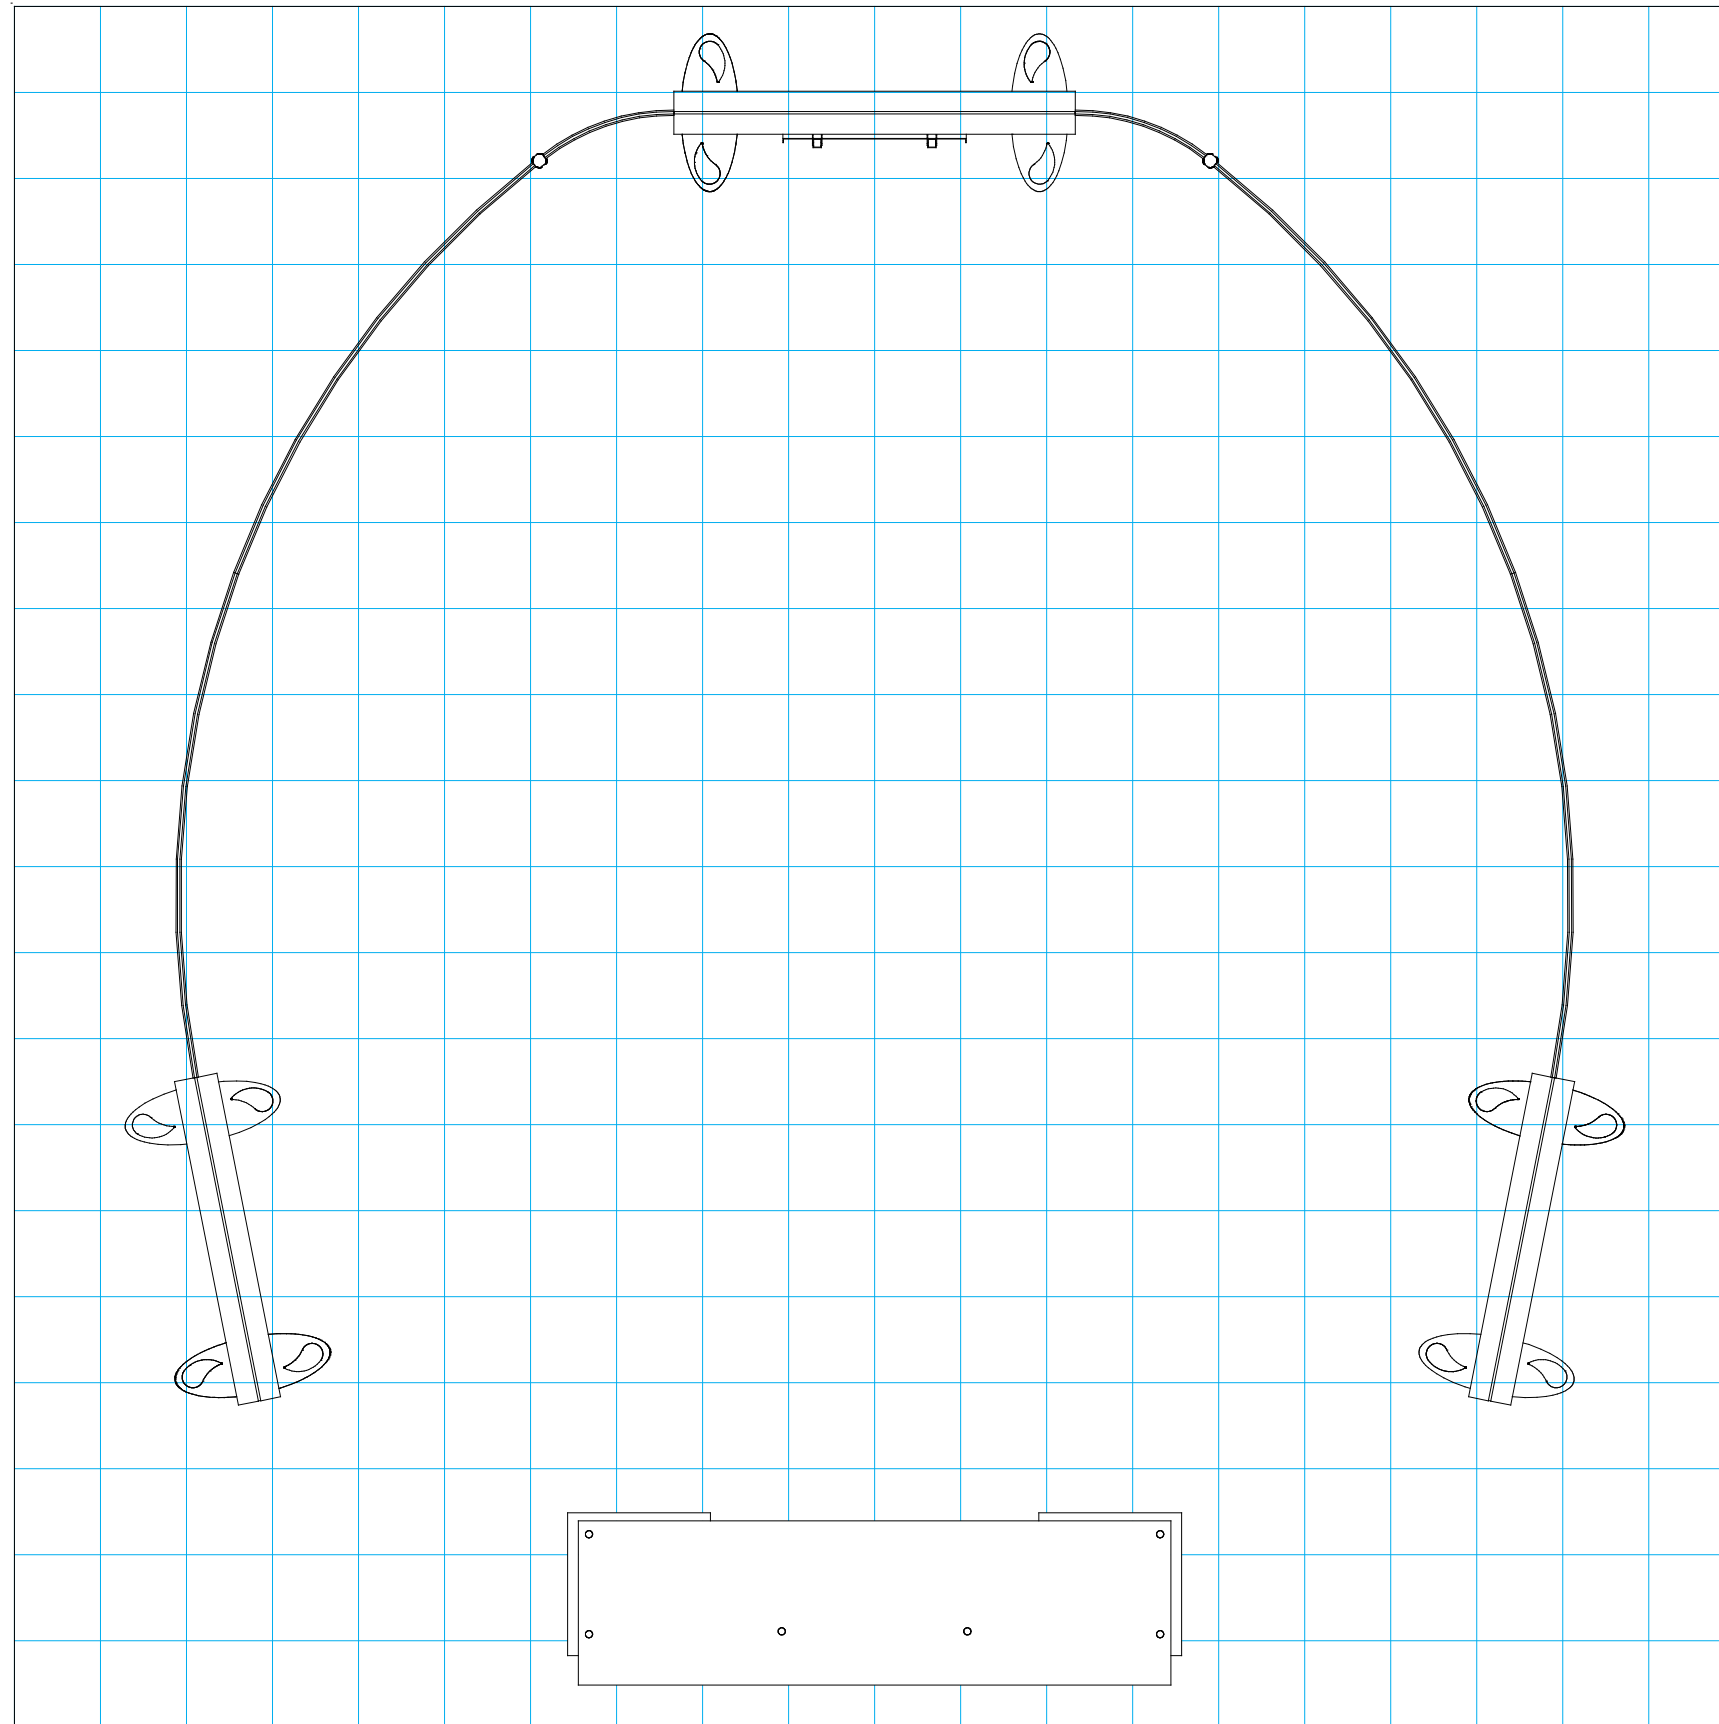


 = 1 sq foot

General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

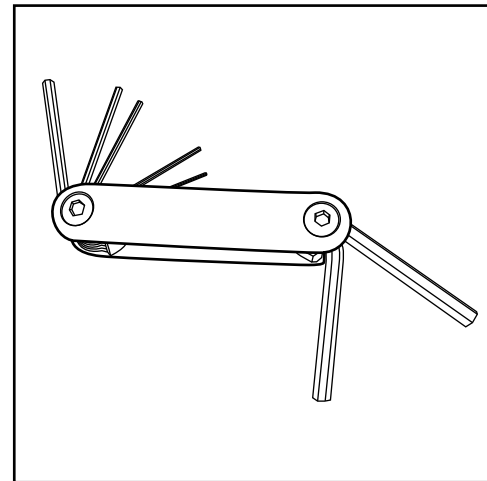

Hex Tool - Essential for Assembly

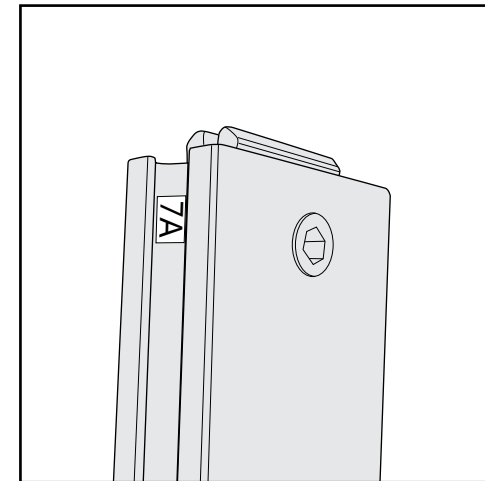

Part Identification - Numbering




WARNING

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

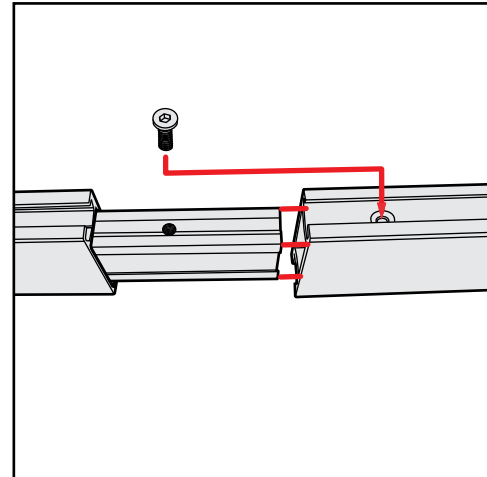


Spline Connection

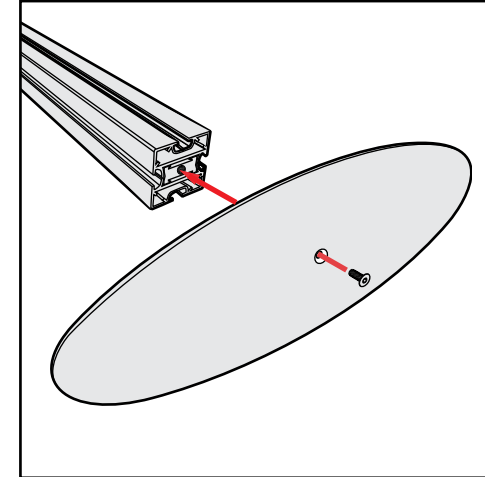


Base Plate & Extrusion Connection




DO NOT USE POWER TOOLS

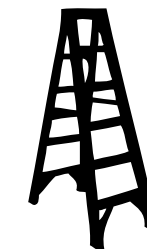

LADDERS OR LIFTS
MAY BE REQUIRED

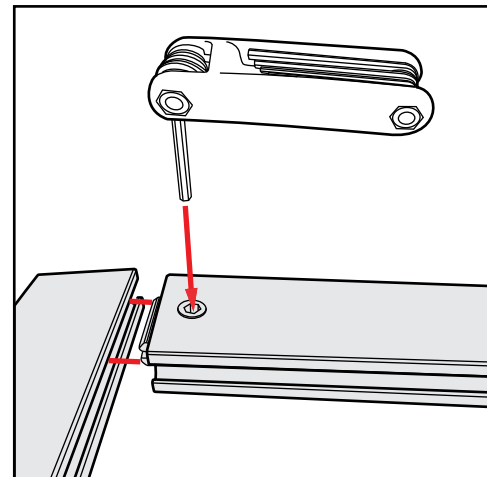

Extrusion & Lock Connection

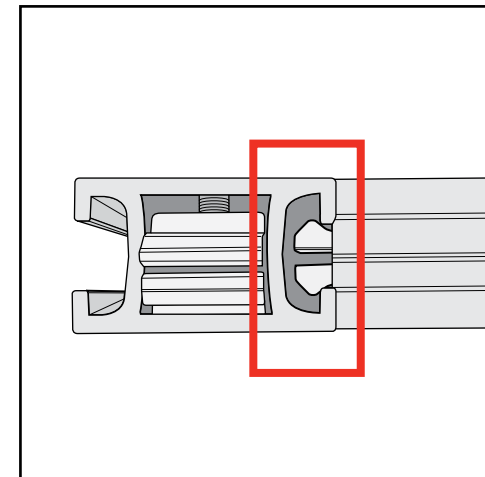

Engaged Lock



ALL CONNECTIONS MUST
BE TIGHTLY SECURED

euro lt | HYBRIDS


Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.


Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is VERY IMPORTANT.

Cleaning and Packing Your Display


- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts, countertops, or panels use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

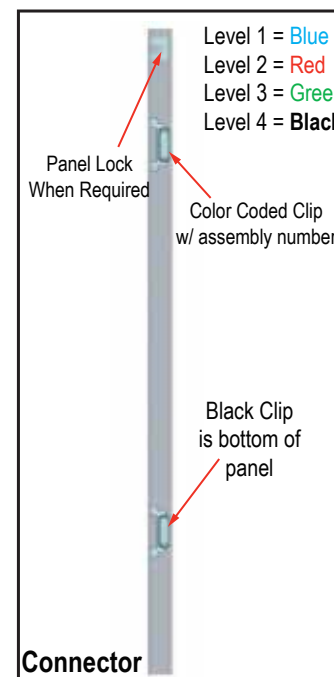


Each component has 2 clips, the lower clip is ALWAYS black. The top clip is color coded to distinguish which level. The color coded clip also contains the numbered label.

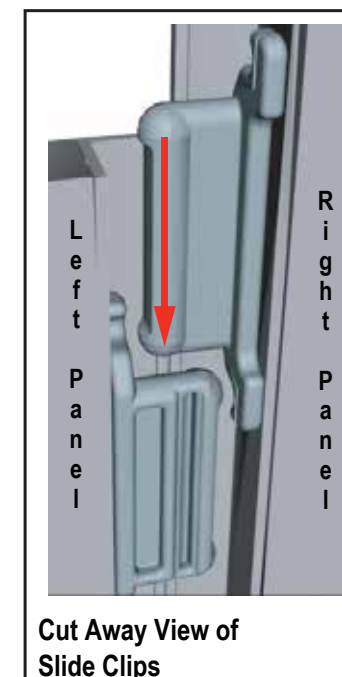

Components connect together by aligning them and sliding downward connecting clips together.

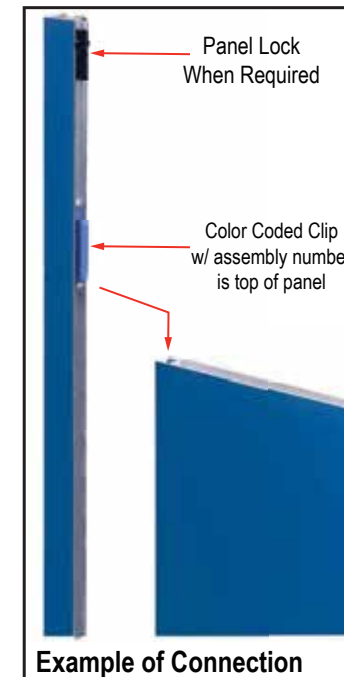

Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

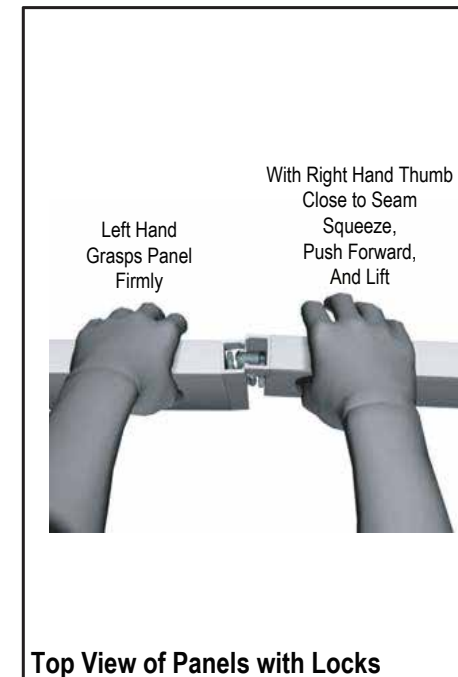

The first level of components contain panel locks that are located at the top of the panel for extra stability and seamless connection. When disassembling panels twist top connection slightly and lift right panel upward.


General Setup Instructions for Extrusion System



Most exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.




Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.

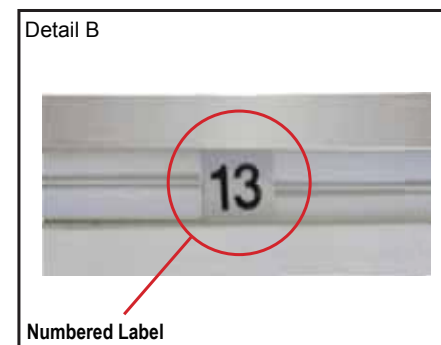


Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With extrusion components the labels contain Black numbers unless otherwise specified.



Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.

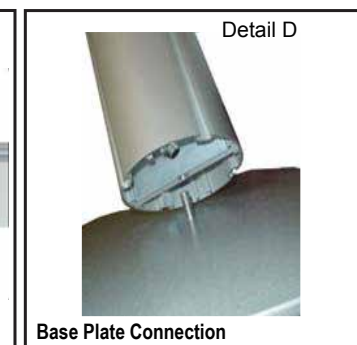

Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

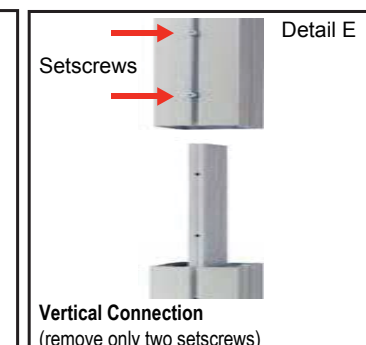


When vertical extrusions are packed in portable cases rather than crates or tubs, they must be broken down into smaller sections which then require assembly.

Remove only (2) setscrews when disassembling. Replace setscrews in extrusion after assembling it. Before packing, replace setscrews in extrusion to avoid losing them.


Straight Connection

When assembling frame, first attach all **straight connectors**, then attach **corner connectors**.

- 1) Place extrusions end-to-end.
- 2) Loosen all knobs, then slide **straight connectors** across the seam of extrusions.
- 3) Tighten all knobs to secure connection.

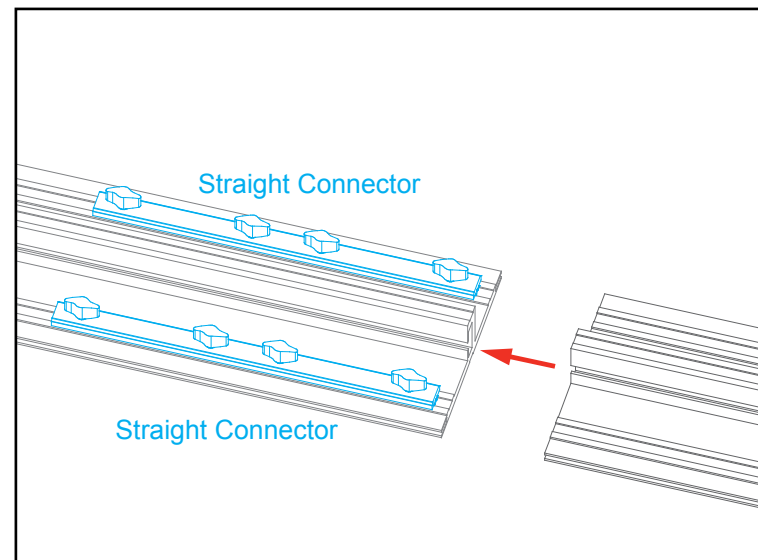

Slide both connectors across seam of extrusions.
Tighten all knobs.

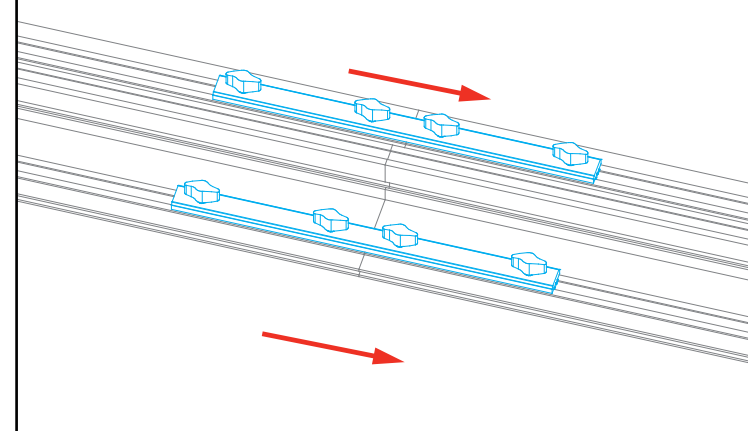

All knobs must be tightened securely to ensure a proper connection.

Disassembly

- 1) Loosen all knobs.
- 2) Slide connectors off of one extrusion.
- 3) Tighten knobs to prevent loss during packing & shipping.


Keep straight connectors in groove of extrusion. Do not remove connectors during disassembly.

Corner Connection


- 1) Loosen knobs, then slide vertical extrusions onto **corner connectors** of **lower** horizontal extrusion.
- 2) Slide **corner connectors** of **upper** horizontal extrusion into grooves of vertical extrusions.
- 3) Tighten all knobs to secure connection.

Disassembly

- 1) Loosen knobs on vertical extrusions.
- 2) Slide the vertical extrusions off of **corner connectors** on lower and upper horizontal extrusions.

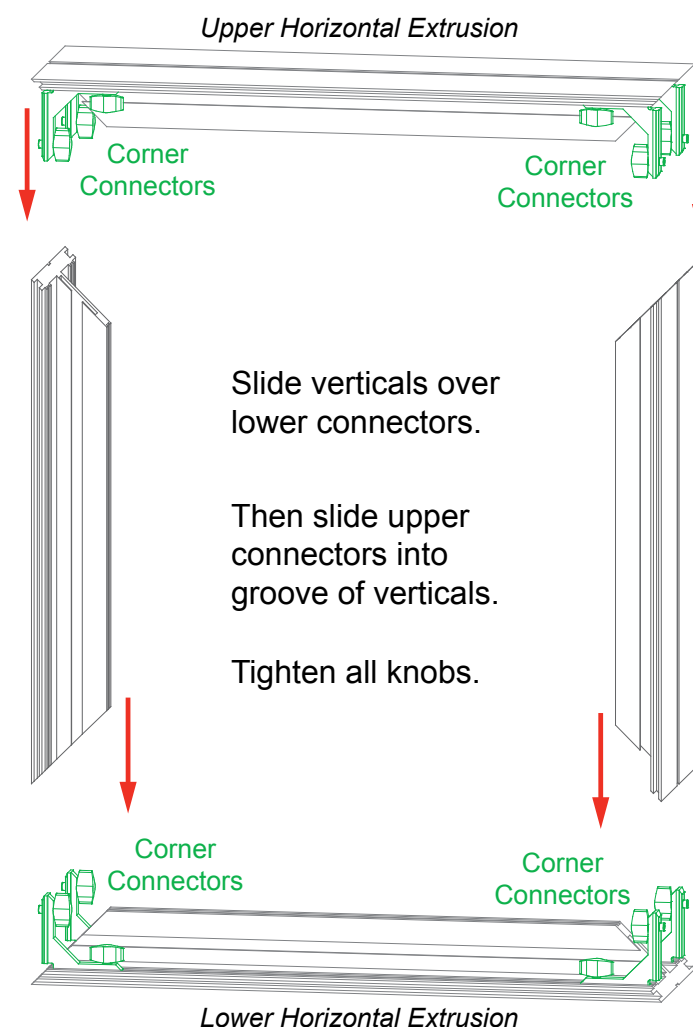


Adjust connectors if necessary to prevent gaps in connection.

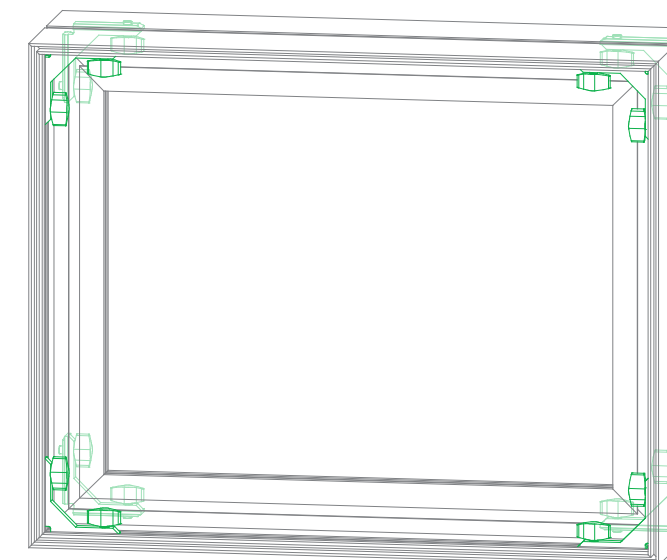

COMPLETED ASSEMBLY

All knobs must be tightened securely to ensure a proper connection.

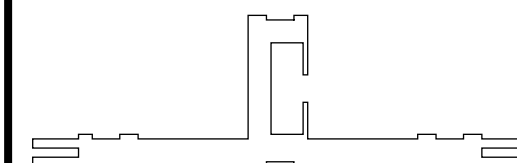


CEI152 Profile


Straight Connection

When assembling frame, first attach all **straight connectors**, then attach **corner connectors**.

- 1) Place extrusions end-to-end.
- 2) Loosen all knobs, then slide **straight connectors** across the seam of extrusions.
- 3) Tighten all knobs to secure connection.

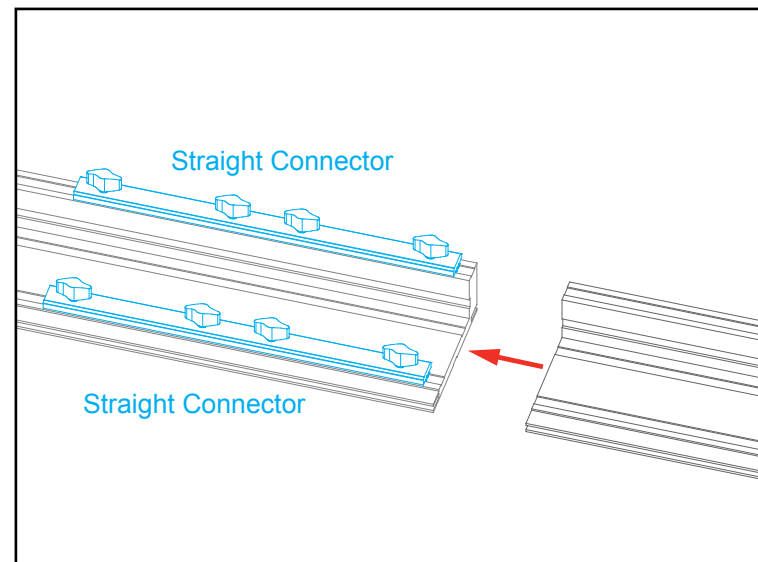

Slide both connectors across seam of extrusions.
Tighten all knobs.

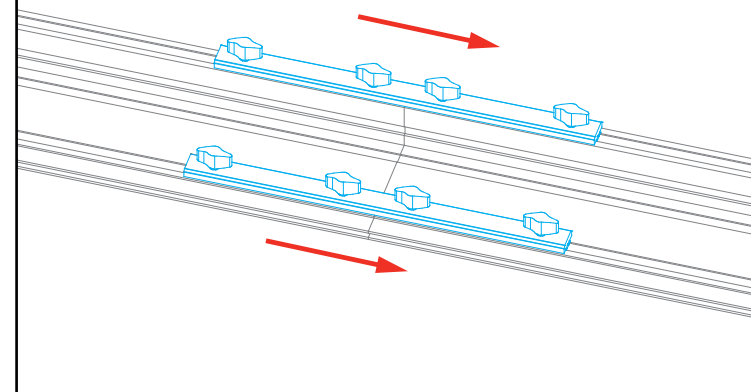

All knobs must be tightened securely to ensure a proper connection.

Disassembly

- 1) Loosen all knobs.
- 2) Slide connectors off of one extrusion.
- 3) Tighten knobs to prevent loss during packing & shipping.


Keep straight connectors in groove of extrusion. Do not remove connectors during disassembly.

Corner Connection


- 1) Loosen knobs, then slide vertical extrusions onto **corner connectors** of **lower** horizontal extrusion.
- 2) Slide **corner connectors** of **upper** horizontal extrusion into grooves of vertical extrusions.
- 3) Tighten all knobs to secure connection.

Disassembly

- 1) Loosen knobs on vertical extrusions.
- 2) Slide the vertical extrusions off of **corner connectors** on lower and upper horizontal extrusions.

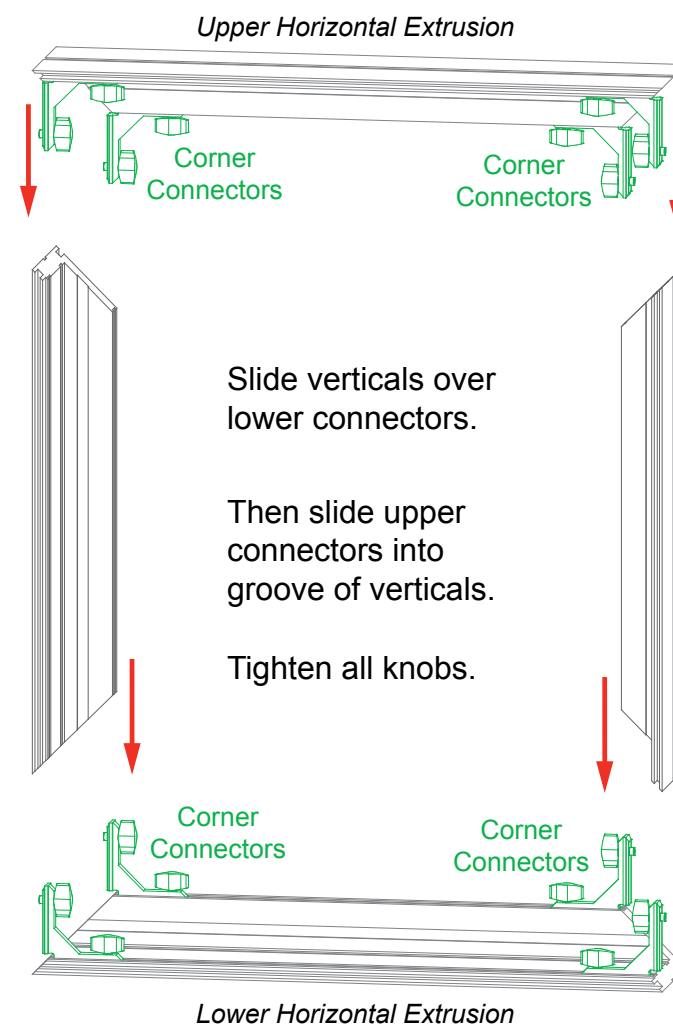


Adjust connectors if necessary to prevent gaps in connection.

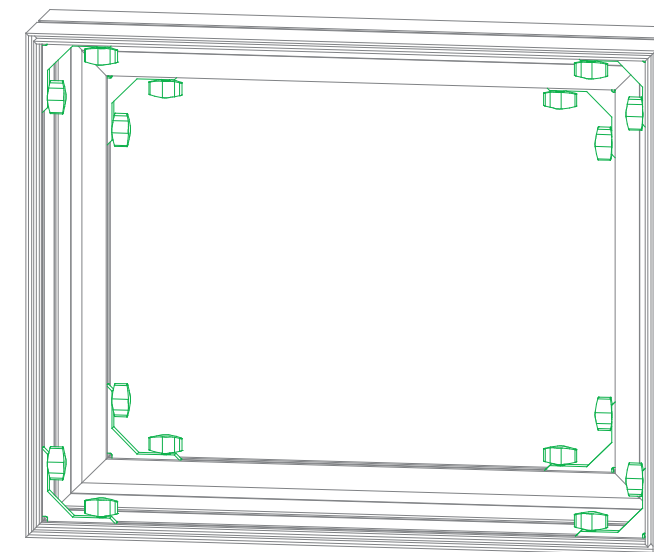

COMPLETED ASSEMBLY

All knobs must be tightened securely to ensure a proper connection.

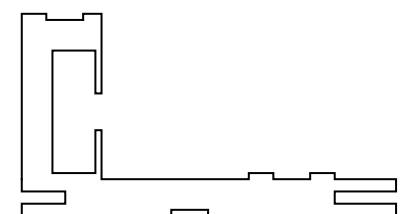


CEI110 Profile


SEG Graphic Installation *in 3 Steps*

The Perfect Fit


STEP 1: Attach Corners

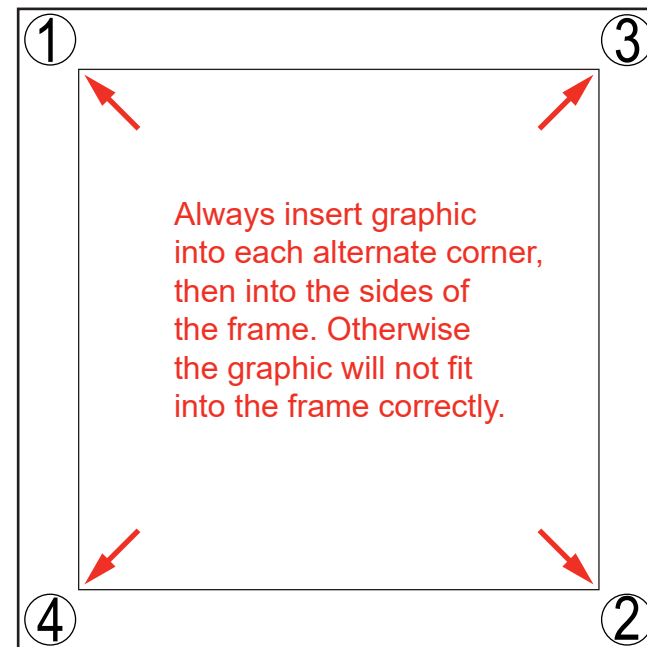

STEP 2: Attach Middle

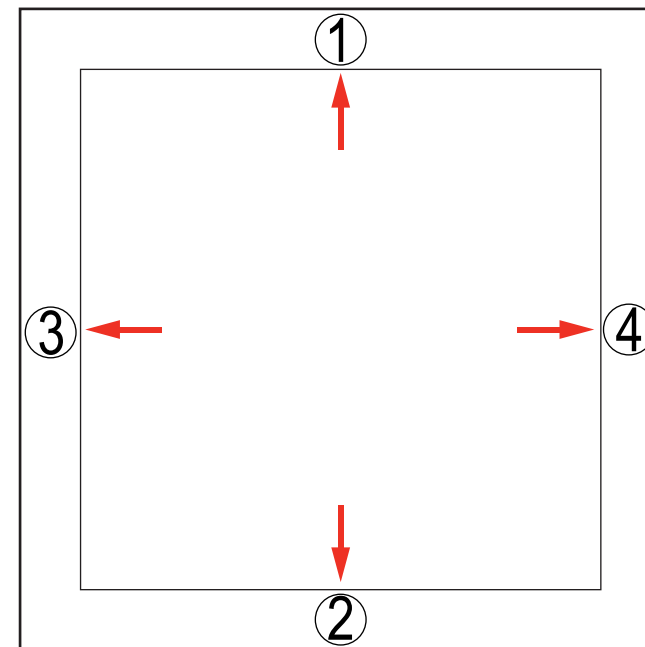

STEP 3: Attach Sides

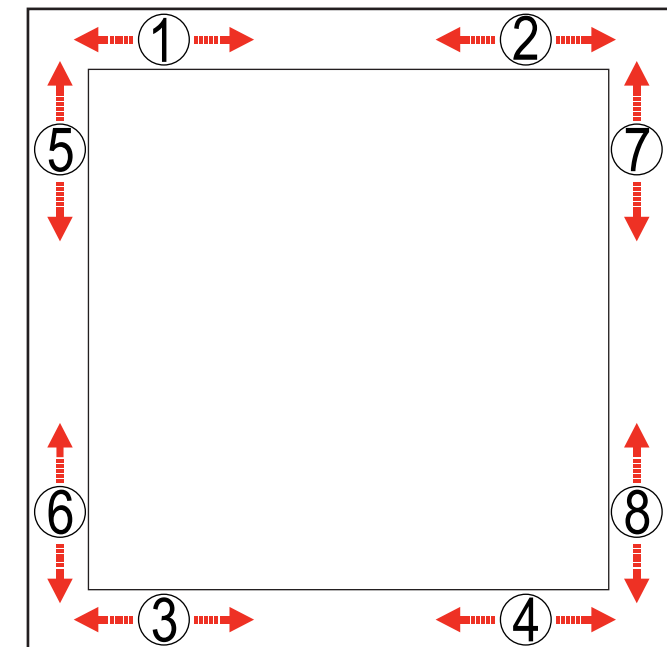

Insert narrow side of silicone welt into the channel at corner 1, with fabric to the outside.

Repeat for opposite corner 2, then corner 3, then corner 4.

Once corners are attached, press the middle of edge 1 into the channel. Then press middle of edge 2 into the channel on opposite side.

Repeat with edge 3 & 4.

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location 1. Repeat the process between center and corner at location 2.

Do the same for welt on opposite side, at locations 3 & 4. Then repeat for locations 5 & 6 and 7 & 8.

Once the welt is fully inserted on all sides, smooth out edges as needed for a perfect fit.





To remove the graphic from the frame, locate the fabric **pull tab**. Gently pull on the tab to remove the graphic.

Install video:



CRATE PACKING

Item	Qty.	Description
1	1	96"h CEI152 Vertical Extrusion
2	1	49.823"h CEI152 Vertical Extrusion w/ reverse miter
3	1	96"h CEI152 Vertical Extrusion
4	1	49.823"h CEI152 Vertical Extrusion w/ reverse miter
5	1	56"w CEI152 Horizontal Extrusion
6	1	56"w CEI152 Horizontal Extrusion
7	1	52.353" Z140 Horizontal Extrusion
8	2	8" x 22" Base Plate
--	1	U-Channel

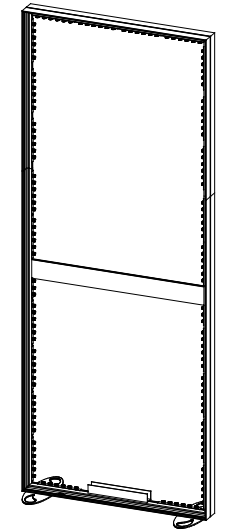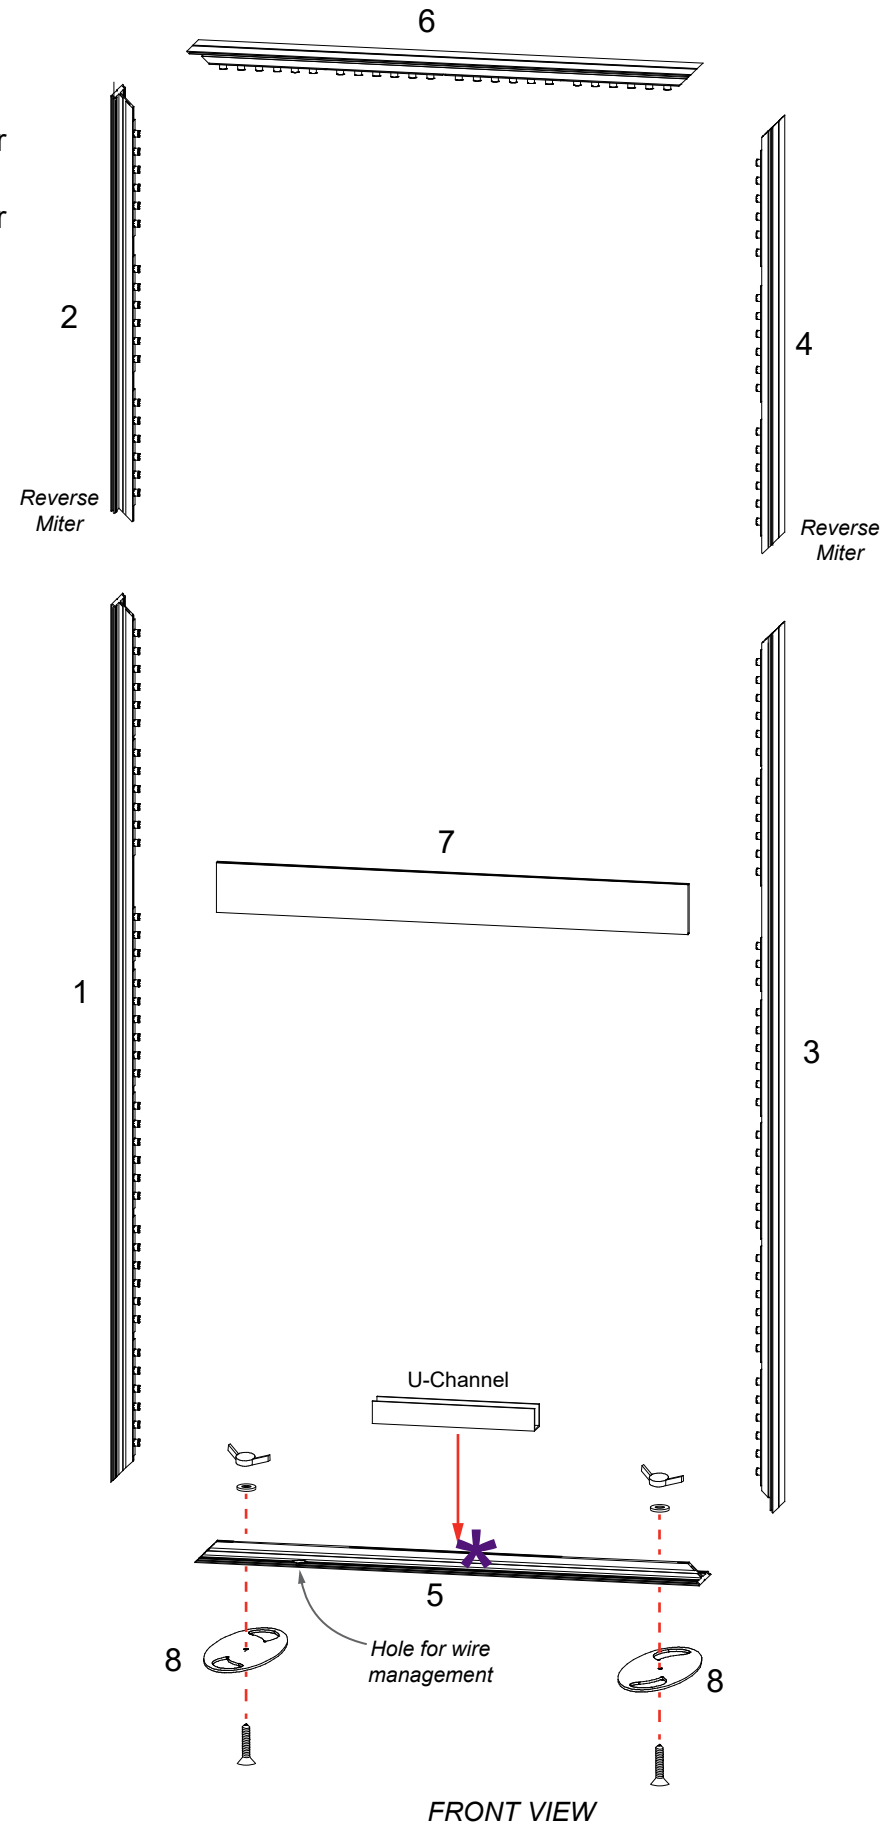


When assembled

* U-Channel Attachment

Slide V4 connectors into top groove of horizontal extrusion. Tighten set-screws to secure.

Use bolts to connect U-Channel to horizontal.

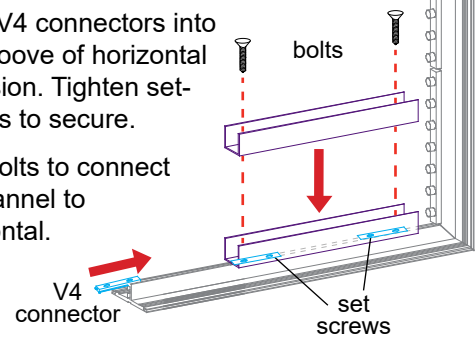



Steps:

Refer to the CEI152 Frame Assembly general information page.

- 1) Install U-Channel to horizontal [5]. See [U-Channel Attachment](#) detail.
- 2) Assemble verticals [1-2], [3-4] together.
- 3) Connect vertical assemblies [1/2], [3/4] between horizontals [5,6].
- 4) Attach horizontal [7] between vertical assemblies [1/2], [3/4].
- 5) Install Base Plates [8] to bottom of horizontal [5], using bolts & wing nuts.

Item	Qty.	Description
9	2	96"h RSG540 Vertical Extrusion
10	4	19.722" Z45 curved Horizontal Extrusion



Steps:
1) Connect horizontals [10] between verticals [9] & lightbox verticals [1/2], [3/4], inserting **Infill**.

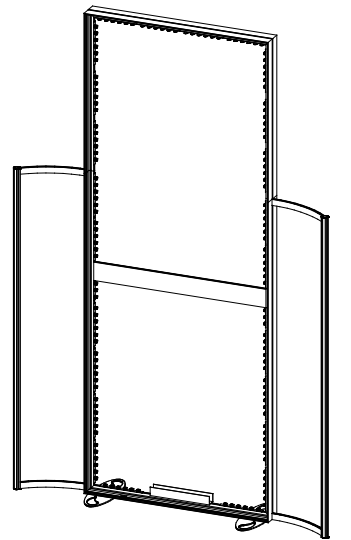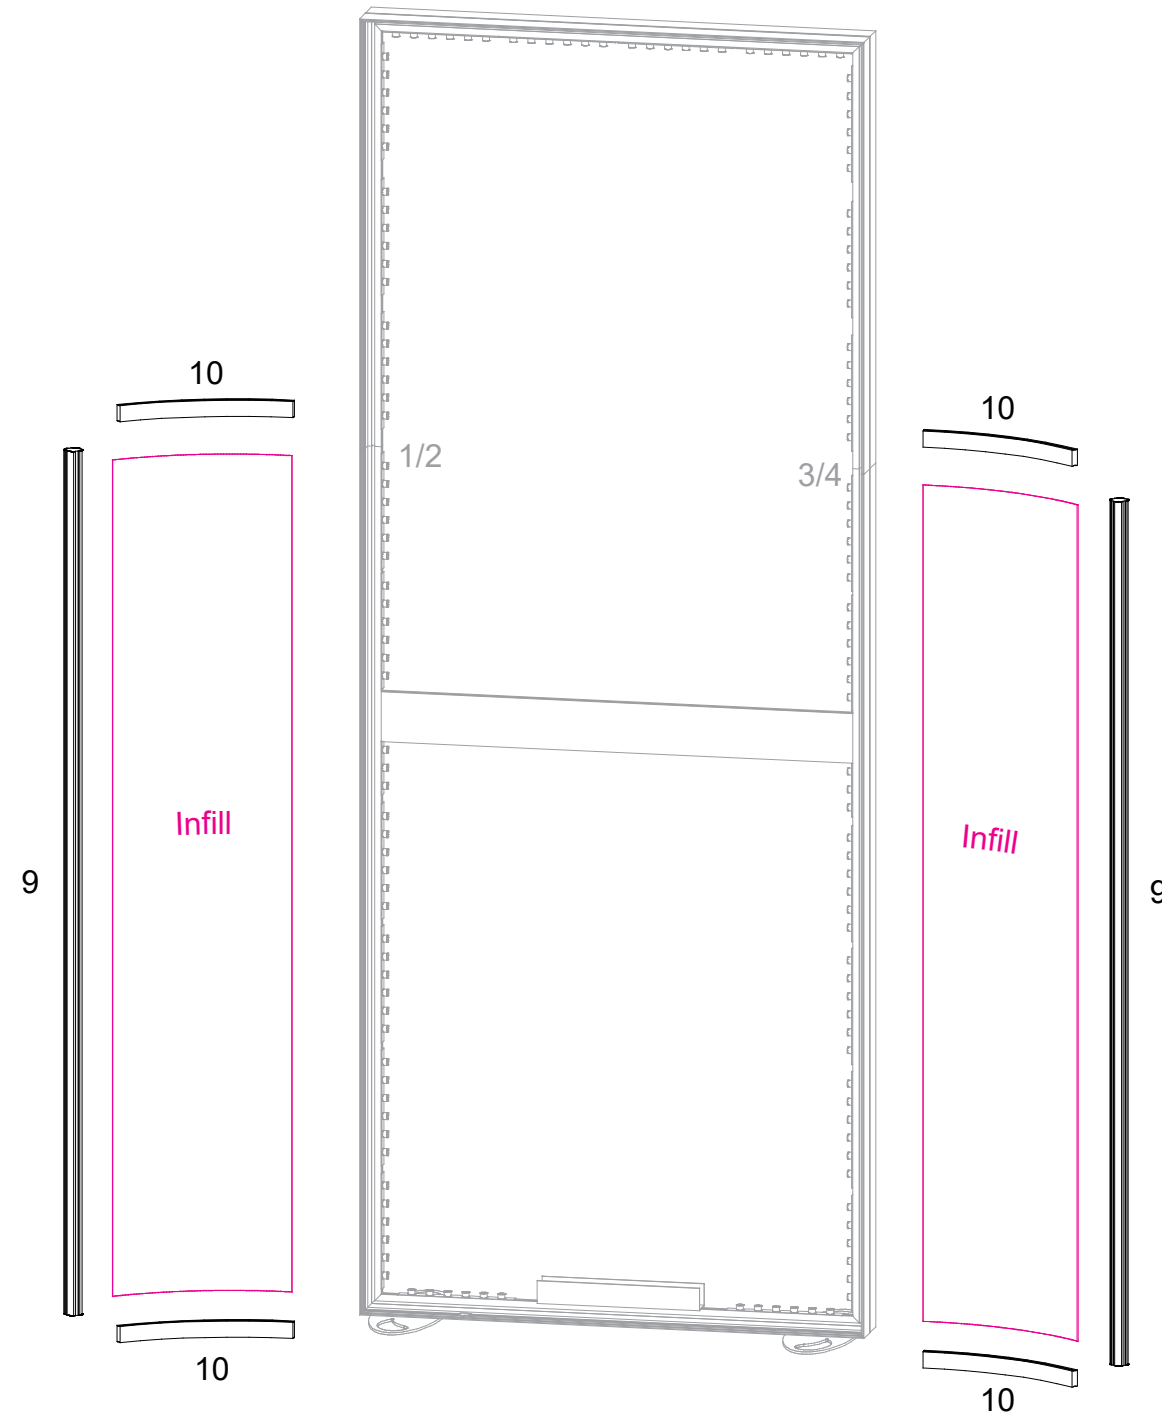

When assembled

Steps:

- 1) Connect power cords to Supernova lights as shown.

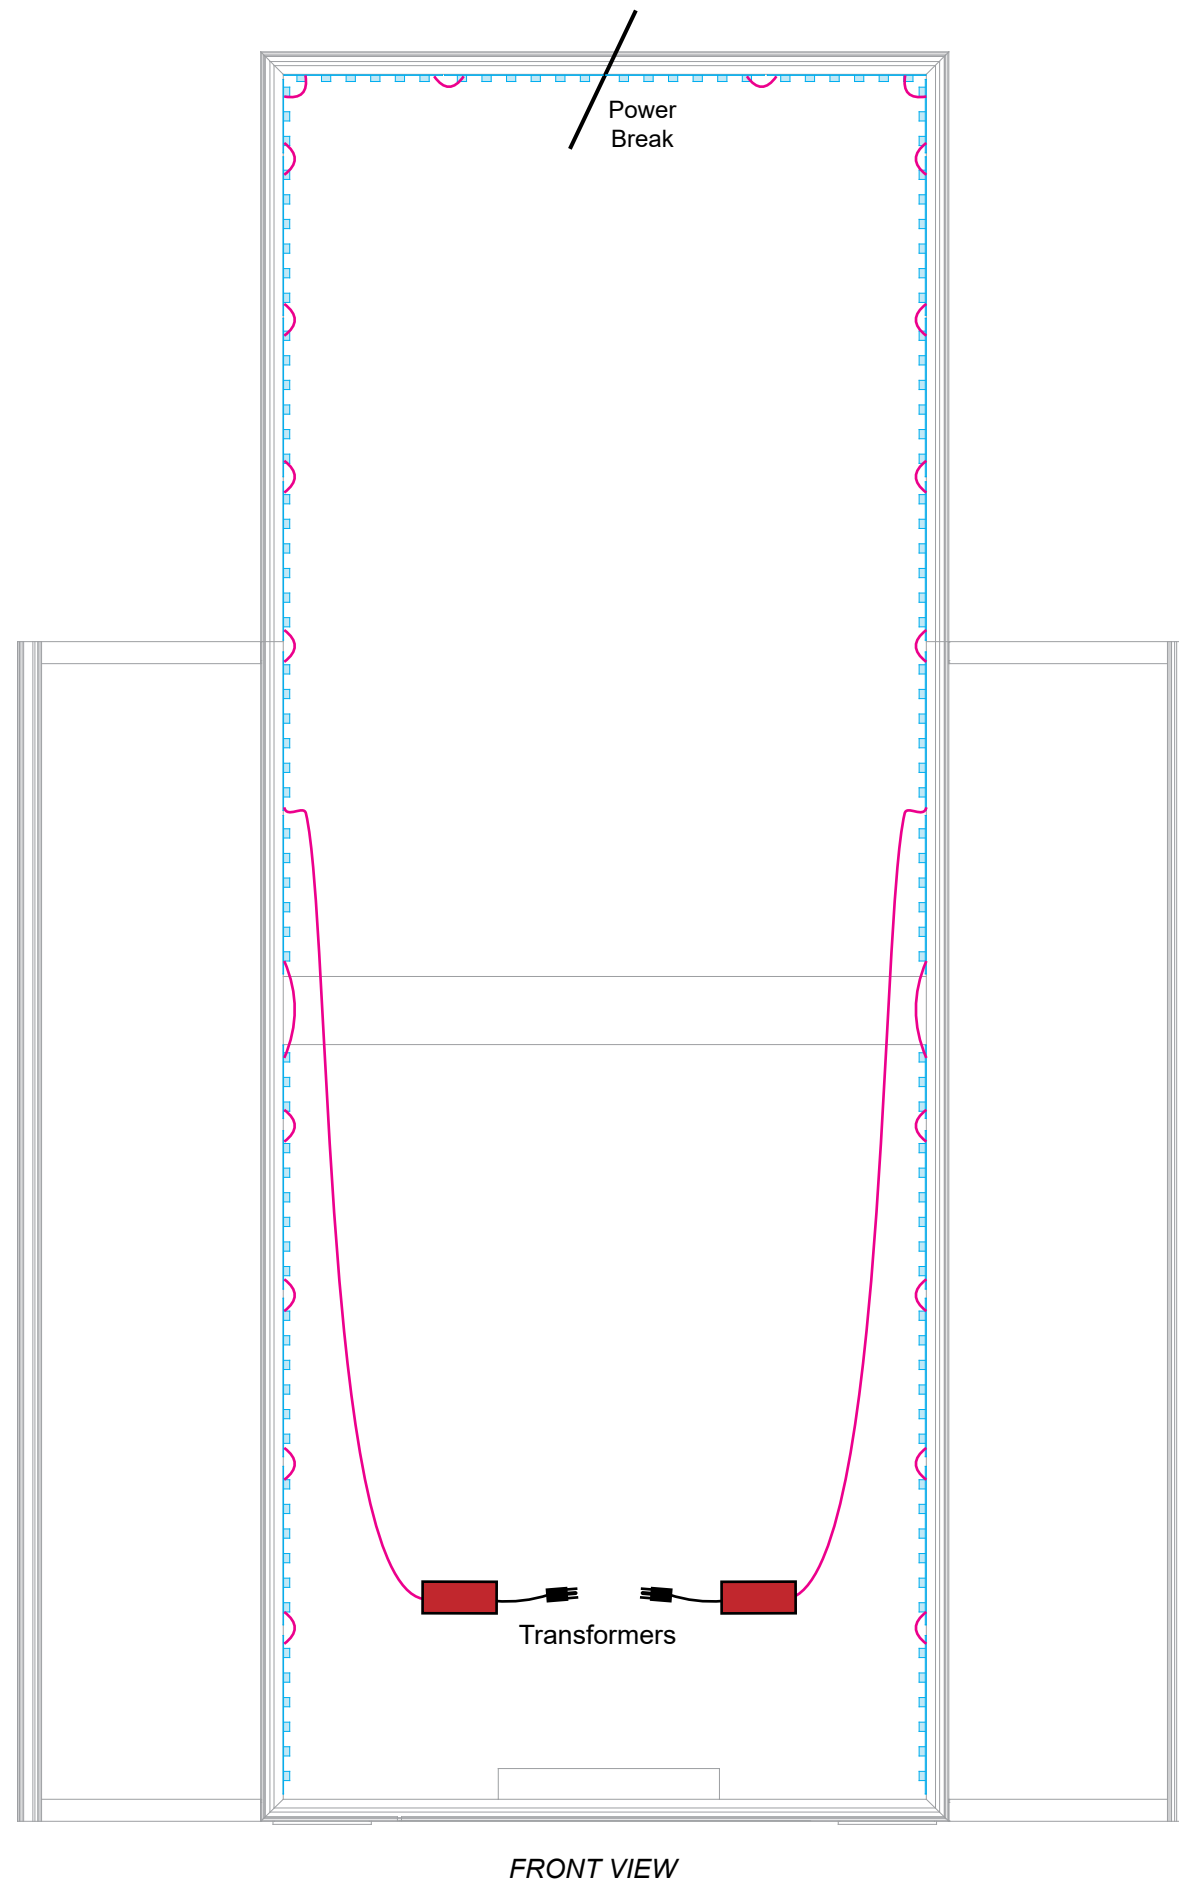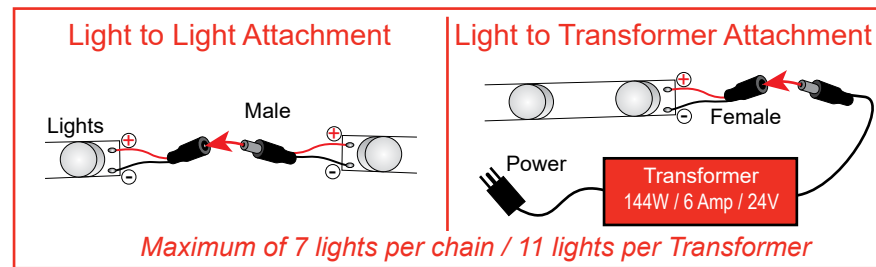


FRONT VIEW

Steps:

Refer to the *SEG Installation general information page*.

- 1) Apply SEG Graphic to *front* of lightbox assembly.
- 2) Install Monitor Mount to horizontal [7].
See [Monitor Mount Attachment](#) detail.
- 3) Apply SEG Graphic to *back* of lightbox assembly.

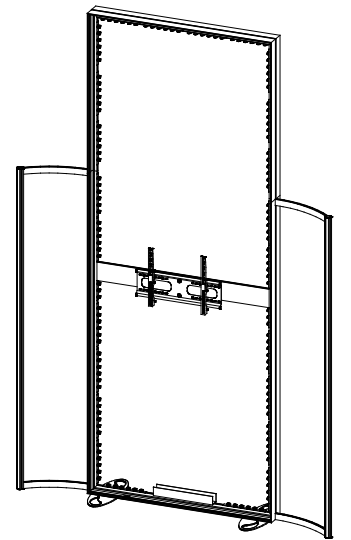


When assembled


*** Monitor Mount Attachment**

Attach Stand-off Barrels to horizontal extrusion using wing nuts.

Install Monitor Mount to Stand-off Barrels using bolts.

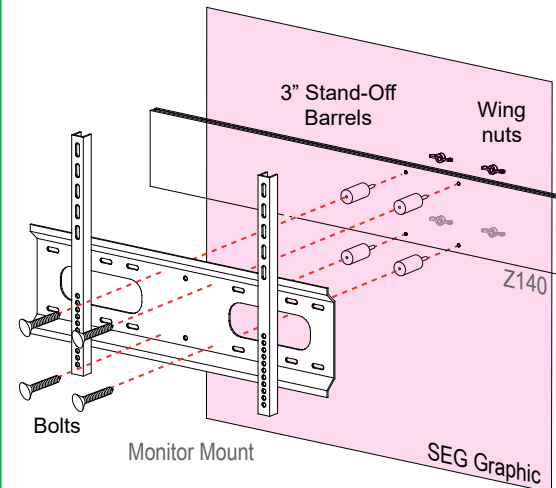

Note: Monitor mount installs over SEG graphic.

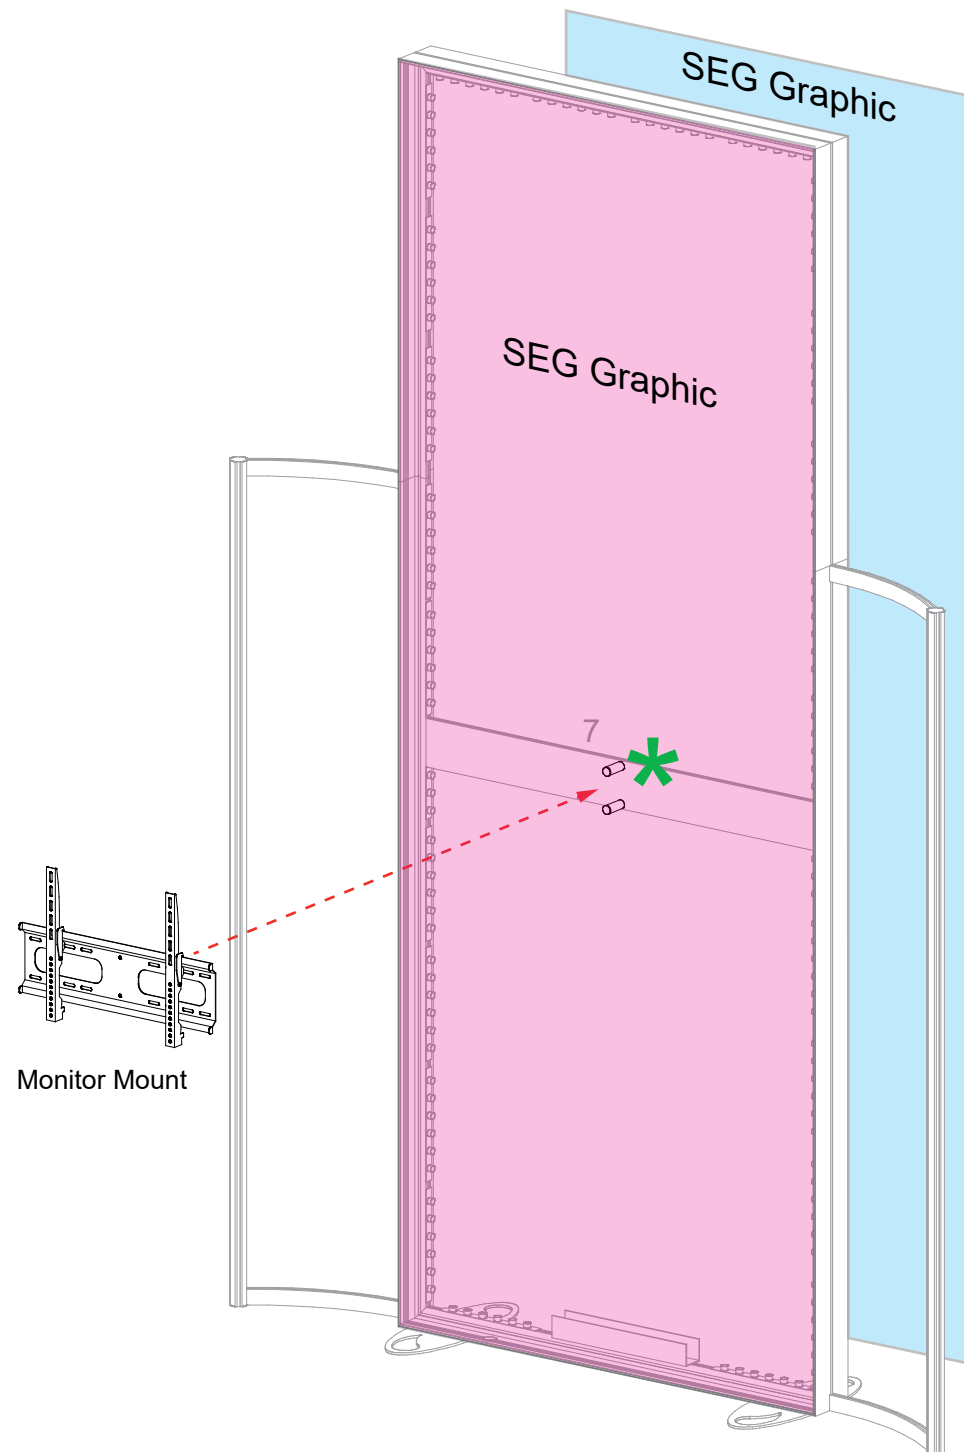


Item	Qty.	Description
13	1	96"h CEI152 Vertical Extrusion
14	1	96"h CEI152 Vertical Extrusion
15	1	46"w CEI152 Horizontal Extrusion
16	1	46"w CEI152 Horizontal Extrusion
17	2	8" x 22" Base Plate
--	2	U-Channel



Steps:

Refer to the *CEI152 Frame Assembly general information page*.

- 1) Install U-Channel to horizontal [15]. See [U-Channel Attachment](#) detail.
- 2) Connect verticals [13,14] between horizontals [15,16].
- 3) Install Base Plates [17] to bottom of horizontal [15], using bolts & wing nuts.

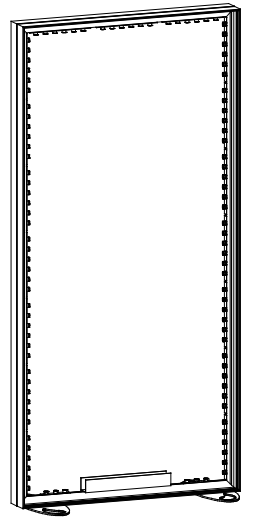

When assembled

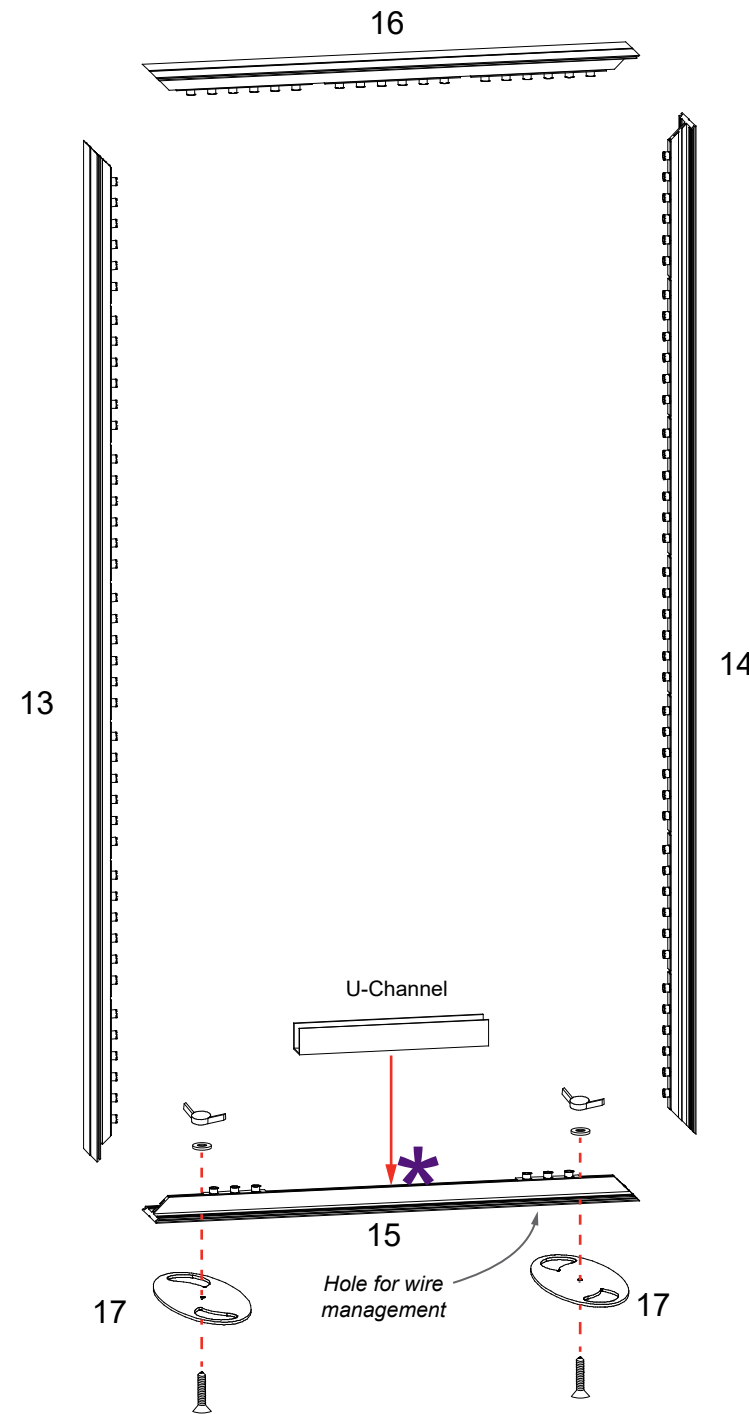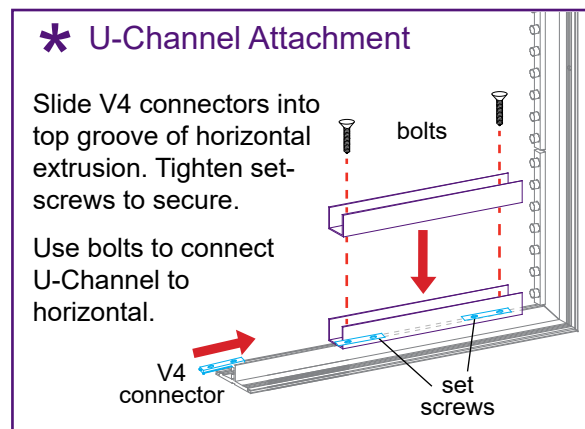


AS VIEWED FROM
INSIDE THE BOOTH

Item	Qty.	Description
18	1	96"h CEI152 Vertical Extrusion
19	1	96"h CEI152 Vertical Extrusion
20	1	46"w CEI152 Horizontal Extrusion
21	1	46"w CEI152 Horizontal Extrusion
22	2	8" x 22" Base Plate
--	2	U-Channel



Steps:

Refer to the CEI152 Frame Assembly general information page.

- 1) Install U-Channel to horizontal [20]. See [U-Channel Attachment](#) detail.
- 2) Connect verticals [18,19] between horizontals [20,21].
- 3) Install Base Plates [22] to bottom of horizontal [20], using bolts & wing nuts.


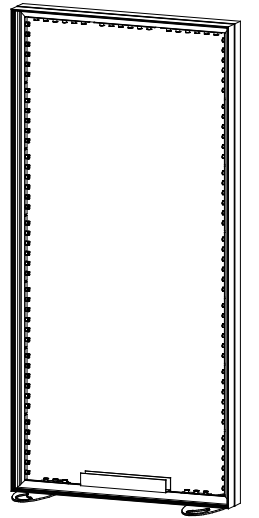


When assembled

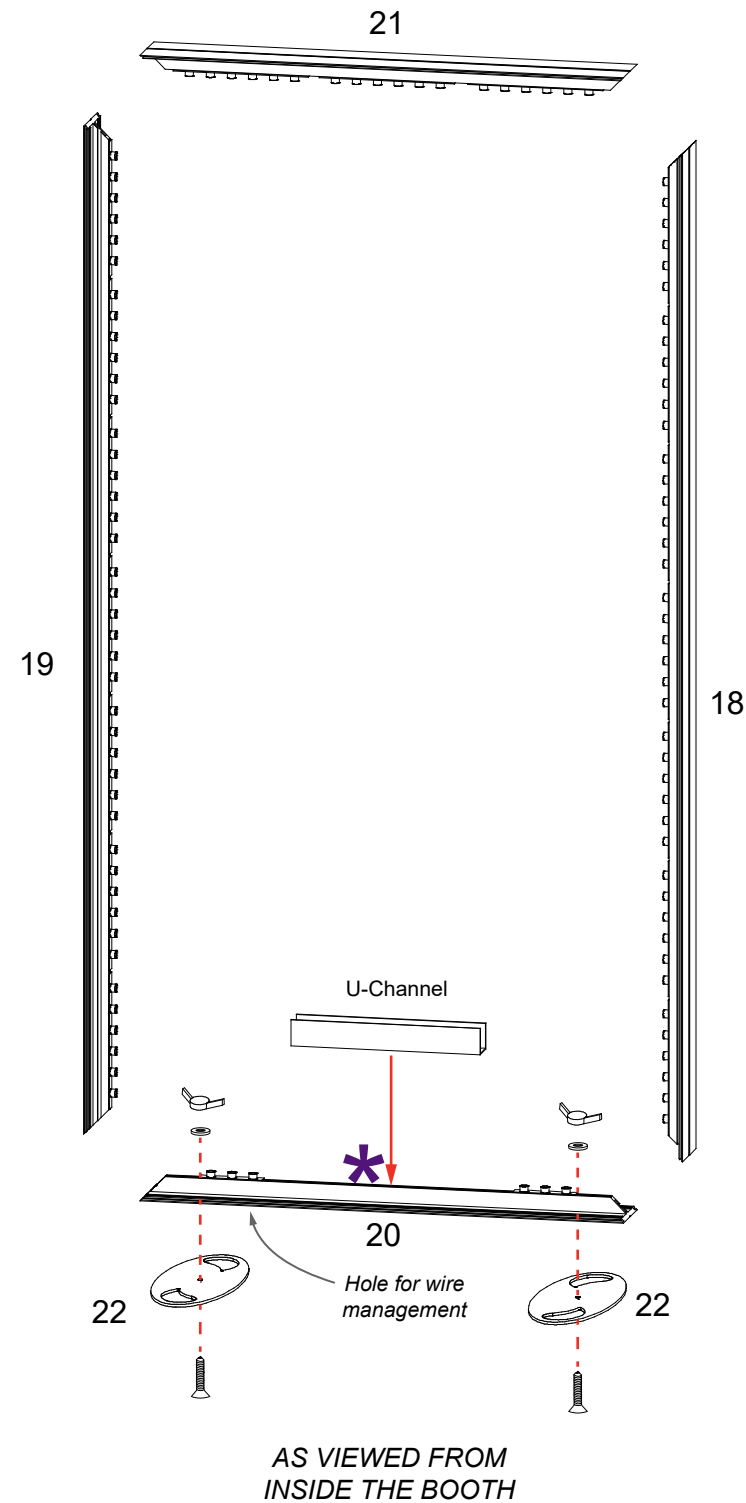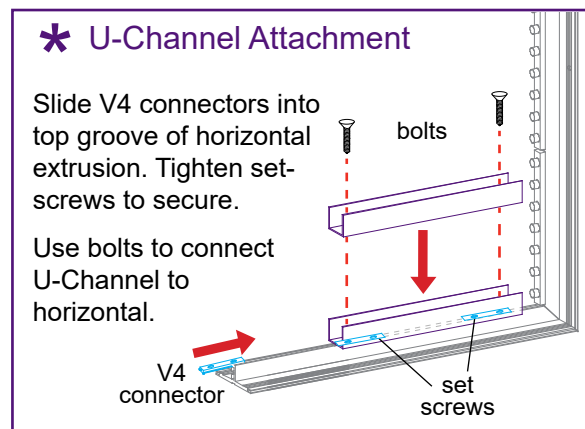

Steps:

- 1) Connect power cords to Supernova lights as shown.


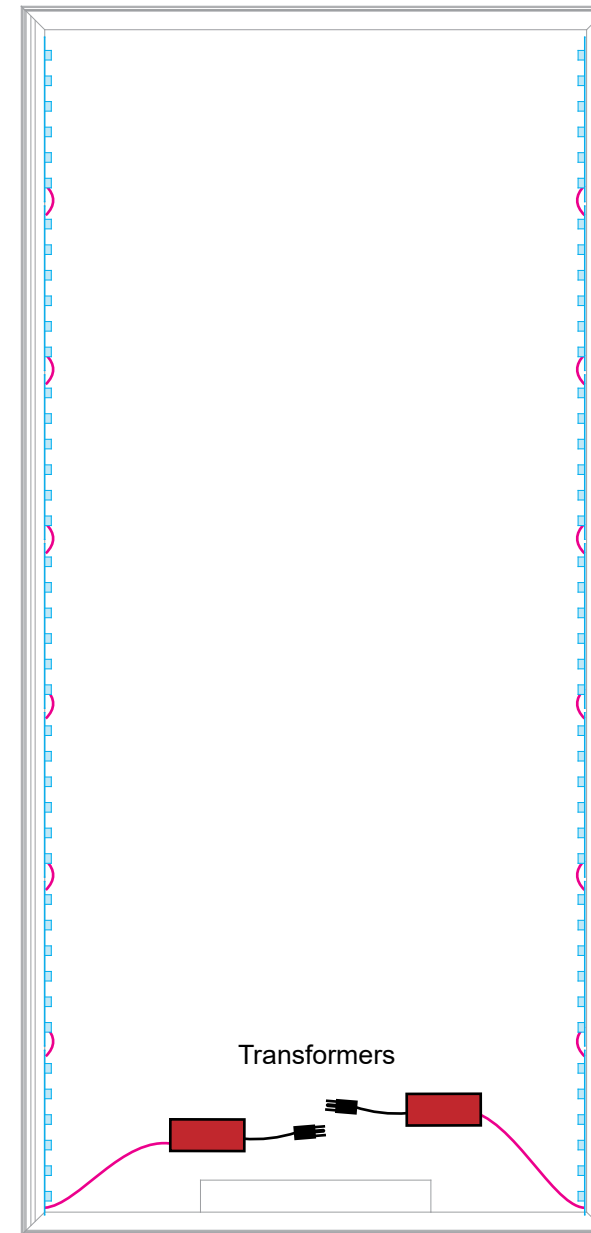
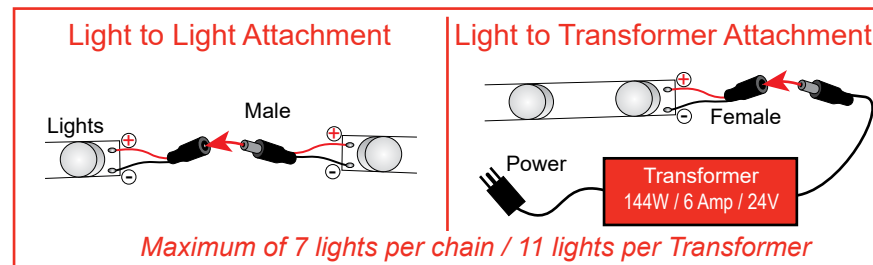


LEFT & RIGHT LIGHTBOXES

Steps:

Refer to the SEG Installation general information page.

1) Apply SEG Graphics to *front & back* of lightbox assembly.

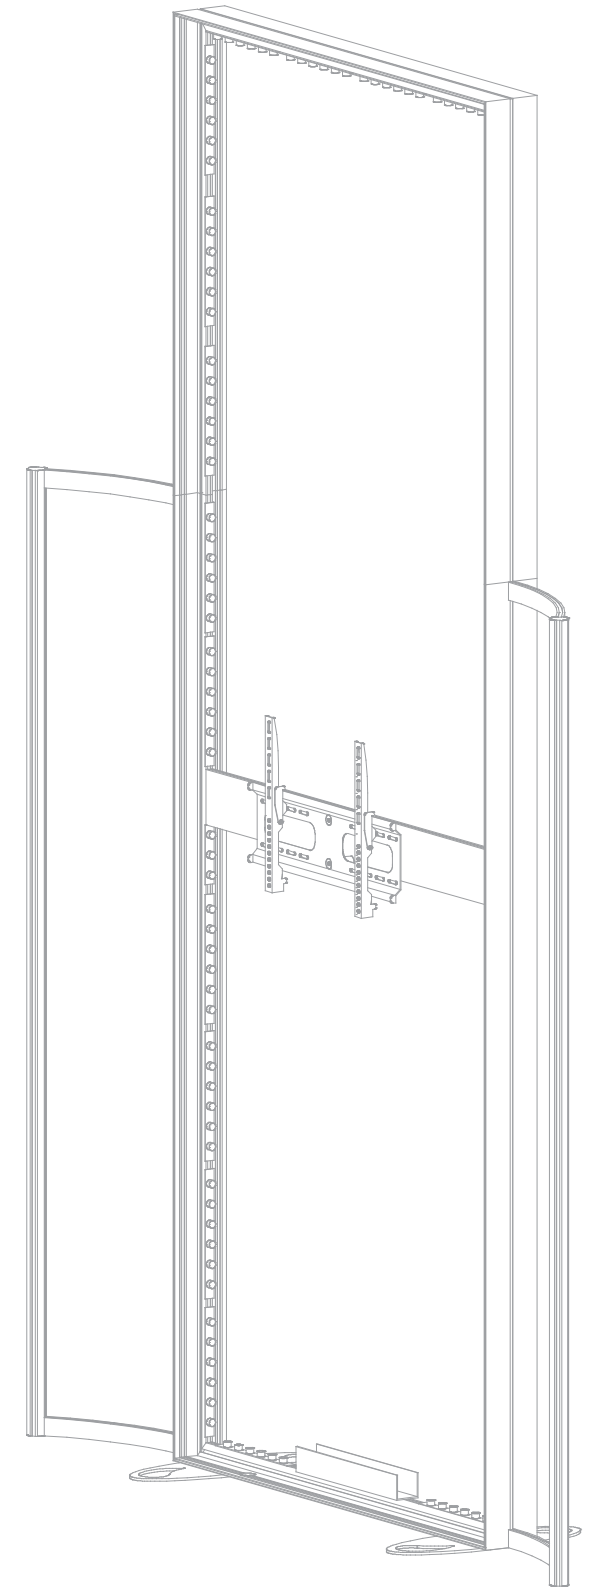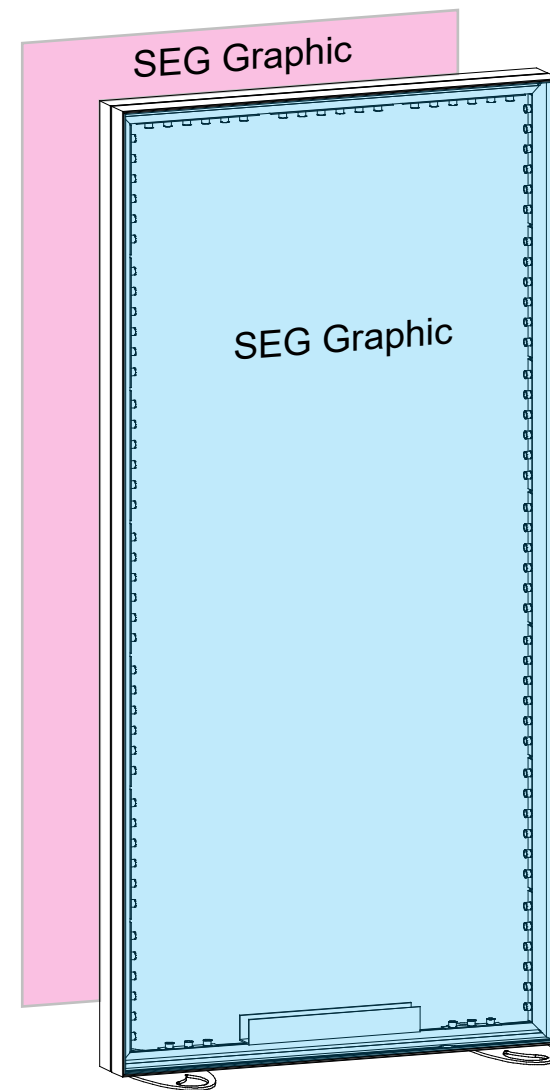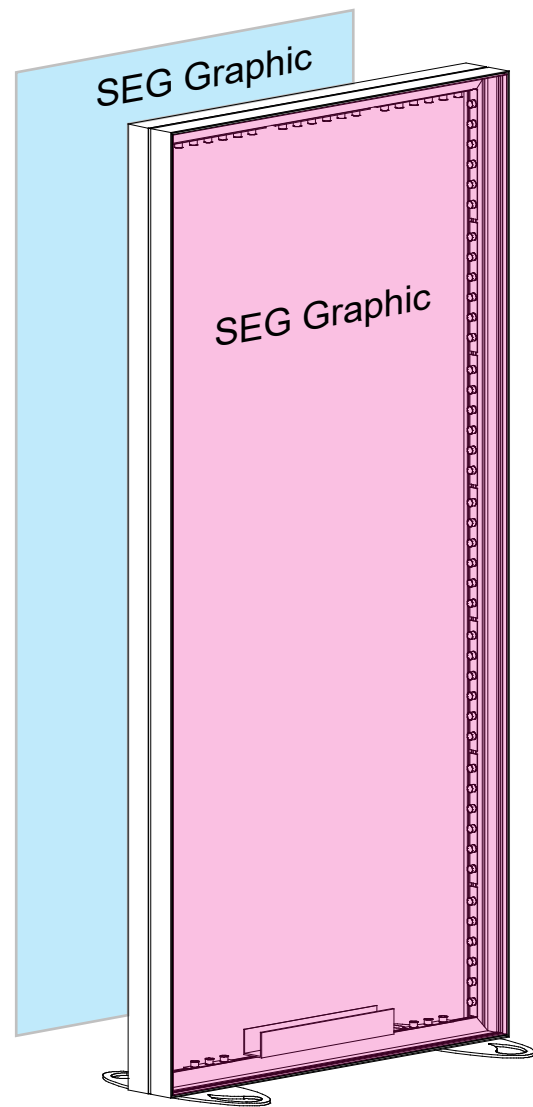



Item	Qty.	Description
11	2	71.66" Z140 curved Horizontal Extrusion
12	2	71.66" Z140 curved Horizontal Extrusion

Steps:


- 1) Assemble extrusions [11-12] together. See [Z140 Spline Connection](#) detail.
- 2) Attach assembly [11/12] between back lightbox verticals [9] & front lightbox verticals [14] & [19] as shown.

✱ Z140 Spline Connection

Slide extrusion over spline connectors.
Tighten set screws to secure connection.

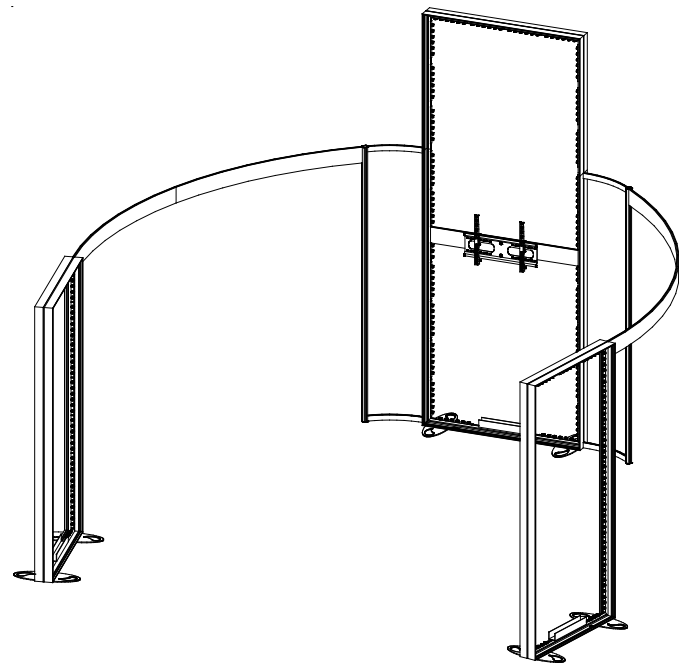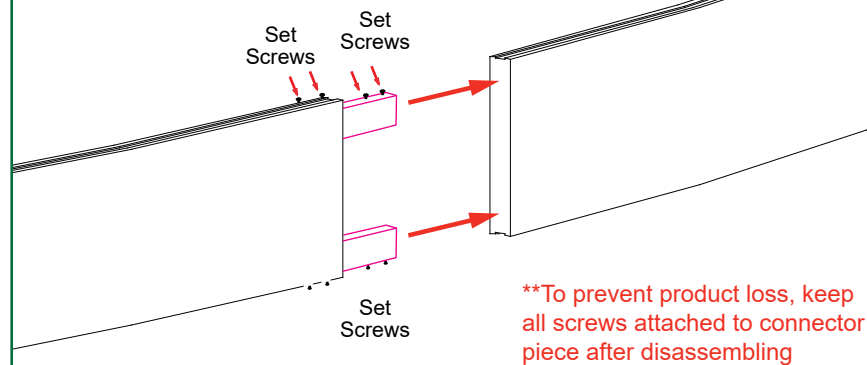


Completed Assembly

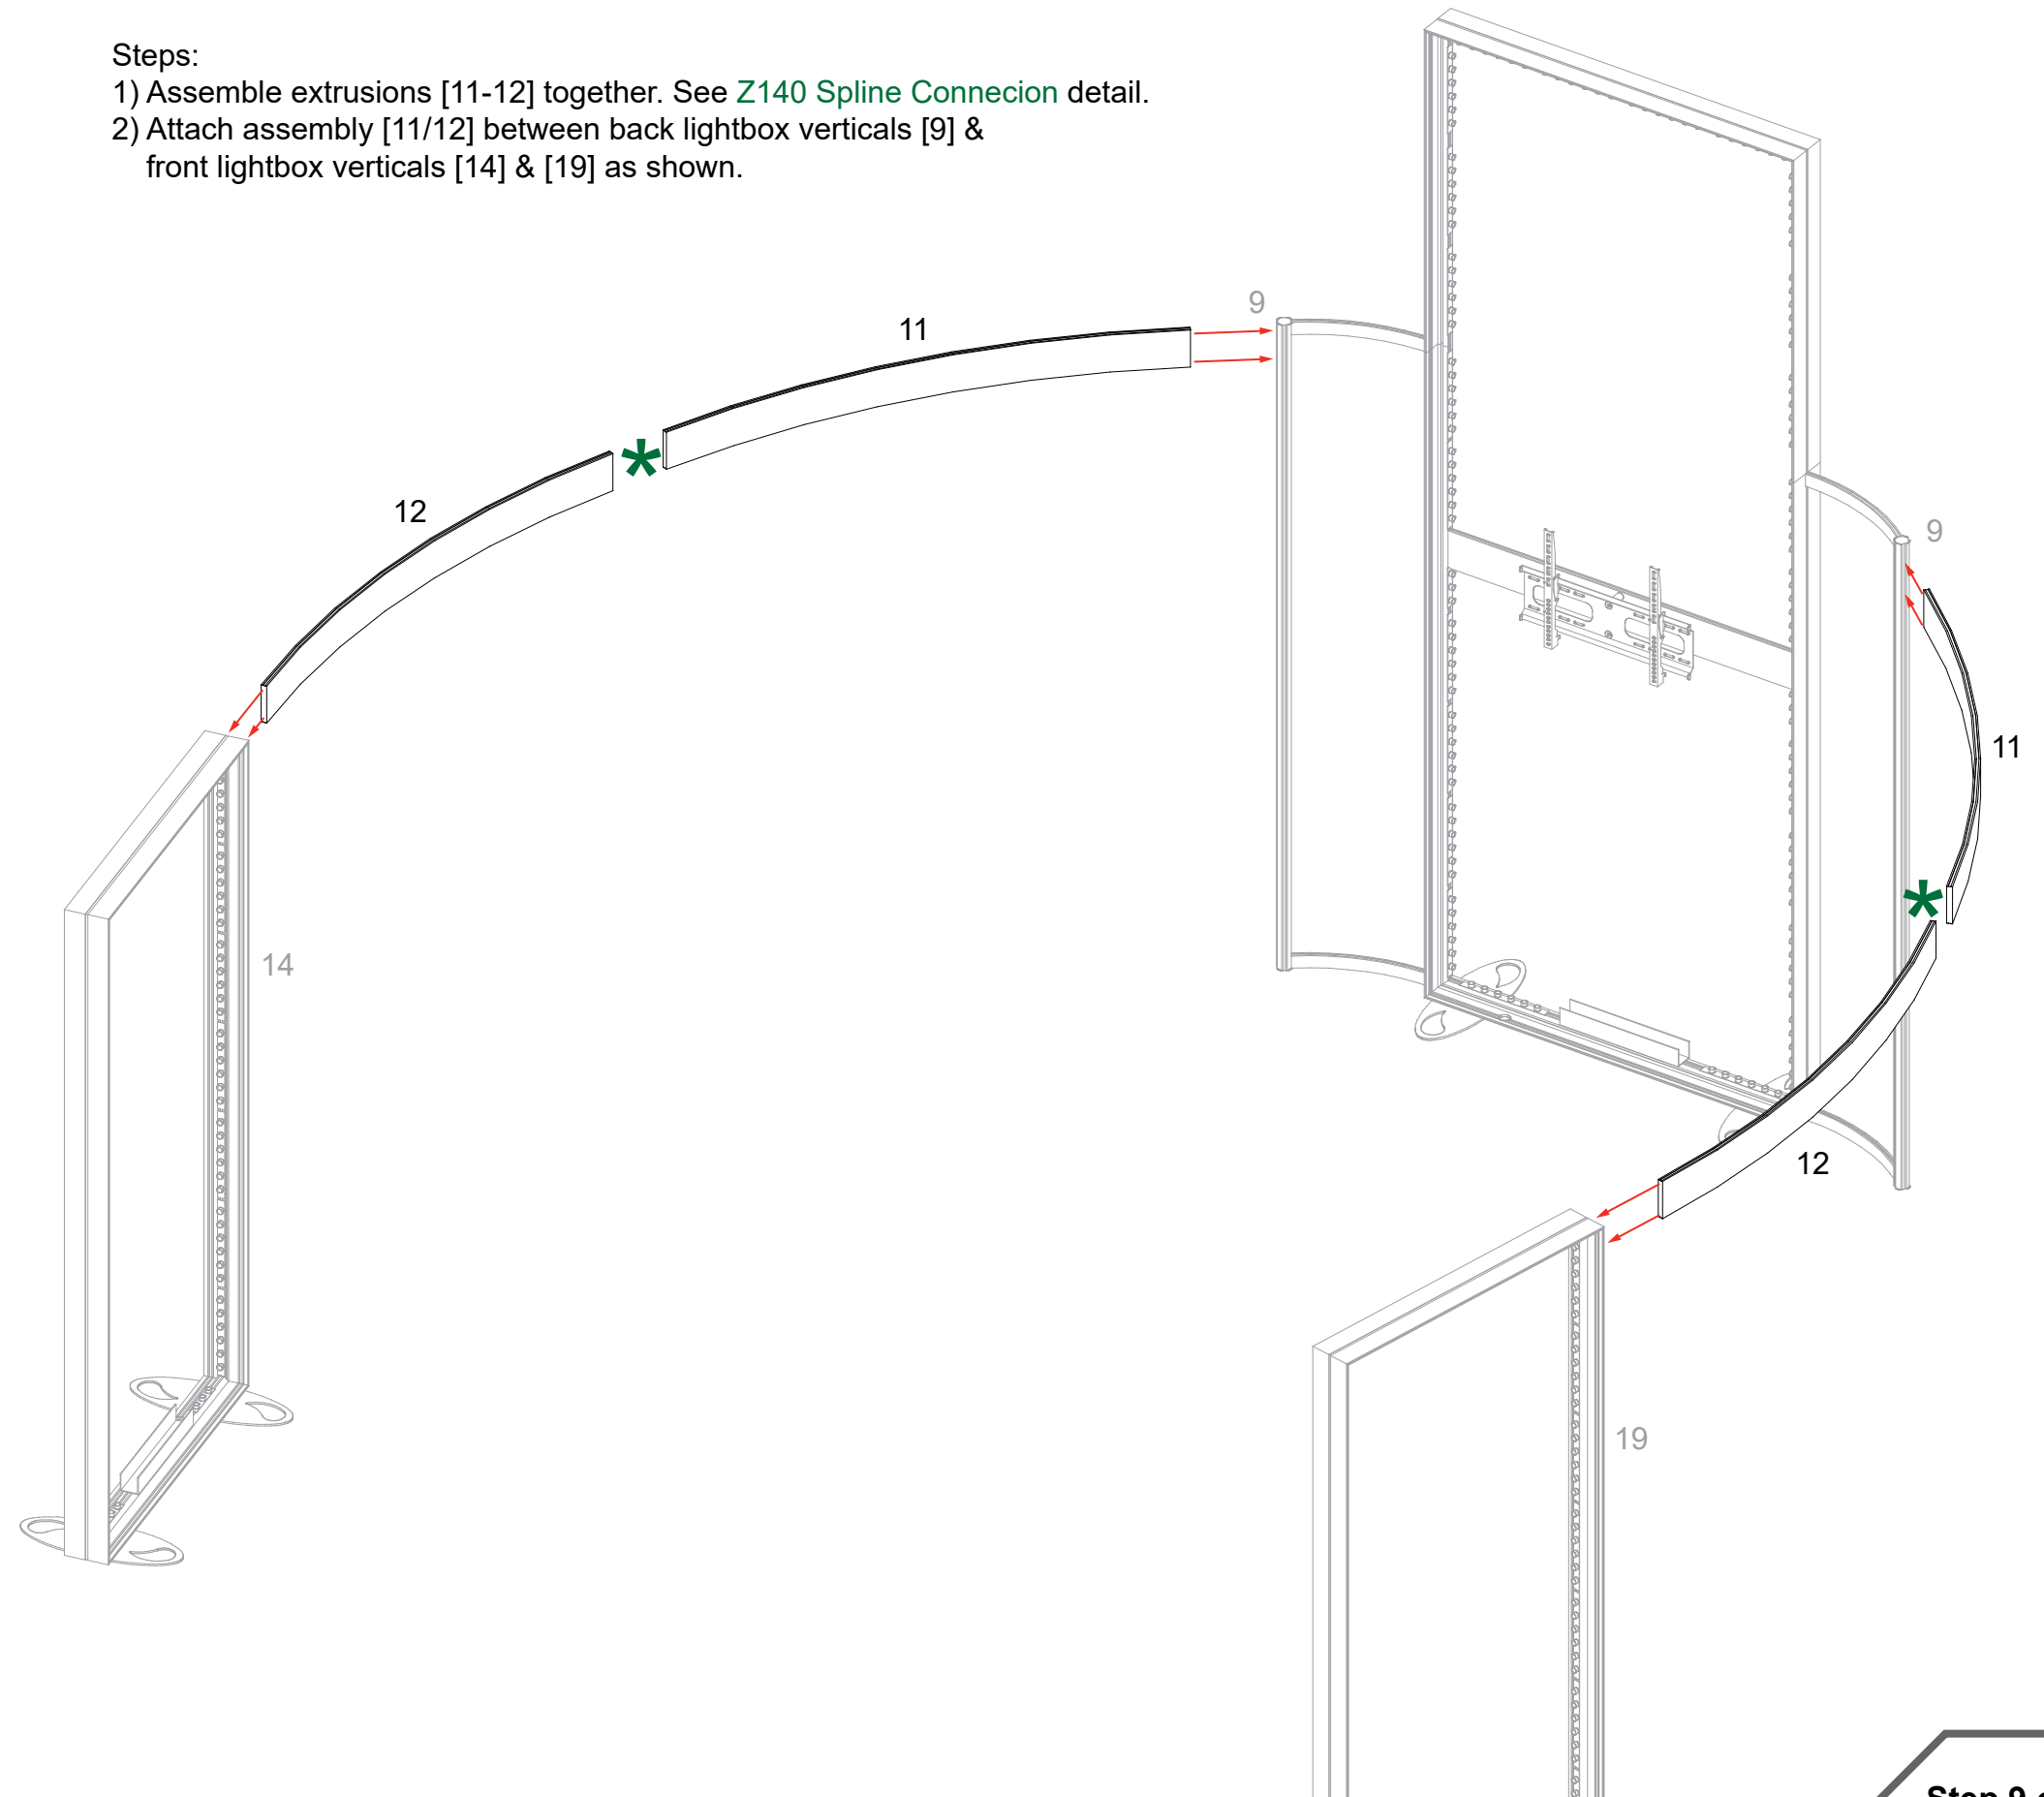

Item	Qty.	Description
1/2	1/1	30.5"h CEI110 Vertical Extrusion
3/4	1/1	46"w CEI110 Horizontal Extrusion



* CEI-110 Corner Connection

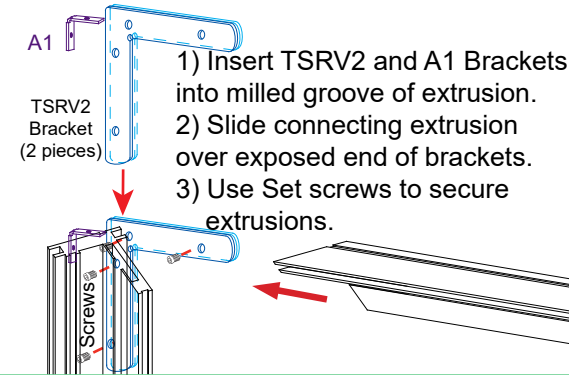


Steps:

- 1) Connect horizontals [3,4] between verticals [1,2], sliding backer panel between verticals.
See [CEI-110 Corner Connection](#) detail.
- 2) Attach left & right cabinets to frame assembly [1/2/3/4] using bolts & wing nuts.
- 3) Install [Counter Top](#) to assembly using standoff barrels.
See [Standoff Barrel Attachment](#) detail.
- 4) Connect power cords to Supernova lights as shown.
- 5) Apply SEG graphic to frame.


Refer to the [SEG Installation general information page](#).

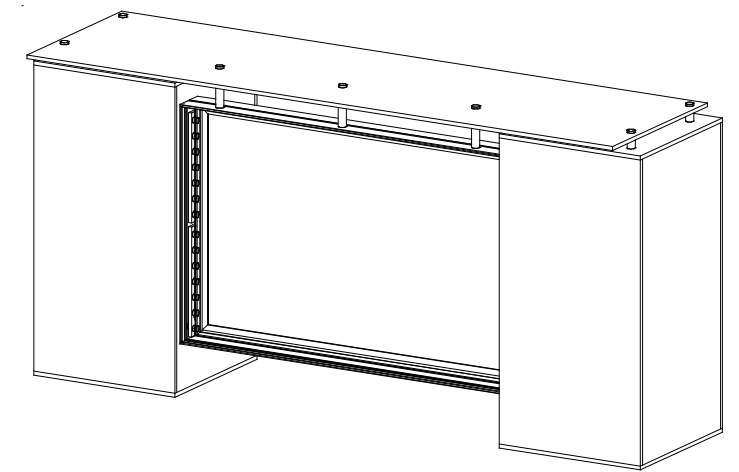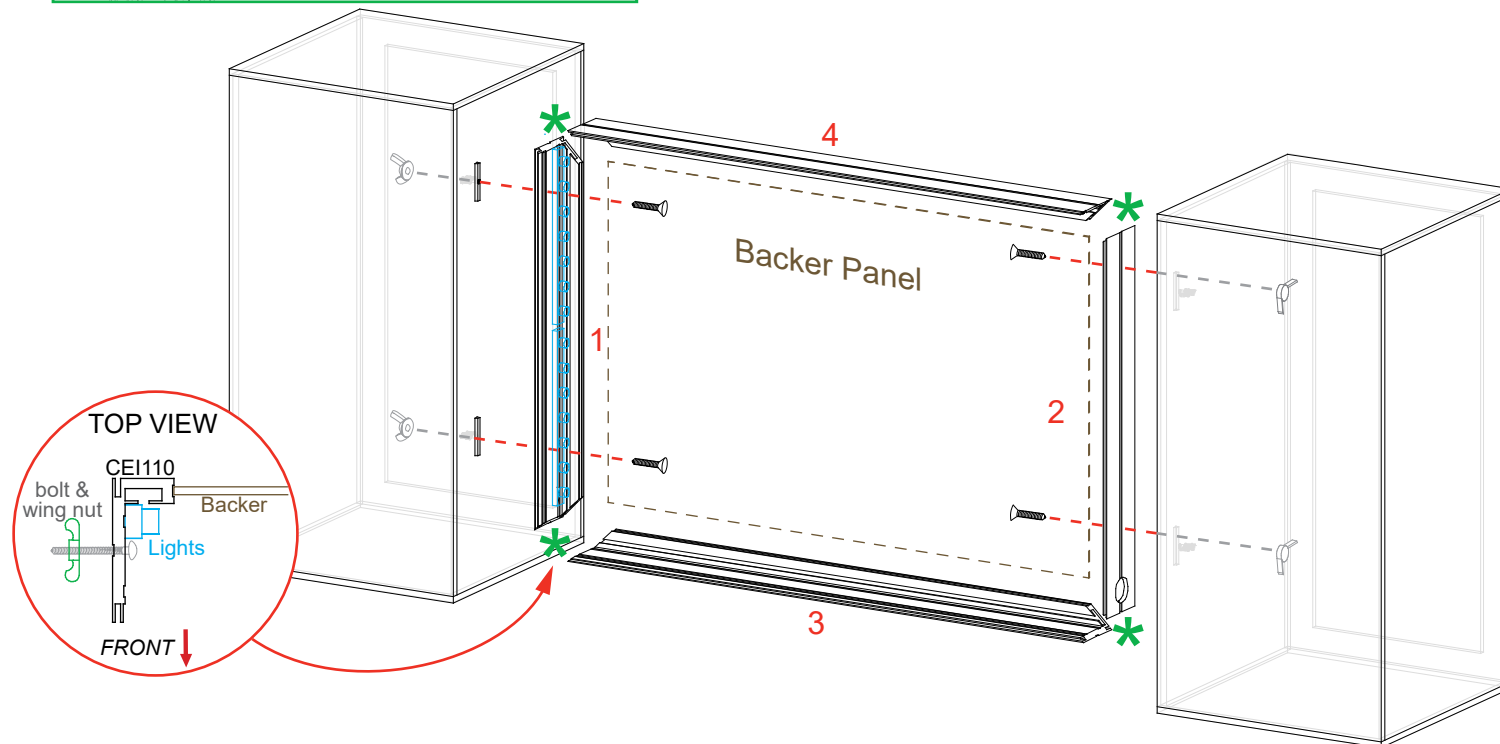


When assembled

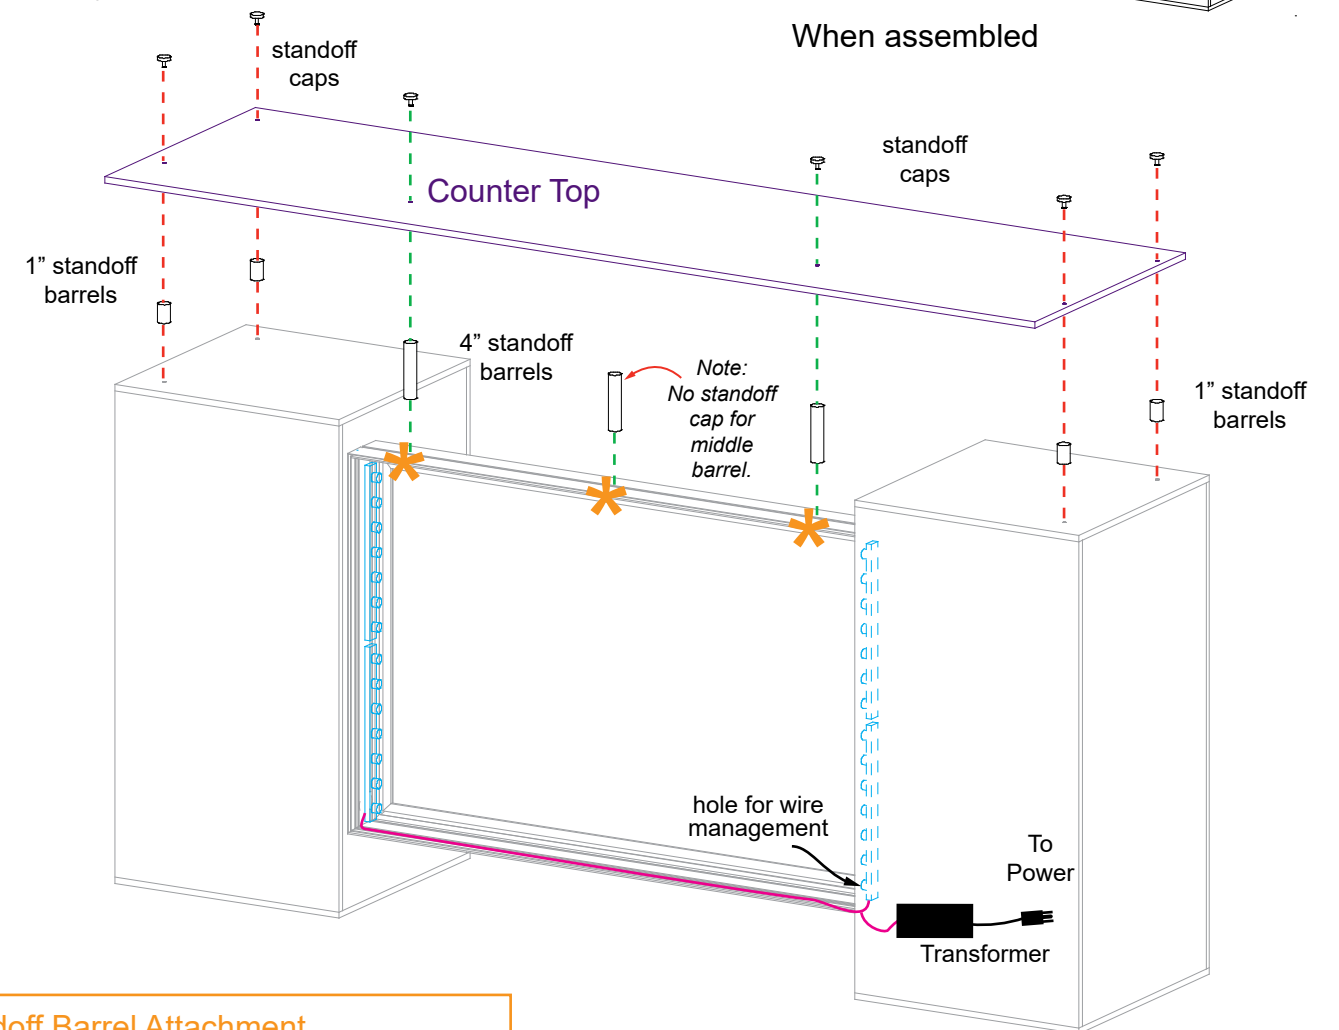


* Standoff Barrel Attachment

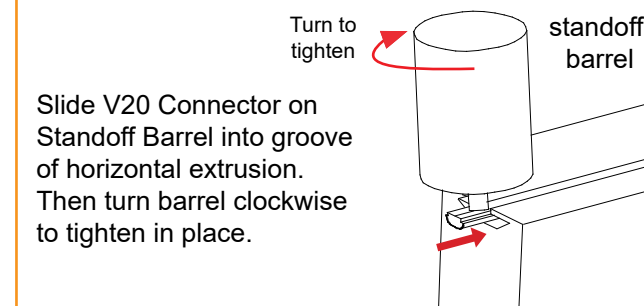

Light to Light Attachment



Light to Transformer Attachment

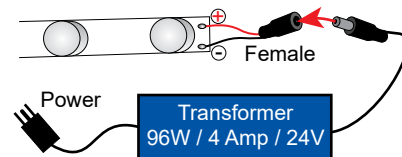

Maximum of 7 lights per chain / 7 lights per Transformer